


VAPolyLoop

Polyphonic Synthesizer

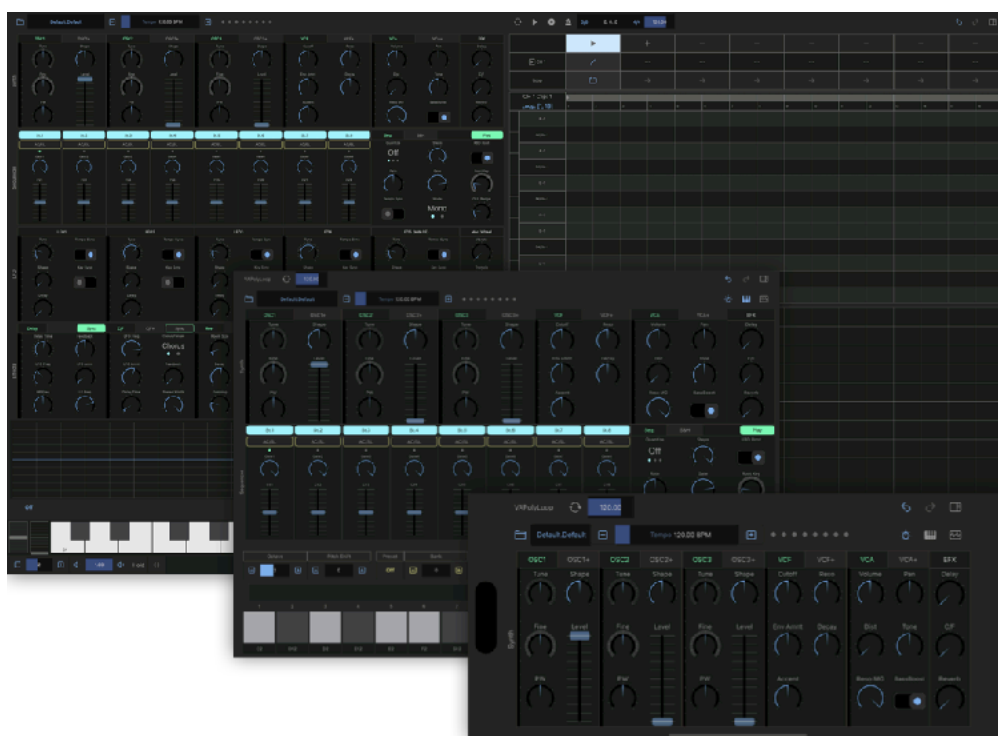

User Guide

Version 1.1

Table of Contents

Introduction	14
Privacy Settings	14
Main Features	14
System Requirements	14
Use as Stand Alone	15
Use as AudioUnit Extension (AUv3)	15
Factory Preset	15
User Preset	15
State Recovery	15
About MIDI Latency	15
Maximum Number of Touches	15
User Interface	16
Tool Bar	18
Controller	20
OSC1	20
OSC2	20
OSC3	20
VCF	20
VCA	20
Effect	21
OSC1+	22
OSC2+	22
OSC3+	22
VCF	22
VCA	23
LFO1	24
LFO2	24
LFO3	24
LFO4	24

LFO5	24
Mod Wheel	25
Step Sequencer	26
Sample & Hold	27
Delay	28
Chorus / Flanger	28
Reverb	28
EQ and Mixer	28
Compressor	29
Master Output	29
Chorus / Flanger	30
Reverb	30
Mixer	30
Compressor	30
Key Pad	32
Keyboard	33
Visualizer	34
Sequencer (Piano Roll)	36
Clip Editor	37
Piano Roll Editor	38
Parameter Automation Editor	39
Synthesizer	40
Block diagram	40
Control Signal & MIDI Flow	40
Oscillators	42
Tune	42
Fine	42
PW (Pulse Width)	42
Shape	42
Level	42

FM Amount	42
FM LFO	42
PWM Amount	42
PWM LFO	43
VCF (Low Pass Filter)	44
Cutoff	44
Resonance	44
Env Amount	44
Env Decay	44
CF Amount	44
EN Amount	44
DE Amount	44
CF LFO	44
EN LFO	44
EN LFO	44
VCA (Amplifier)	45
Volume	45
Pan	45
Dist	45
Tone	45
Reso MG	45
Bass Boost	45
AM Amount	45
Pan Amount	45
AM LFO	45
Pan LFO	45
EFX Send	46
Delay Send	46
C/F Send	46
Reverb Send	46

LFO	47
Tune	47
Shape	47
Delay	47
Tempo Sync	47
Key Sync (Key Re-Trigger)	47
Mod Wheel Target	47
Vibrato	47
Tremolo	47
Cutoff	47
Output Mixer	48
Delay Level	48
C/F Level	48
Reverb Level	48
Master Output	48
Volume	48
Pan	48
Mute	48
Step Sequencer	49
Step Switch	49
AC/SL Switch	49
Gate	49
CV	49
Play	50
Quantize	50
Rate	50
Tempo Sync	50
Steps	50
Gate	50
Mode	50

KBD Root	50
Root Key	50
Octave Range	50
LFO Amount	51
Noise Amount	51
Hold	51
Sync with Transport Control	51
Effects	52
Delay	52
Signal Flow	52
Delay Time	52
Regeneration	52
Modulation	52
Chorus / Flanger	53
Signal Flow	53
Input Signal Level	53
Effect Type	53
Modulation Speed	53
Modulation Width	53
LFO Shape	53
Stereo Width	53
Regeneration	53
Filters	54
Reverb	55
Signal Flow	55
Input Filter	55
Pre Delay	55
Modulation Speed	55
Modulation Width	55
Size and Decay	55

Damping	55
Output Filter	55
Early / Late Mix	56
Equalizer	57
Low Shelving	57
Mid Peak / Notch	57
High Shelving	57
Compressor	58
Overview	58
Threshold and Ratio	58
Attack and Release	59
Side Chain High Pass Filter	61
Makeup Gain	61
Gain Reduction Meter	61
Input Gain	61
Dry / Wet	61
Peak Limiter	62
Key Pad	63
Select Keyboard	63
Select Octave	63
Select Pitch Shift	63
Select Preset Type	63
Select Preset Bank	64
Select Top Panel	64
Select Mid Panel	64
Enable Play Switch for Step Sequencer	64
Ribbon Controller	64
Keyboard	65
Select Keyboard	65
Select Key Range	65

Use Modulation Wheel	65
Use Pitch Wheel	65
Set Velocity	66
Use Key Hold	66
Scroll Keyboard	66
Ribbon Controller	66
Assignable Controllers	67
Sequencer (Piano Roll)	68
Clip Editor	69
Load Clip	69
Play/Stop Clip	69
Edit Piano Roll	69
Add edit button	69
Set Loop Mode	69
Auto Select Editor	69
Piano Roll Editor	70
Select Time Range and Loop Length	70
Select Note Range	70
Add Note	70
Delete Note	70
Scale Menu	70
Edit Menu	70
Chromatic Scale	71
Heptatonic Scale	71
Root Key	71
Set Length	72
Quantize	72
Set Velocity	72
Copy	72
Paste	72

Delete	72
Velocity Editor	73
Parameter Automation Editor	74
Play Sequence	75
1. Set host sync	75
2. Set tempo	75
3. Set loop	75
4. Set swing	75
5. Set metronome switch	76
6. Play	76
Record Sequence	76
1. Set recording mode	76
2. Play sequence	76
3. Record notes	76
4. Record parameters automation	76
5. Stop recording	76
Preset	77
File Menu	77
New...	77
Open...	77
Save	77
Preset Browser	78
Load Factory Preset	78
Load User Preset	78
Delete User Preset	78
Save User Preset	78
Backup/Restore User Presets stored in the device	78
Close File Browser	79
Setting Panel	80
General	80

Full Screen	80
Open User Guide	80
Open Host Setting	80
Version	80
Color	80
Show Piano Roll	80
CVSEQ Play Override	80
Voice Count	80
MIDI Global	81
MIDI Thru	81
MIDI Monitor	81
Musical Typing	81
All Notes Off	81
Map MIDI CC	81
Reset MIDI CC Map	81
MIDI Synth	82
OMNI	82
Input	82
Output	82
MIDI Local	82
MIDI Send	82
MIDI Receive	82
Sustain Pedal	82
Min	82
Max	82
Stand Alone Setting	83
AbletonLink	83
Ableton Link	83
In-app notification	83
Sync Start/Stop	83

Connected Apps	83
Export Audio	84
Save As	84
Location	84
Length (Bars)	84
File Type	84
Sample Rate	84
Bit Depth	84
Export	84
Cancel	84
General	85
Run in Background	85
Resume Headphone Removed	85
Hardware Latency	85
Frame Size	85
MIDI	86
Input	86
Output	86
Bluetooth (BLE) MIDI	87
Central	87
Peripheral	87
Export Audio	88
Prepare for exporting audio	88
1. Stop playback	88
2. Select the first clip to play	88
3. Turn off metronome	88
Adjust export settings	88
1. Save As	88
2. Length	88
3. Location	88

4. File Type	88
5. Sample Rate	88
6. Bit Depth	88
Export Audio File	88
Map MIDI CC	89
MIDI Program Change	89
Use External MIDI Keyboard with Stand Alone	90
Use MIDI Foot Pedal	90
Undo / Redo	91
macOS	92
Menu Bar	92
Application	92
File	92
Edit	93
View	93
Export	93
Window	94
Help	94
Preference	95
Enable Help Section	95
Disable State Recovery	95
Touch Bar (MacBook Pro)	96
1. Play / Stop	96
2. Tempo	96
Use Computer Keyboard as MIDI Keyboard	97
Keyboard Shortcut	98
AUv3 on Apple Garage Band (Mac)	99
Load Plug-in	99
Activate Plug-In	101
Offline Renering	101

Known Limitations	101
AUv3 on Apple Garage Band (iOS)	102
Load Plug-in	102
Change Plug-in Window Size	103
Record Notes	104
Edit Notes	104
Save Project	105
Host Sync	105
System Interruptions (iOS)	106
Specification	107
Release Notes	110
What's new in version 1.0	110
What's new in version 1.1.0	110
What's new in version 1.1.1	110

Introduction

Thank you for purchasing VAPolyLoop. To help you get the most out of this product, please read this manual carefully.


VAPolyLoop features lowpass filter and amplifier which are optimized for playing by step sequencer. VAPolyLoop contains polyphonic synthesizer and analog style step sequencer. The synthesizer consists of three oscillators, resonant low pass filter, amplifier, distortion effect and five LFO.

VAPolyLoop operates as a stand alone or as an AudioUnit Extension (AUv3) for iPhone, iPad and Mac. Stand Alone supports Ableton Link, MIDI and audio file export.

Built-in Effects include delay, chorus, flanger, reverb, eq and compressor. Project files can be saved in iCloud Drive, so that the project can be accessed from iPhone, iPad or Mac.

Privacy Settings

VAPolyLoop uses local area network to connect Ableton Link enable devices and it uses bluetooth to connect with bluetooth MIDI keyboard and controllers. When dialogue appears to confirm use of the local network or the bluetooth, tap OK to give a permission to use them. These settings can be edited in Privacy section of the Setting App.

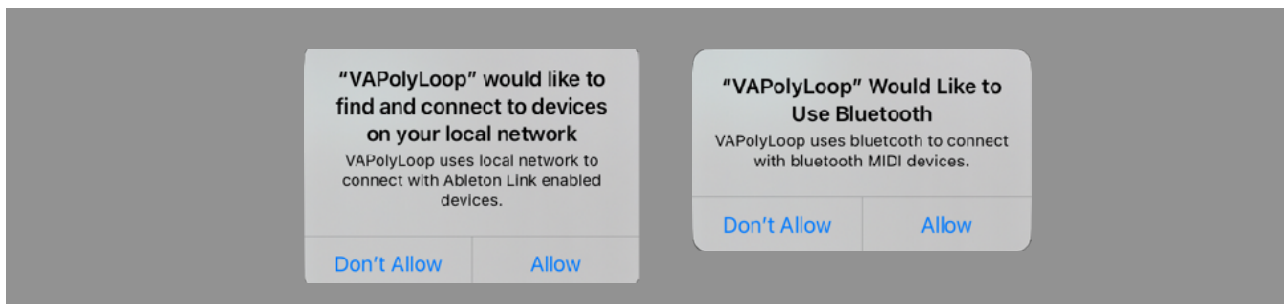

Main Features

Polyphonic Synthesizer.
Lowpass filter modeled on diode ladder filter.
Distortion Effects
Analog style step sequencer.

Maximum 8 voice polyphony. it depends on performance of the device it is running.
Built-in effects and piano roll sequencer.
Audio Export. Linear PCM format (AIFF, WAV and CAF) and compressed format (AAC)
Support Audio Unit Extension (AUv3).
Support MIDI 2.0. Support Foot Pedal and Per Note Control.
Support Ableton Link, Bluetooth MIDI, MIDI In / Out.
Works on iPhone, iPad and Mac. Support iCloud Drive to share project files between the platforms.

System Requirements

iOS 17.0 or later
macOS 14.0 or later
Devices with Apple Silicon are recommended. A13 Fusion or above is highly recommended. If sound is distorted when using a device with less CPU power, reduce number of voices.
AudioUnit Extension (AUv3) requires host application which support AudioUnit Extension.

AudioUnit Extension is supported by Apple Logic and Apple Garage Band on iOS and macOS. For any other DAW, it depends on the application and some of them don't support AudioUnit Extension.

Use as Stand Alone

Stand Alone mode features Audio Export, Ableton Link, MIDI input / output and bluetooth MIDI. Sequencer can be synced with Ableton Link enabled devices and softwares.

Use as AudioUnit Extension (AUv3)

VAPolyLoop supports AudioUnit Extensions. VAPolyLoop works with host applications which support AUv3 plug-ins. By enabling host sync mode, VAPolyLoop can be synced with tempo and transport state of the host application. VAPolyLoop can send and receive MIDI message to/from the host, if the host supports midi in/out of AUv3.

Factory Preset

Factory presets contains only values of parameters of the synth and the effects. It doesn't contain any sequence data. When loading the preset, it will change the value of the parameters but sequence data remains the same.

User Preset

User Preset contains values of the synth parameters and the sequence data. When loading a user preset, value of the synth parameters and the sequence data are both changed.

User Presets can be saved in iCloud Drive or in AUv3 plug-in. User Presets in iCloud Drive can be accessed from iPhone, iPad or Mac. AUv3 Plug-In Preset is stored on the device and saved preset can be accessed from any host application which support AUv3 User Preset.

State Recovery

When VAPolyLoop is used as a stand alone, it stores state of the app when the app is terminated. Stored data is recovered when it is launched at the next time. macOS version can disable this feature. The state is stored locally on the device.

About MIDI Latency

Sending or receiving MIDI notes and messages to Software Applications introduces a latency. If you have a problem of latency and DAW or host application has channel delay, adjust the delay time to compensate the latency.

Maximum Number of Touches


Maximum number of touches are varied on devices. Number of notes simultaneously playing on built-in-keyboard are limited to the maximum number of touches.

- * Apple, Mac and GarageBand are trademarks of Apple Inc., registered in the U.S. and other countries.
- * Ableton and Link are trademarks of Ableton AG.
- * All products, companies and standard names are trademarks or registered trademarks of their respective holders.


User Interface





macOS

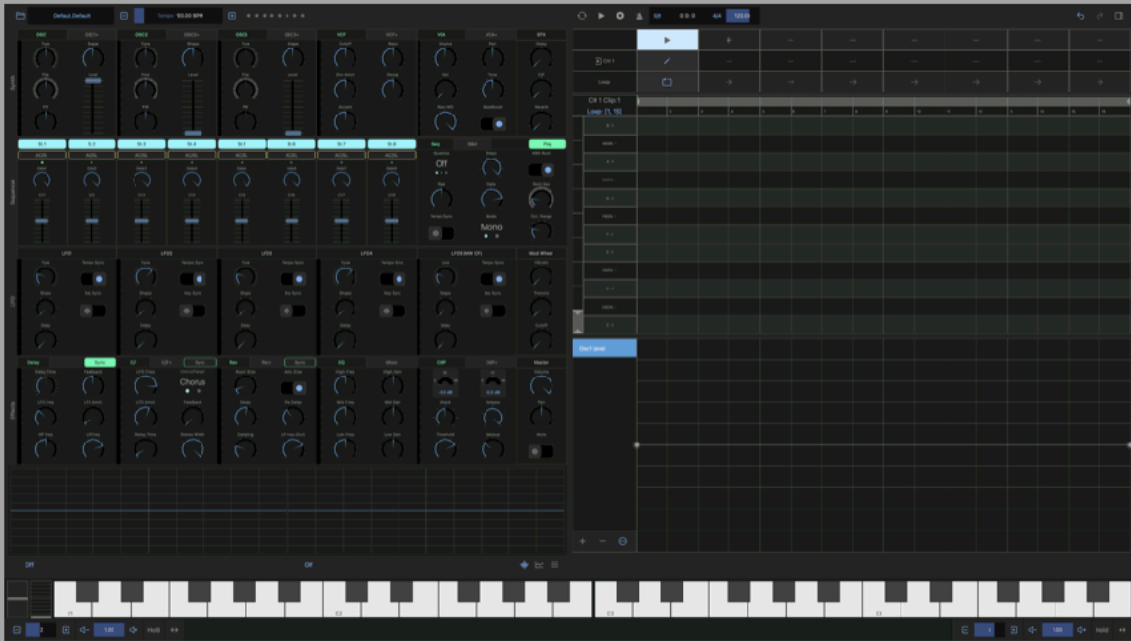

Tool Bar

 

 Show Piano Roll Sequencer turned on (Setting Panel)

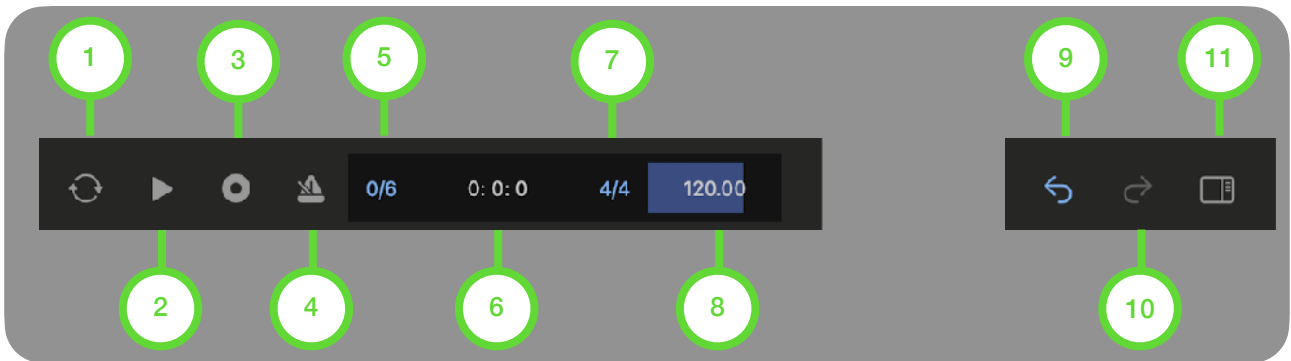

1. Host Sync
Tap this button to enable / disable host sync. When host sync is enabled, tempo and transport is controlled by the host application.

2. Play/Stop
Tap this button to play / stop the sequencer.

3. Record
Tap this button to enable / disable recording mode.

4. Metronome
Tap this button to enable / disable metronome.

5. Swing
Tap this button to show Swing menu.



6. Beat Counter
Indicates current beat time as a format of bar, beat, and sixteenth.


7. Time Signature
Tap this button to show Time Signature menu.



8. Tempo
Adjust BPM (Beat Per Minutes).

9. Undo
10. Redo
Tap the button to undo / redo.

11. Setting Panel
Tap this button to open setting panel.

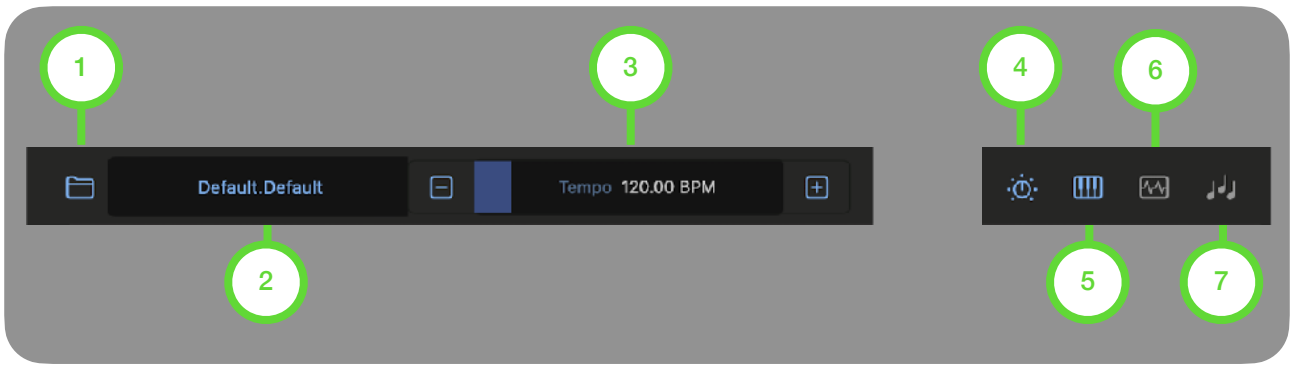

1. File

Tap this button to show file menu.



2. Preset


Indicates name of the selected preset. Tap this button to show preset browser.

3. Parameter

Indicates name and value of the selected parameter. Use plus button, minus button and slider to adjust the value. Double tap to enable menu and tap on the name to show parameter list.


4. Synth

Tap this button to show synth menu.

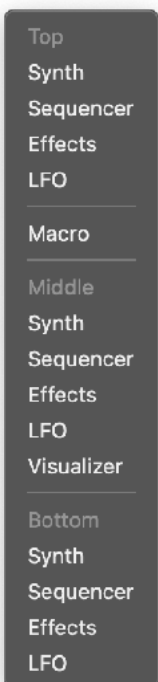


5. Keyboard

Tap this button to show keyboard. Hold this button (right click on macOS) to show keyboard menu.

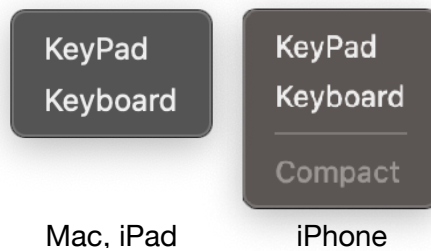


6. Visualizer

Tap this button to show audio visualization tool. Hold this button (right click on macOS) to show visualizer menu.

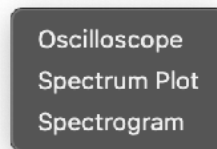

7. Sequencer

Tap this button to show sequencer. Hold this button (right click on macOS) to show sequencer menu.

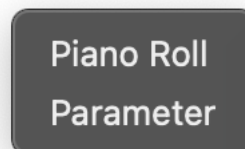

* Content of the menu is dependent on the platform.

Controller



OSC1

1. Tune
Adjust tuning in semi tones.
2. Fine
Adjust fine tuning in cents.
3. PW
Adjust pulse width for the pulse wave.
4. Shape
Adjust shape of the waveform.
5. Level
Adjust level of the oscillator output.

OSC2

7. Tune
Adjust tuning in semi tones.
8. Fine
Adjust fine tuning in cents.
9. PW
Adjust pulse width for the pulse wave.
10. Shape
Adjust shape of the waveform.
11. Level
Adjust level of the oscillator output.

OSC3

13. Tune
Adjust tuning in semi tones.
14. Fine
Adjust fine tuning in cents.

15. PW
Adjust pulse width for the pulse wave.
16. Shape
Adjust shape of the waveform.
17. Level
Adjust level of the oscillator output.

VCF

19. Cutoff
Adjust cutoff frequency of the filter.
20. Env Amount
Adjust amount of envelope to modulate cutoff frequency.
21. Accent
Adjust amount of accent.
22. Resonance
Adjust amount of resonance.
23. Decay
Adjust amount of envelope decay.

VCA

25. Volume
Adjust volume of VCA output.
26. Dist
Adjust amount of distortion.
27. Reso MG
Adjust amount of resonance makeup gain.
28. Pan
Adjust position of pan.

29. Tone

Adjust amount of tone for distortion effects.

30. Bass Boost

Enable / Disable bass boost.

Effect

31. Delay

Adjust level of delay send.

32. C/F

Adjust level of Chorus/Flanger send.

33. Reverb

Adjust level of Reverb send.



OSC1+

1. FM Amount
Adjust amount of frequency (pitch) modulation.
2. PWM Amount
Adjust amount of pulse width modulation.
4. FM LFO
Adjust amount of LFO1/LFO2 for frequency modulation. Turn the dial counter clockwise to increase amount of LFO1. Turn the dial clockwise to increase amount of LFO2.
5. PWM LFO
Adjust amount of LFO1/LFO2 for pulse width modulation. Turn the dial counter clockwise to increase amount of LFO1. Turn the dial clockwise to increase amount of LFO2.

OSC2+

7. FM Amount
Adjust amount of frequency (pitch) modulation.
8. PWM Amount
Adjust amount of pulse width modulation.
10. FM LFO
Adjust amount of LFO1/LFO2 for frequency modulation. Turn the dial counter clockwise to increase amount of LFO1. Turn the dial clockwise to increase amount of LFO2.
11. PWM LFO
Adjust amount of LFO1/LFO2 for pulse width modulation. Turn the dial counter clockwise to increase amount of LFO1. Turn the dial clockwise to increase amount of LFO2.

OSC3+

13. FM Amount

Adjust amount of frequency (pitch) modulation.

14. PWM Amount
Adjust amount of pulse width modulation.

16. FM LFO
Adjust amount of LFO1/LFO2 for frequency modulation. Turn the dial counter clockwise to increase amount of LFO1. Turn the dial clockwise to increase amount of LFO2.

17. PWM LFO
Adjust amount of LFO1/LFO2 for pulse width modulation. Turn the dial counter clockwise to increase amount of LFO1. Turn the dial clockwise to increase amount of LFO2.

VCF

19. CF Amount
Adjust amount of cutoff modulation.

20. EN Amount
Adjust amount of env amount modulation.

21. DE Amount
Adjust amount of env decay modulation.

22. CF LFO
Adjust amount of LFO3/LFO4 for cutoff modulation. Turn the dial counter clockwise to increase amount of LFO3. Turn the dial clockwise to increase amount of LFO4.

23. EN LFO
Adjust amount of LFO3/LFO4 for env amount modulation. Turn the dial counter clockwise to increase amount of LFO3. Turn the dial clockwise to increase amount of LFO4.

24. DE LFO
Adjust amount of LFO3/LFO4 for env decay modulation. Turn the dial counter clockwise to increase amount of LFO3. Turn the dial clockwise to increase amount of LFO4.

VCA

25. AM Amount

Adjust amount of amplitude modulation.

26. Pan Amount

Adjust amount of pan modulation.

27. AM LFO

Adjust amount of LFO3/LFO4 for Amplitude Modulation. Turn the dial counter clockwise to increase amount of LFO3. Turn the dial clockwise to increase amount of LFO4.

28. Pan LFO

Adjust amount of LFO3/LFO4 for Pan Modulation. Turn the dial counter clockwise to increase amount of LFO3. Turn the dial clockwise to increase amount of LFO4. When dial is in center position, pan can be adjusted manually.



LFO1

29. Tune

Adjust pitch of the low frequency oscillator.

30. Shape

Select shape of the low frequency oscillator waveform.

31. Delay

Adjust delay time to start the low frequency oscillator.

32. Tempo Sync

Turn it on to enable Tempo Sync.

33. Key Sync

Turn it on to enable Key Sync.

LFO2

34. Tune

Adjust pitch of the low frequency oscillator.

35. Shape

Select shape of the low frequency oscillator waveform.

36. Delay

Adjust delay time to start the low frequency oscillator.

37. Tempo Sync

Turn it on to enable Tempo Sync.

38. Key Sync

Turn it on to enable Key Sync.

LFO3

39. Tune

Adjust pitch of the low frequency oscillator.

40. Shape

Select shape of the low frequency oscillator waveform.

41. Delay

Adjust delay time to start the low frequency oscillator.

42. Tempo Sync

Turn it on to enable Tempo Sync.

43. Key Sync

Turn it on to enable Key Sync.

LFO4

44. Tune

Adjust pitch of the low frequency oscillator.

45. Shape

Select shape of the low frequency oscillator waveform.

46. Delay

Adjust delay time to start the low frequency oscillator.

47. Tempo Sync

Turn it on to enable Tempo Sync.

48. Key Sync

Turn it on to enable Key Sync.

LFO5

49. Tune

Adjust pitch of the low frequency oscillator.

50. Shape

Select shape of the low frequency oscillator waveform.

51. Delay

Adjust delay time to start the low frequency oscillator.

52. Tempo Sync

Turn it on to enable Tempo Sync.

53. Key Sync

Turn it on to enable Key Sync.

Mod Wheel

54. Vibrato

Adjust amount of mod wheel for vibrato.

55. Tremolo

Adjust amount of mod wheel for tremolo.

56. Cutoff

Adjust amount of mod wheel to modulate cutoff by LFO5.



Step Sequencer

1. Step1 Switch
Enable / Disable trigger to the step.
2. AC / SL Switch
Enable / Disable accent (trigger on) or slide (trigger off).
3. Gate1
Adjust amount of Gate signal (Velocity) for the step.
4. CV1
Adjust Amount of CV signal (Pitch) for the step.
5. Step2 Switch
Enable / Disable trigger to the step.
6. AC / SL Switch
Enable / Disable accent (trigger on) or slide (trigger off).
7. Gate2
Adjust amount of Gate signal (Velocity) for the step.
8. CV2
Adjust Amount of CV signal (Pitch) for the step.
9. Step3 Switch
Enable / Disable trigger to the step.
10. AC / SL Switch
Enable / Disable accent (trigger on) or slide (trigger off).
11. Gate3
Adjust amount of Gate signal (Velocity) for the step.
12. CV3
Adjust Amount of CV signal (Pitch) for the step.
13. Step4 Switch
Enable / Disable trigger to the step.
14. AC / SL Switch
Enable / Disable accent (trigger on) or slide (trigger off).
15. Gate4
Adjust amount of Gate signal (Velocity) for the step.
16. CV4
Adjust Amount of CV signal (Pitch) for the step.
17. Step5 Switch
Turn it on to enable the step
18. AC / SL Switch
Enable / Disable accent (trigger on) or slide (trigger off).
19. Gate5
Enable / Disable trigger to the step.
20. CV5
Adjust Amount of CV signal (Pitch) for the step.
21. Step6 Switch
Enable / Disable trigger to the step.
22. AC / SL Switch
Enable / Disable accent (trigger on) or slide (trigger off).
23. Gate6
Adjust amount of Gate signal (Velocity) for the step.
24. CV6
Adjust Amount of CV signal (Pitch) for the step.
25. Step7 Switch
Enable / Disable trigger to the step.

26. AC / SL Switch
Enable / Disable accent (trigger on) or slide (trigger off).

27. Gate7
Adjust amount of Gate signal (Velocity) for the step.

28. CV7
Adjust Amount of CV signal (Pitch) for the step.

29. Step8 Switch
Enable / Disable trigger to the step.

30. AC / SL Switch
Enable / Disable accent (trigger on) or slide (trigger off).

31. Gate8
Adjust amount of Gate signal (Velocity) for the step.

32. CV8
Adjust Amount of CV signal (Pitch) for the step.

33. Quantize
Select a quantize option, Off, Minor or Major.

34. Rate

Adjust frequency of clock to drive the sequencer.

35. Tempo Sync
Turn it on to enable Tempo Sync.

36. Steps
Select number of steps

37. Gate
Adjust pulse width of gate signal.

38. Mode
Select operation mode, mono, chord.

39. Stop/Play
Turn it on to enable sequencer for playing.
Tap any key on keyboard to start the sequencer.

40. KBD Root Key Switch
Enable / Disable pressed key on keyboard to set root key.

41. Root Key
Select a Root Key when KBD Root switch is turned off.

42. Octave Range
Select an Octave Range



Sample & Hold

36. LFO Amount
Adjust amount of LFO1/LFO2 signal to be sampled.

37. Noise Amount

Adjust amount of pink noise/white noise signal to be sampled.

38. Hold
Select number of steps to hold the sampled CV.



Delay

1. Delay Time
Adjust delay time.
2. LFO Frequency
Adjust frequency of LFO (low frequency oscillator).
3. HP Frequency
Adjust frequency of high pass filter for the delayed sound.
4. Feedback
Adjust amount of the feedback.
5. LFO intensity
Adjust amount of LFO delay time modulation.
6. LP Frequency
Adjust frequency of low pass filter for the delayed sound.

Sync Switch Tab
Turn it on to enable tempo sync.

Chorus / Flanger

7. LFO Frequency
Adjust frequency of the LFO.
8. LFO intensity
Adjust amount of LFO for delay time modulation.
9. Delay Time
Adjust delay time.
10. Chorus/Flanger
Select Chorus or Flanger.
11. Feedback
Adjust amount of the feedback.
12. Stereo Width
Adjust stereo width.

Sync Switch Tab
Turn it on to enable tempo sync.

Reverb

13. Room Size
Adjust room size of the late reflection.
14. Decay
Adjust decay of the late reflection.
15. Damping
Adjust absorption of high frequency in the late reflection.
16. Auto Size
Turn it on to enable auto size mode.
17. Pre Delay
Adjust pre delay time of the early reflection.
18. Output LP Frequency
Adjust frequency of output low pass filter.

Sync Switch Tab
Turn it on to enable tempo sync.

EQ and Mixer

19. High Frequency
Adjust frequency of high shelving filter.
20. Mid Frequency
Adjust frequency of mid peak / notch filter.
21. Low Frequency
Adjust frequency of low shelving filter.
22. High Gain
Adjust gain of the high shelving filter.
23. Mid Gain
Adjust gain of the mid peak / notch filter.
24. Low Gain
Adjust gain of the low shelving filter.

Compressor

25. Reduction Gain Meter

Indicate amount of gain reduction.

26. Attack

Adjust time to start compression.

27. Threshold

Adjust level of threshold to begin compression.

29. Release

Adjust time to end compression.

30. Makeup

Adjust amount of makeup gain.

Master Output

31. Volume

Adjust amount of master volume.

32. Pan

Adjust amount of master pan.

33. Mute

Turn it on to mute output signal.



Chorus / Flanger

7. Sine/Triangle

Adjust shape of the LFO waveform, Sine or Triangle.

8. HP Frequency

Adjust frequency of high pass filter for the effected sound.

9. LP Frequency

Adjust frequency of high pass filter for the effected sound.

Reverb

13. HP Frequency

Adjust frequency of input high pass filter.

14. LFO Frequency

Adjust frequency of LFO (Low Frequency Oscillator).

15. Early/Late

Adjust amount of the early reflection and amount of the late reflection.

16. LP Frequency

Adjust frequency of input low pass filter.

17. LFO intensity

Adjust amount of LFO for delay time modulation.

18. EFX Input

Adjust amount of input signal from Delay and Chorus/Flanger.

Mixer

19. Delay Level

Adjust level of Delay.

20. C/F Level

Adjust level of Chorus / Flanger.

21. Reverb Level

Adjust level of Reverb.

Compressor

26. Input Gain

Adjust amount of input gain.

27. HP Frequency

Adjust frequency of high pass filter at the input of the compressor.

29. Ratio

Adjust compression ratio.

30. Dry/Wet

Adjust amount of the dry and wet signal.



A. Delay Sync Switch Tab

Turn it on to enable tempo sync.

B. C/F Sync Switch Tab

Turn it on to enable tempo sync.

C. Reverb Sync Switch Tab

Turn it on to enable tempo sync.

1. Delay: Delay Time

Adjust delay time in note length.

7. C/F: LFO Frequency

Adjust frequency in note length.


13. Reverb: Room Size

Adjust room size in note length.

14. Reverb: LFO Frequency

Adjust frequency in note length.

Key Pad

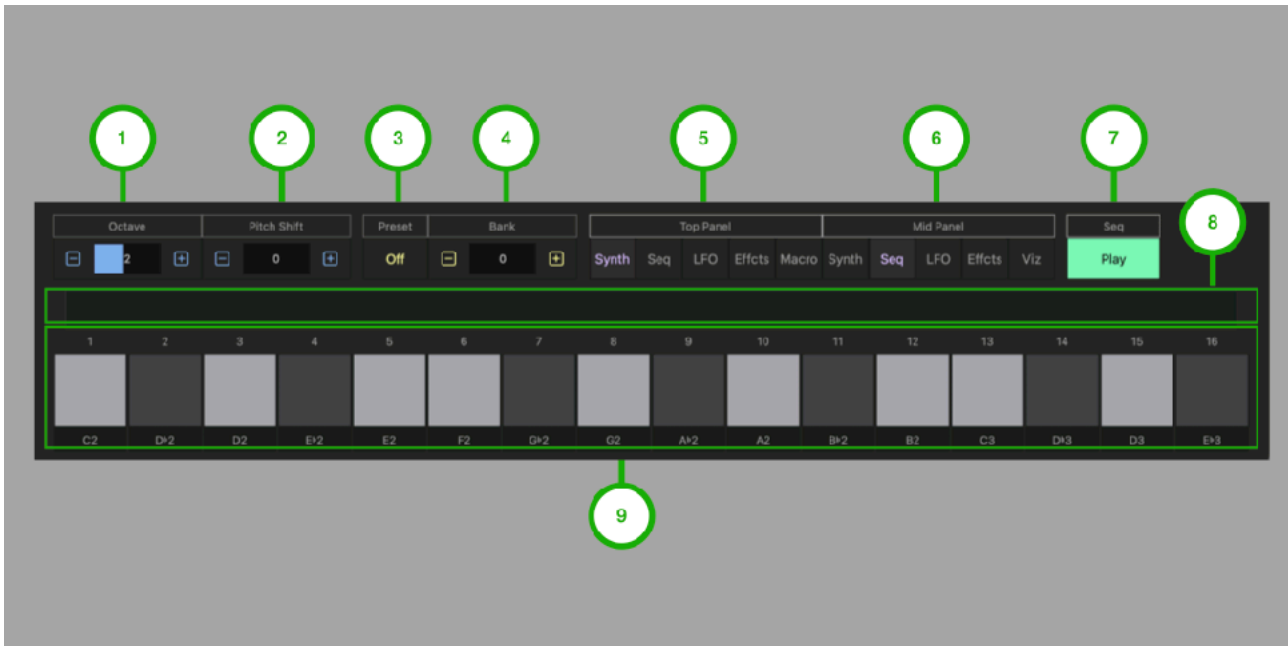

1. Octave Range

Use plus / minus buttons to adjust octave range of the key pad. Indicator shows octave of the lowest note of the key pad¹. When “Midi Monitor” is enabled in Setting Panel, the range is automatically set based on the incoming midi note.

2. Pitch Shift

Use plus / minus buttons to adjust note range of the key pad.

3. Preset

Select preset type from the menu. Options are Off, Factory and User. Tap on a key pad to select a preset when factory or user is selected.

4. Bank

Select a preset bank. Preset number is pad number + bank * 16.

5. Top Panel

Select a module for the top panel.

6. Mid Panel

Select a module for the mid panel.

7. Sequencer Play

Turn it on to enable sequencer for playing. Tap any key on key pad to start the sequencer.

8. Ribbon Controller


Drag on the Ribbon to adjust Pitch in linear scale.

9. Key Pad

Tap on the pad to play note or select preset when preset type is factory or user.

¹ Middle C (midi note 60) is C3.

Keyboard

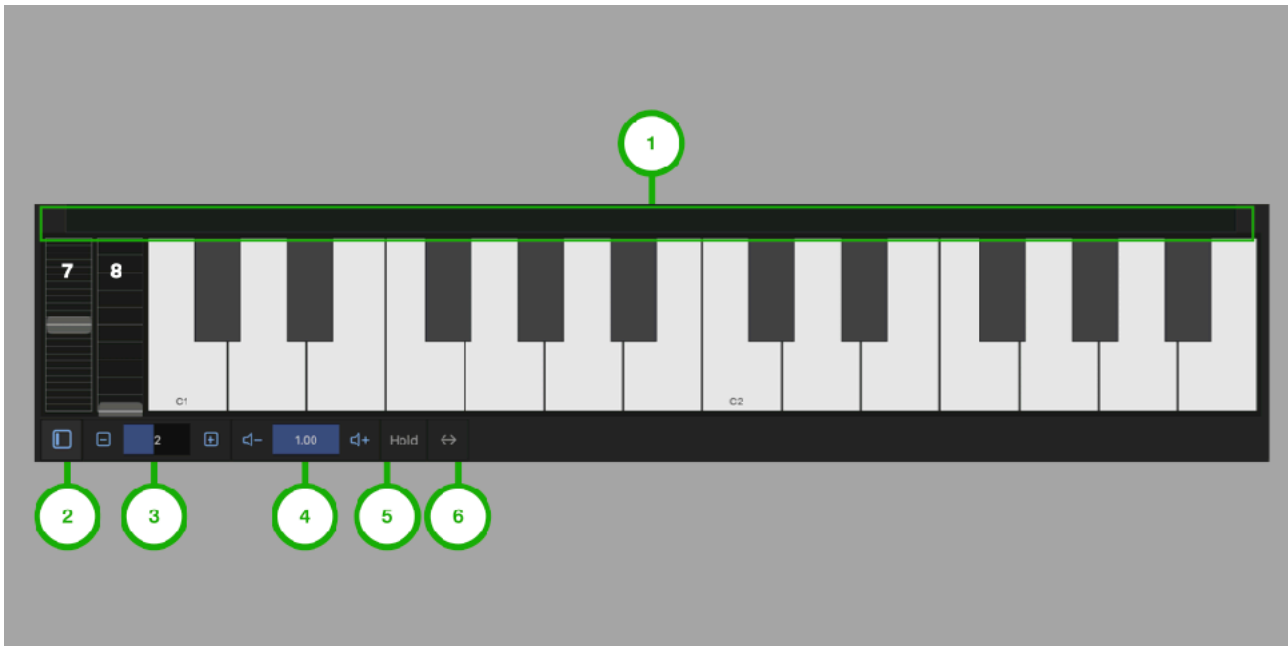

1. Ribbon Controller

Drag on the Ribbon to adjust Pitch in linear scale.

2. Wheel View Switch

Tap this button to show/hide pitch wheel and mod wheel.

3. Octave Range

Use plus / minus buttons to adjust octave range of the keyboard. Indicator shows lowest note of the keyboard². When “Midi Monitor” is enabled in Setting Panel, the range is automatically set based on the incoming midi note.

4. Velocity

Use plus/minus button to adjust keyboard velocity.

5. Hold

Tap this button to enable /disable key holding.

6. Scroll

Tap this button to enable/disable keyboard scrolling.

7. Pitch Wheel


Adjust pitch of the oscillators in exponential scale. Range is plus / minus one octave.

8. Mod Wheel

Adjust amount of the modulation. Targets of the modulation can be adjusted in LFO Panel.

² Middle C (midi note 60) is C3.

Visualizer

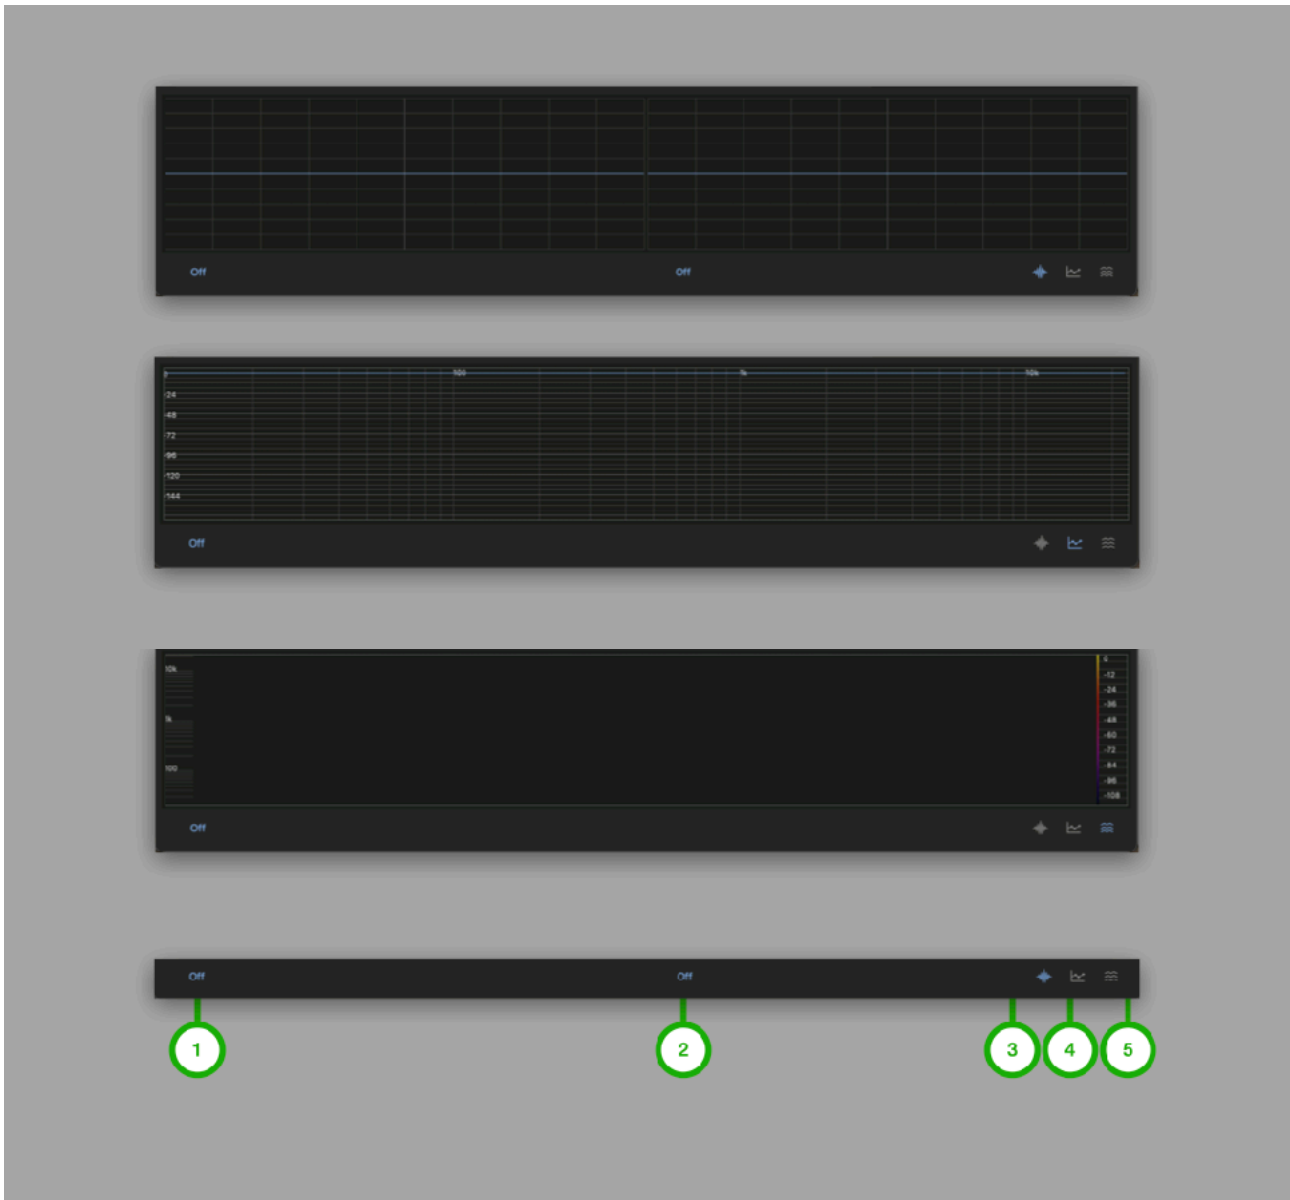

1. Audio Source Selector
Tap this button to show a list. Select audio source for the visualization.
2. Audio Source Selector
Tap this button to show a list. Select audio source for the visualization.

3. Oscilloscope Button
Tap this button to select Oscilloscope.
4. Spectrum Plot Button
Tap this button to select Spectrum Plot.
5. Spectrogram Button
Tap this button to select Spectrogram.

Tap and hold (right click on macOS) to show context menu.





Select a tool for audio visualization. Options are Oscilloscope, Spectrum Plot and Spectrogram.




Select a source of audio for the visualization.

Sequencer (Piano Roll)

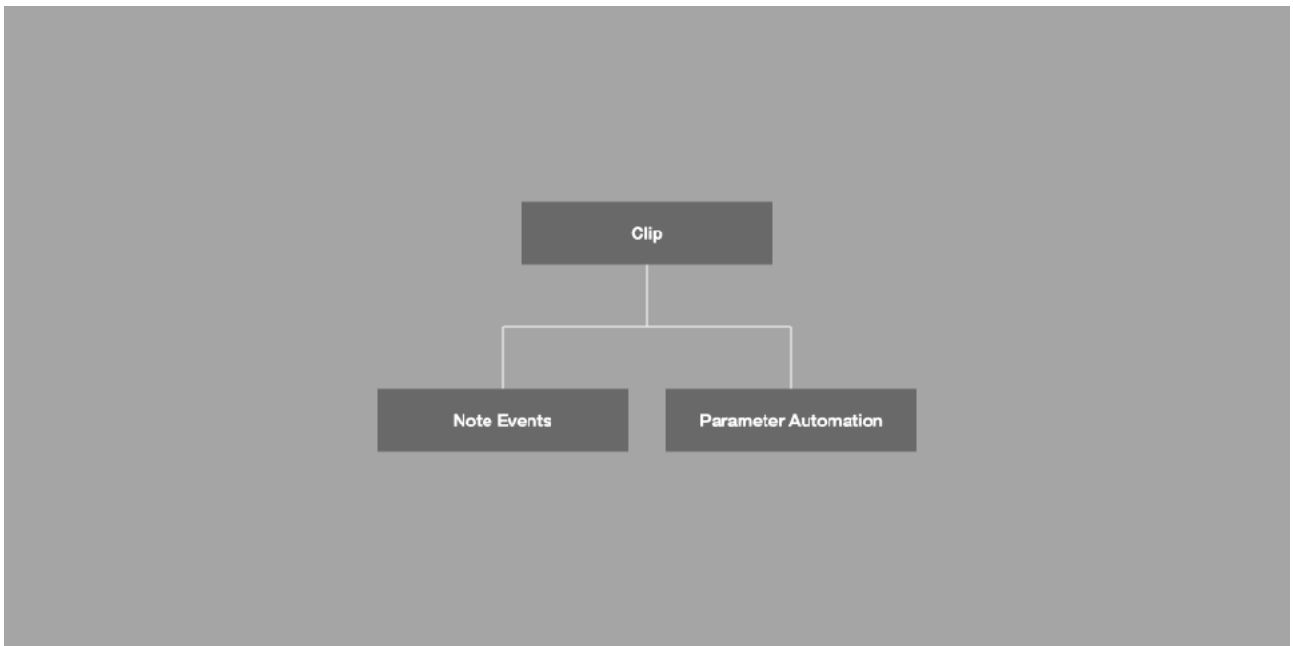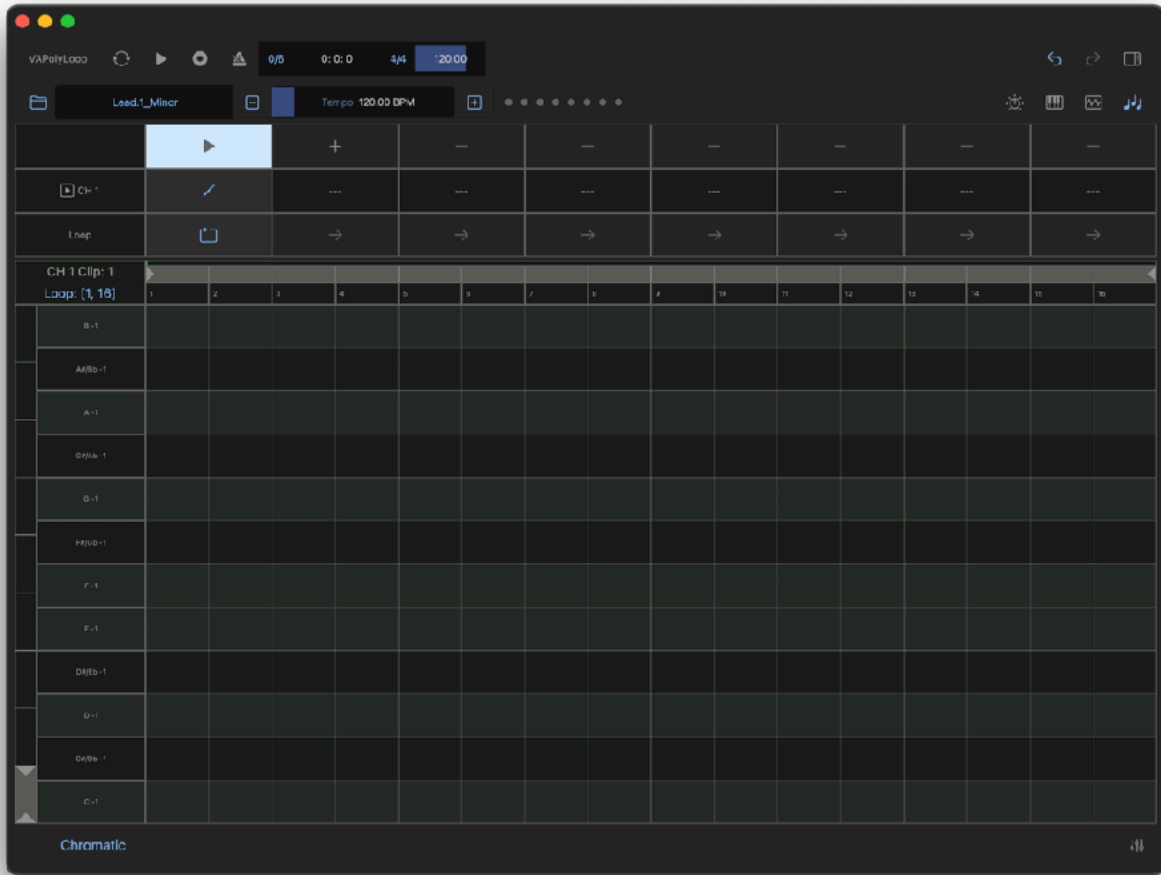

Clip contains note events and parameter automation events for each timbral. Maximum length of clip is 16 bars. Maximum number of clips are 8.

Clip Editor

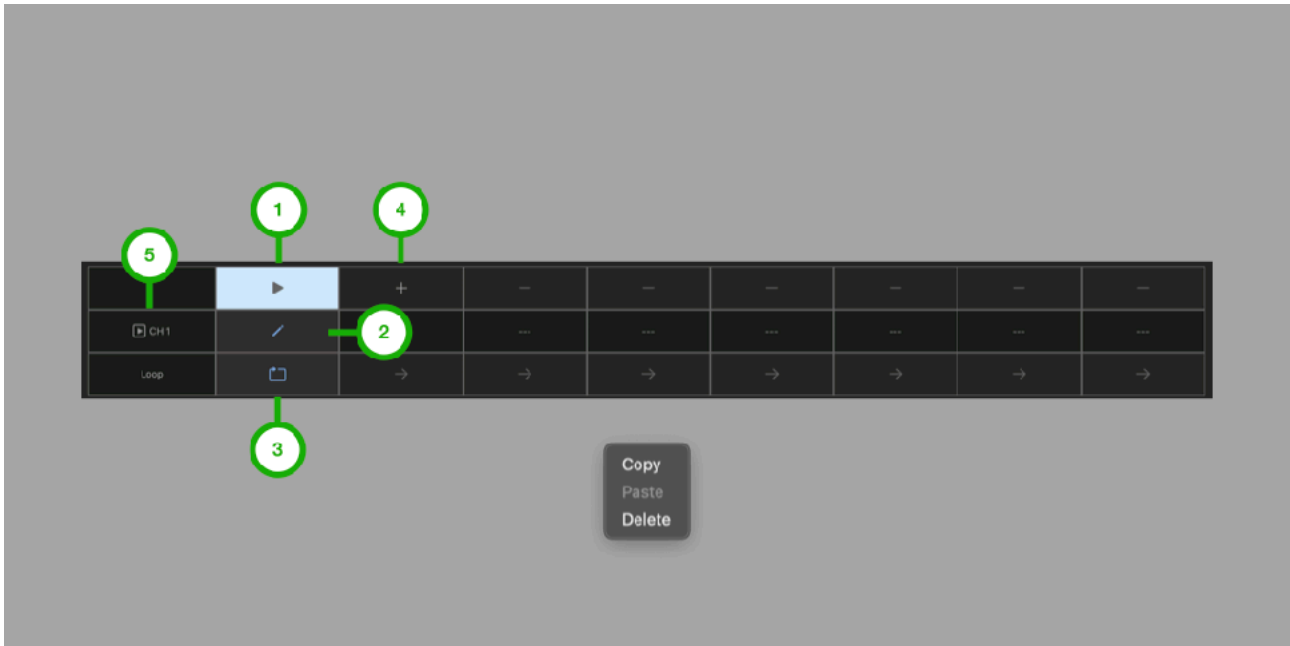

1. Launch Button

Tap this button to play/stop clip.

2. Edit Button

Tap this button to open piano roll editor.

3. Loop Selector

Select loop options.


4. Add Button

Tap this button to add edit button.

5. Auto Select Button

Enable/Disable Auto Select to select editor while sequencer is playing.

Piano Roll Editor

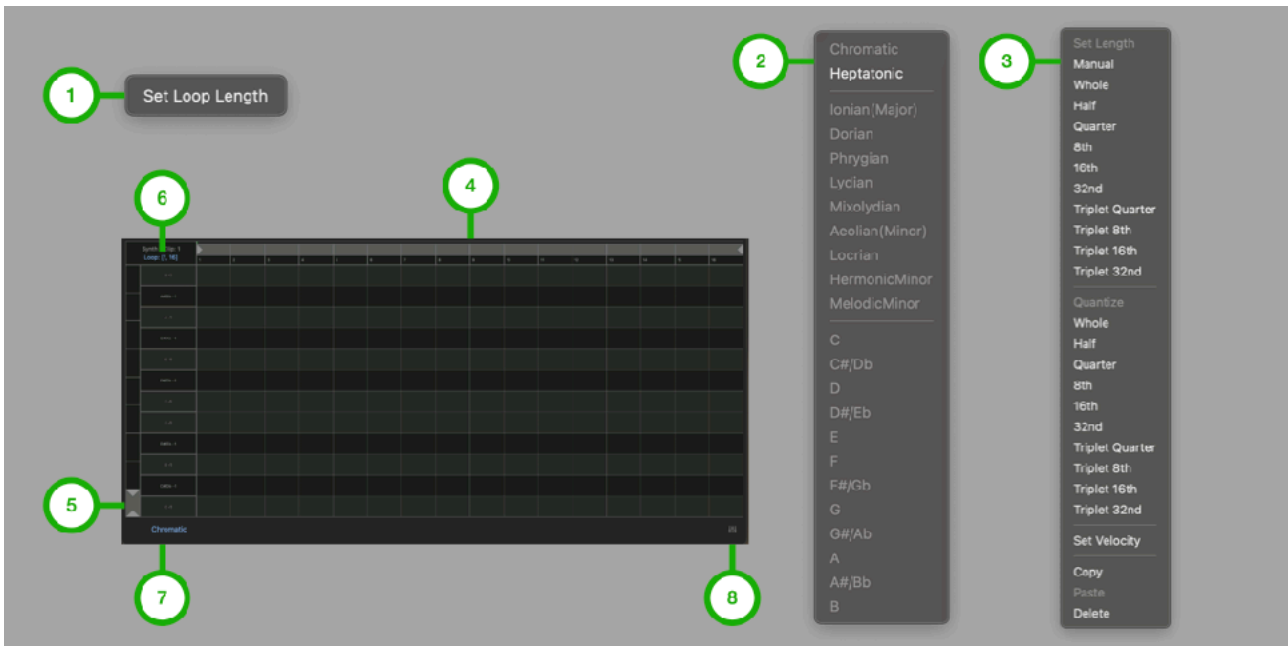

1. Loop Menu

Press and hold (right click on macOS) Time Range Selector to show this menu. Tap on “Set Loop Length” to set loop length to current length selected by the Time Range Selector.

2. Scale Menu

Press and hold (right click on macOS) editor to show this menu.

3. Editing Menu

Press and hold (right click on macOS) note to show this menu.

4. Time Range Selector

Select time range for editing and for loop length. On iOS, pinch gesture control zooming and drag gesture control scroll position.

5. Note Range Selector

Select note range for editing. On iOS, pinch gesture control zooming and drag gesture control scroll position.

6. Loop Range

Tap this button to show Loop Menu.



7. Scale

Tap this button to show Scale Menu

8. Parameter Automation Button

Tap this button to show Parameter Automation Editor

Parameter Automation Editor

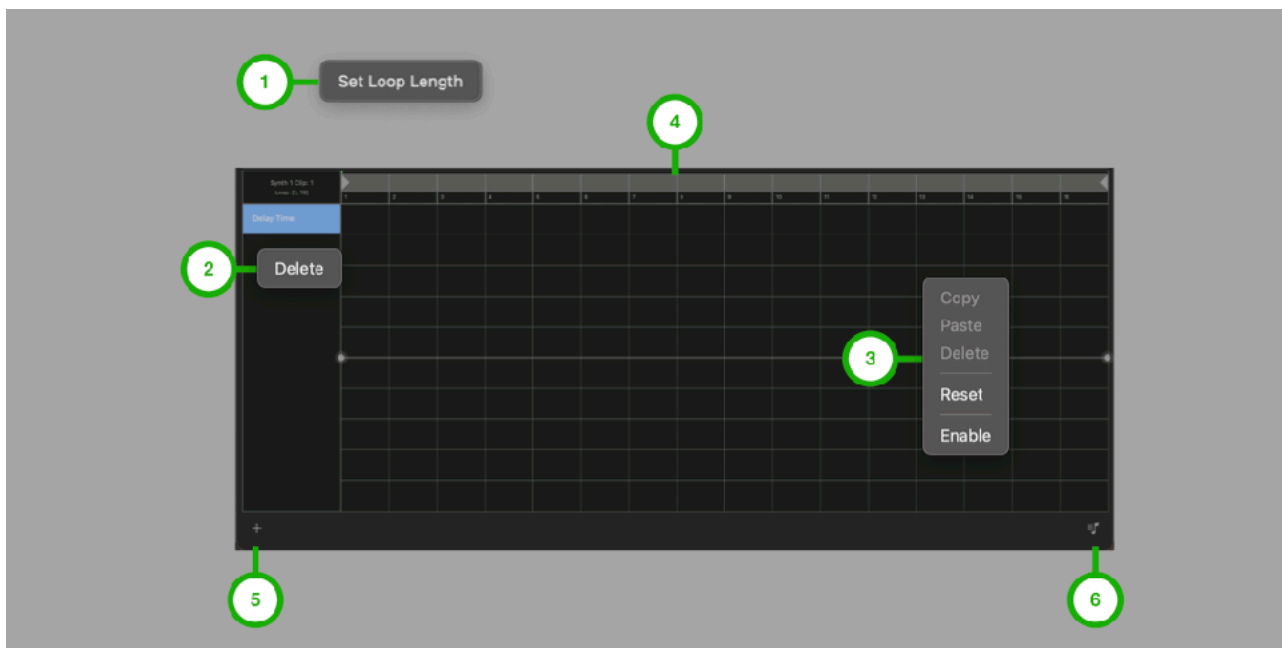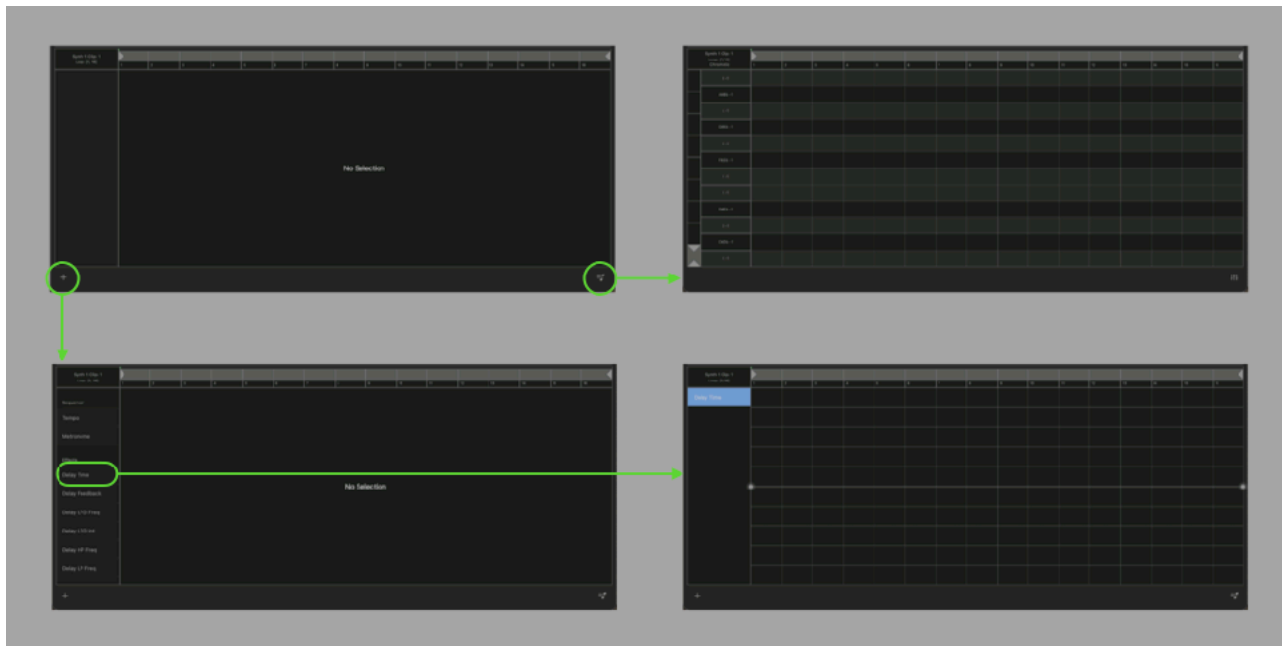

1. Loop Menu

Press and hold (right click on macOS) Time Range Selector to show this menu. Tap on “Set Loop Length” to set loop length to current length selected by the Time Range Selector.

2. List Menu

Press and hold (right click on macOS) item in parameter list to show this menu.

3. Editing Menu

Press and hold (right click on macOS) editor to show this menu.

4. Time Range Selector

Select time range for editing and for loop length.

5. Add Button

Tap this button to select parameter to edit.



6. Piano Roll Button

Tap this button to show piano roll editor.


Synthesizer

VAPolyLoop is polyphonic synthesizer consists of oscillator1, oscillator2, oscillator3, mixer, resonant low pass filter, amplifier, distortion effect and five LFOs. Output of the synthesizer is routed to effects, mixer, EQ, compressor and main output amplifier.

Block diagram

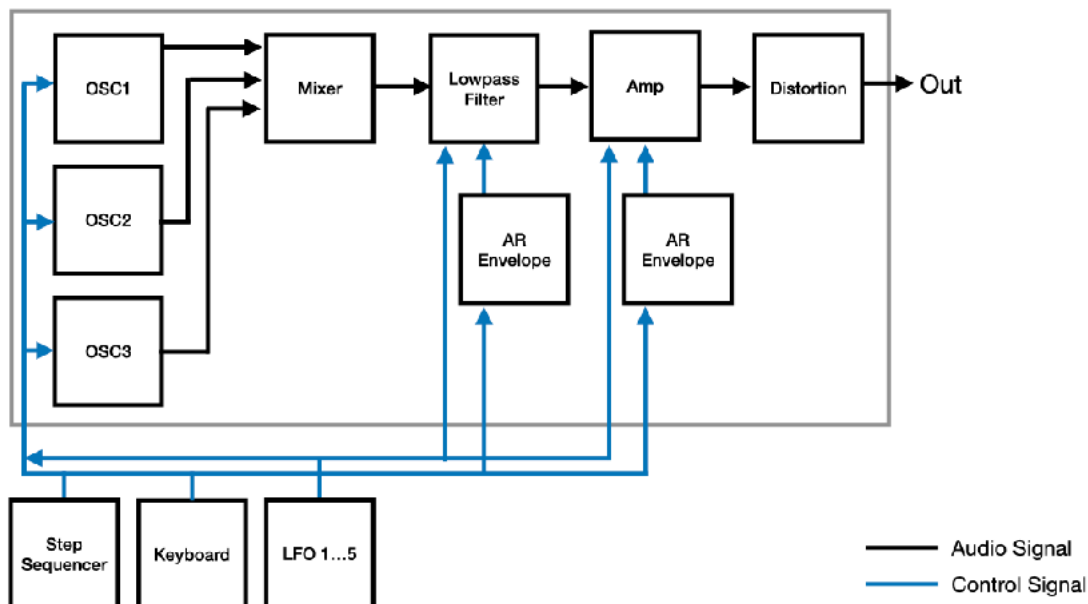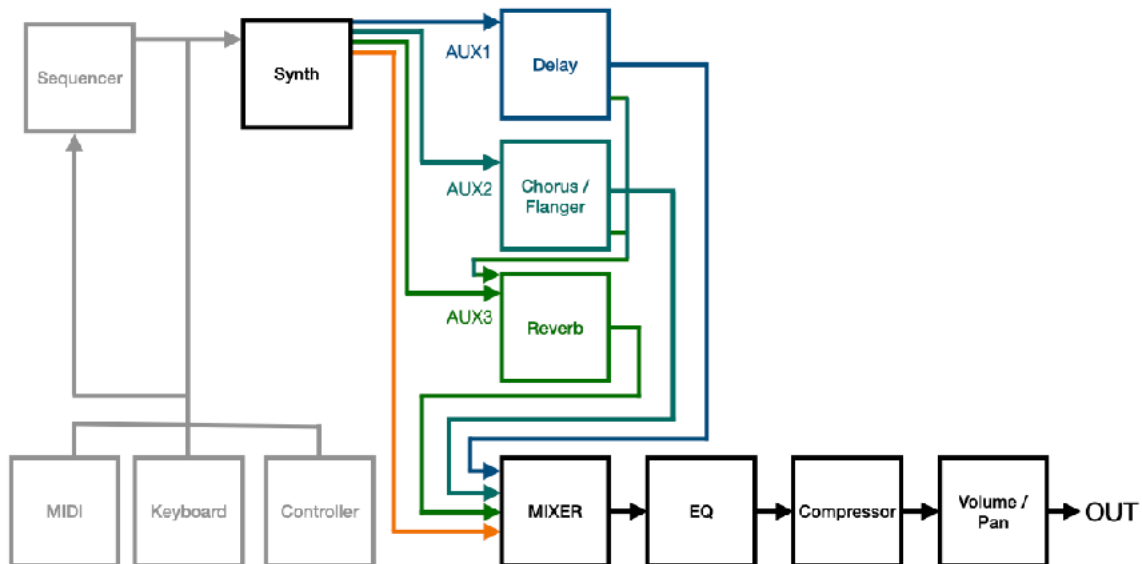

Control Signal & MIDI Flow

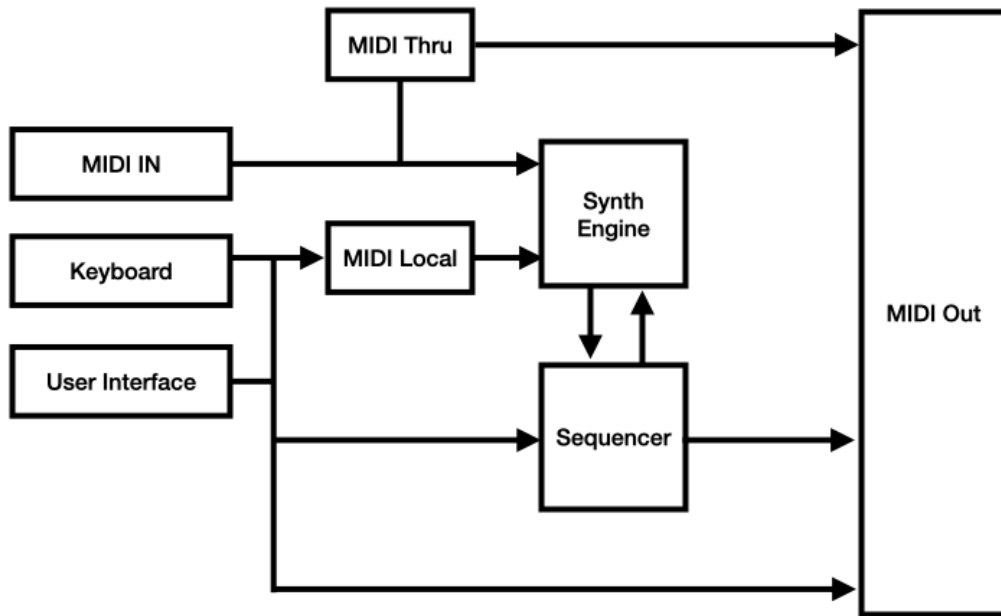

Oscillators

Oscillator 1, 2 & 3 features continuously variable waveform oscillator.



Tune

Adjust pitch of the oscillator. (maximum +/- 24 semitones)

When Square wave is selected, pulse width of 0% and 100% produce DC signal³ resulting no audible output.

Fine

Adjust pitch of the oscillator. (+/- 50 cents)
Use Fine Tune to detuning the oscillator relative to the other oscillators.

Shape

Adjust shape of the waveform. Fully counter clockwise position is Sine, center is Saw, and fully clockwise position is Square.

PW (Pulse Width)

Adjust pulse width of the square (pulse) wave.

Level

Adjust output level of oscillator in dB scale from -60 dB to 0 dB.



FM Amount

Adjust amount of exponential frequency modulation.

the dial clockwise to increase amount of LFO2.

FM LFO

Adjust amount of LFO1/LFO2 signal for frequency modulation. Turn the dial counter clockwise to increase amount of LFO1. Turn

PWM Amount

Adjust amount of pulse width modulation.

³ DC Signal is always positive or always negative and produce no sound.

PWM LFO

Adjust amount of LFO1/LFO2 signal for pulse width modulation. Turn the dial counter

clockwise to increase amount of LFO1. Turn the dial clockwise to increase amount of LFO2.

VCF (Low Pass Filter)

This low pass filter is modeled on the diode ladder low pass filter circuit. Cutoff frequency of the filter is modulated by filter envelope and accent. When accent is on, decay of the filter envelope is set to zero and amplitude of the output signal is increased. Cutoff, env amount, env decay can be modulated by LFO3 or LFO4.



Cutoff

Adjusts the cutoff frequency of the filter.

Resonance

Adjusts amount of resonance.

Env Amount

Adjust amount of envelope to modulate cutoff frequency.

Env Decay

Adjust decay (release) time of the filter envelope.

CF Amount

Adjust amount of LFO to modulate cutoff frequency.

EN Amount

Adjust amount of LFO to modulate env amount.

DE Amount

Adjust amount of LFO to modulate env decay.

CF LFO

Adjust amount of LFO3/LFO4 signal for cutoff modulation. Turn the dial counter clockwise to increase amount of LFO3. Turn the dial clockwise to increase amount of LFO4.

EN LFO

Adjust amount of LFO3/LFO4 signal for env amount modulation. Turn the dial counter clockwise to increase amount of LFO3. Turn the dial clockwise to increase amount of LFO4.

EN LFO

Adjust amount of LFO3/LFO4 signal for env decay modulation. Turn the dial counter clockwise to increase amount of LFO3. Turn the dial clockwise to increase amount of LFO4.

VCA (Amplifier)

The output signal of the filter is routed to the amplifier and distortion effect. The amount of amplifier gain is controlled by envelope. Amplifier gain and amount of pan can be modulated by LFO3 or LFO4.



Volume

Adjust volume of Output Signal.

Pan

Adjust position of pan.

Dist

Adjust amount of distortion.

Tone

Adjust tonality of the distortion effects.

Reso MG

Adjust amount of make up gain to compensate gain reduction resulted by increasing filter resonance.

Bass Boost

Enable / Disable bass boost to adjust frequency of high pass filter at the input of the amplifier.



AM Amount

Adjust amount of LFO to modulate amplitude.

Pan Amount

Adjust amount of LFO to modulate pan.

AM LFO

Adjust amount of LFO3/LFO4 signal for amplifier modulation. Turn the dial counter clockwise to increase amount of LFO3. Turn the dial clockwise to increase amount of LFO4.

Pan LFO

Adjust amount of LFO3/LFO4 signal for pan modulation. Turn the dial counter clockwise to increase amount of LFO3. Turn the dial clockwise to increase amount of LFO4.

EFX Send



Delay Send

Adjust level of the signal send to delay effect.

C/F Send

Adjust level of the signal send to chorus / flanger effect.

Reverb Send

Adjust level of the signal send to reverb effect.

LFO

LFO (Low Frequency Oscillator) can generate 6 wave shapes and the frequency of the LFO can be set by Hz or note value when LFO is synchronized to tempo.



Tune

Adjust frequency of the LFO. When sync is off, range of the frequency is from 0.04Hz to 42.2Hz. When sync is on, range of the rate is from 1/64 to 8 bars.

Shape

Select shape of the LFO waveform. Wave shapes are sine, saw, down saw, square, triangle and random.

Delay

Adjust delay time to start the LFO signal.

Tempo Sync

Turn this switch on to sync the rate of the LFO with tempo.

Key Sync (Key Re-Trigger)

Turn this switch on to restart the LFO cycle every time a new note is played. When step sequencer is running, restart LFO cycle when step is returned to step 1.

Mod Wheel Target



Vibrato

Adjust amount of mod wheel for vibrato.

Tremolo

Adjust amount of mod wheel for tremolo.

Cutoff

Adjust amount of LFO5 to modulate cutoff frequency of low pass filter by mod wheel.

Output Mixer

Output Signals from the effects can be adjusted by output mixer.



Delay Level

Adjust level of delay signal to EQ.

C/F Level

Adjust level of Chorus / Flanger signal to EQ.

Reverb Level

Adjust level of Reverb Signal to EQ.

Master Output

Level and Pan of the master output can be adjusted in master section.



Volume

Adjust level of the master output.

Pan

Adjust pan of the master output.

Mute

Turn on to mute master output.

Step Sequencer

Analog Style 8 Step Sequencer to play notes.



Step



accent is on

Step Switch

Enable / Disable trigger to the step.

AC/SL Switch

Enable / Disable accent (when trigger is on) or slide (when trigger is off).



slide is on

Gate

Adjust amount of Gate signal (Velocity) for the step. Range is from 0% to 100%.

CV

Adjust Amount of CV signal (Pitch) for the step. Range is one octave. Note value varies by setting of Root Key and Octave Range.

Sequencer Options



Play

Turn it on to enable sequencer for playing. Tap any key on keyboard to start the sequencer.

Quantize

Select a quantize option for CV signal. Options are Off, Minor or Major.

Rate

Adjust frequency of clock to drive the sequencer.

Tempo Sync

Turn it on to enable Tempo Sync.

Steps

Select number of steps for the loop.

Gate

Adjust pulse width of gate signal.

Mode

Select an operation mode. Options are mono and chord. When chord is selected, use Quantize option to select Minor or Major.

KBD Root

Enable / Disable pressed note on keyboard to set root key.

Root Key

Select a Root Key of CV signal. Range is from C-2 to C8 (MIDI 0 ... 127).

Octave Range

Select an Octave Range of CV slider. Range is from 1 octave to 10 octaves.

S&H



LFO Amount

Adjust amount of LFO1/LFO2 signal to be sampled on active step.

Noise Amount

Adjust amount of pink noise/white noise signal to be sampled on active step.


Hold

Select number of steps to hold the sampled CV sequences. Options are 8, 16, 32, 64, 128 and 256. When the value is 256, 8 steps are repeated 32 times. Length of the loop is depended on the Clock Rate.

Sync with Transport Control

Play/Stop button of build-in piano roll sequencer or host application can start and stop step sequencer.


Enable CVSEQ PLAY OVERRIDE in setting panel.

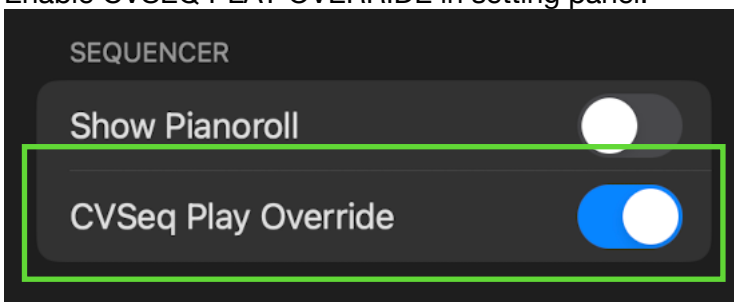

Enable Host Sync to be control by the host application.



 
Press Play Button of build-in piano roll sequencer or host application starts step sequencer and it is indicated by the play button of the step sequencer.



Effects

Delay

Signal Flow

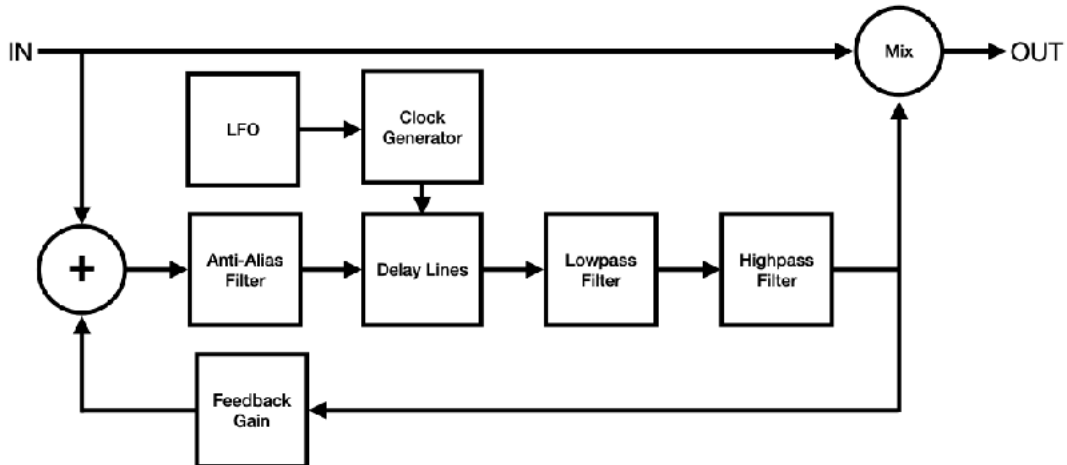

Delay Time

Adjust delay time from 20 ms to 1200 ms. When sync switch is turned on, delay time can be set as note value which is synchronized to the tempo. Valid range of the note value is automatically adjusted base on the current tempo.

Regeneration

Adjust feedback from 0 % to 100 %. You can change sound of the feedback by adjusting frequency of the high-pass filter and the low-pass filter.

Modulation


Modulation can be applied to the delayed signal. LFO (Low Frequency Oscillator) generates sine wave for the modulation.

Adjust LFO frequency from 0.01 Hz to 10 Hz.

Adjust LFO Intensity from 0 to 1.0, which adjust modulation width from 0 ms to +/- 10 ms.

Chorus / Flanger

Signal Flow

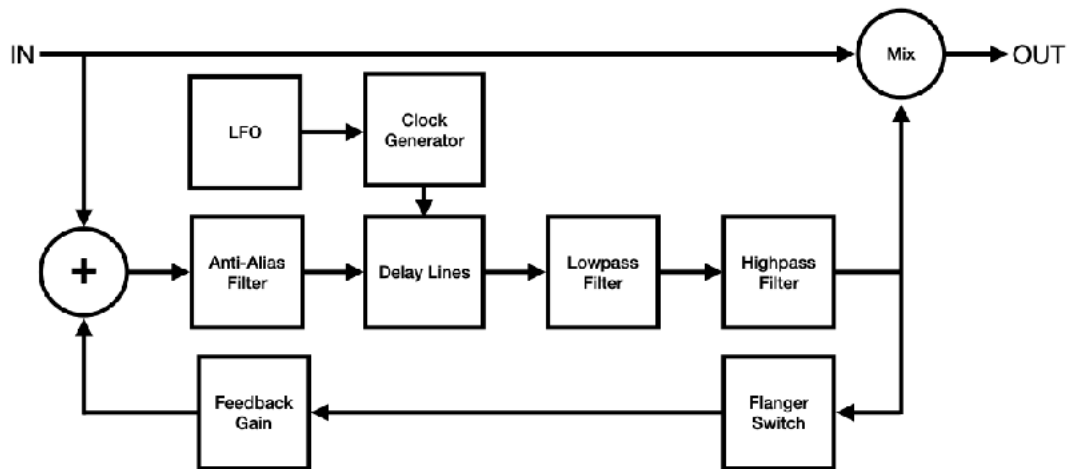

Input Signal Level

Level of input signal should be about -6dB or less. If the input signal is too hot, it will cause distortion in output signal.

Effect Type

Select effect type from chorus or flanger. Ranges of the delay time and the LFO Intensity change based on the selected effect type.

Modulation Speed

LFO Frequency dial controls speed of the modulation. When sync switch is turned on, LFO Frequency can be set as note value which is synchronized to the tempo. Valid range of the note value is automatically adjusted base on the current tempo.

Modulation Width

LFO Intensity dial controls width of the modulation and delay time dial controls center position of the modulation.

When chorus effect is selected, range of the LFO intensity is from 0 ms to 1 ms and range of the delay time is from 1 ms to 40 ms.

When flanger effect is selected, range of the LFO intensity is from 0 ms to 12 ms and range of the delay time is from 1 ms to 13 ms.

Rotate delay time dial counterclockwise to emphasize higher frequency or clockwise to emphasize lower frequency.⁴

LFO Shape

LFO shape dial controls shape of the LFO waveform. When the dial is rotated fully counterclockwise, shape of the waveform is sine wave. When the dial is rotated fully clockwise, shape of the waveform is triangle wave.

Stereo Width

Stereo Width dial controls phase offset of the LFO. When the dial is rotated fully counterclockwise, stereo width is 0%. (phase offset is 0 degree) When the dial is rotated fully clockwise, stereo width is 100%. (phase offset is 180 degree)

Regeneration

Feedback dial controls amount of regeneration from 0 % to 100 %. Turning the feedback dial clockwise enhances amount of the feedback effect.


⁴ If compared with manual knob of the analog flanger guitar pedal, emphasized frequency moves reverse direction.

Filters

Delayed signal is routed to high-pass filter and low-pass filter before mixed with dry signal. HP frequency controls frequency of the high-pass filter. LP frequency controls frequency of the low-pass filter.

Reverb

Signal Flow

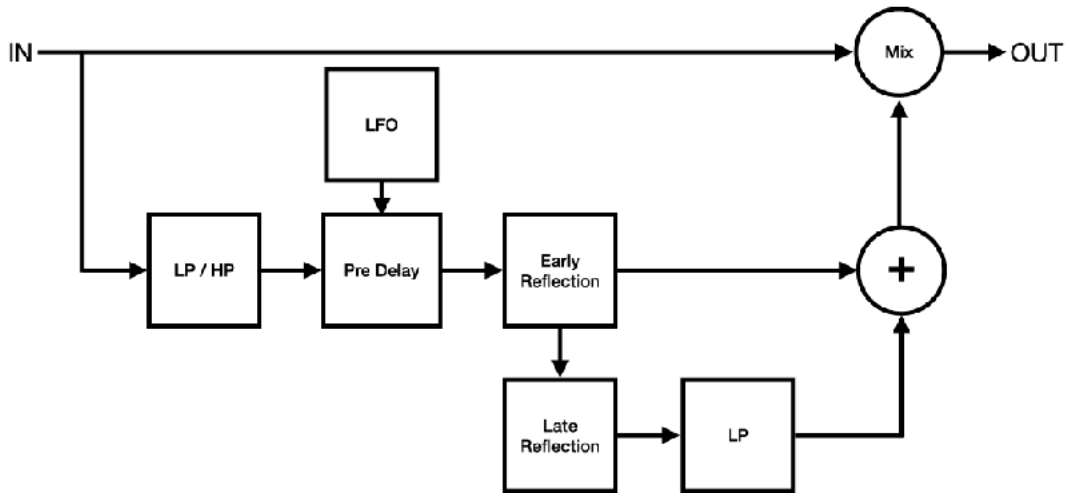

Input Filter

Use Lowpass filter and high-pass filter to attenuate high frequency and low frequency of the input signal.

Pre Delay

Use pre delay to adjust amount of the time between the direct signal and beginning of the early reflection signal. This parameter can be used to express size of the space. Reflection takes short time to bounce back in small room and it takes long time in large room. Also this parameter can be used to separate dry signal and reverb signal in the mix.

Modulation Speed

LFO Frequency dial controls speed of the modulation. When sync switch is turned on, LFO Frequency can be set as note value which is synchronized to the tempo. Valid range of the note value is automatically adjusted base on the current tempo.

Modulation Width

LFO Intensity dial controls width of the modulation and pre delay time dial controls center position of the modulation. Range of the LFO intensity is from 0 ms to +/- 10 ms.

Size and Decay

Size dial controls reverb time of late reflection and decay dial controls length of the reverb tail. Decay time can be used to express size of the space and material of the surface. Reflective materials, such as concrete or hardwood, gives longer decay time.

When auto size switch is turned on, size dial controls value of the parameters including size, pre delay, decay, damp, output LP frequency and early/late mix.

When sync switch is turned on in auto size mode, total reverb length, which can be controlled by pre delay, size and decay, is adjusted by note value which is synchronized to the tempo.

Damping

Damp dial controls amount of high frequency absorption for the late reflection signal. Low damping values produce brighter reverb sound and high damping values produces darker reverb sound.

Output Filter


Use lowpass filter to cut high frequency of the reverb signal.

Early / Late Mix

Adjust balance of the early reflection signal and late reflection signal from 0% (early reflection) to 100% (late reflection).


Equalizer

Low Shelving

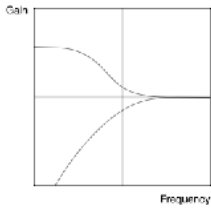


Adjust frequency of the filter from 21 Hz to 1092 Hz.
Adjust gain from minus infinity to +12 dB
When gain is turned fully anti clock wise, the filer becomes high pass filter.

Mid Peak / Notch

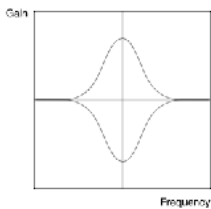

Adjust frequency of the filter from 151 Hz to 2389 Hz.
Adjust gain from -14 dB to +14 dB
Bandwidth is fixed to one octave.

High Shelving

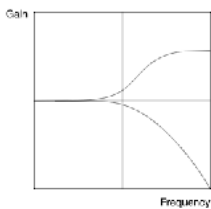


Adjust frequency of the filter from 296 Hz to 21096 Hz.
Adjust gain from minus infinity to +12 dB
When gain is turned fully anti clock wise, the filer becomes low pass filter.

Compressor

Overview

The compressor reduces dynamic range of audio signal. This is achieved by feedback topology as shown in the diagram below.

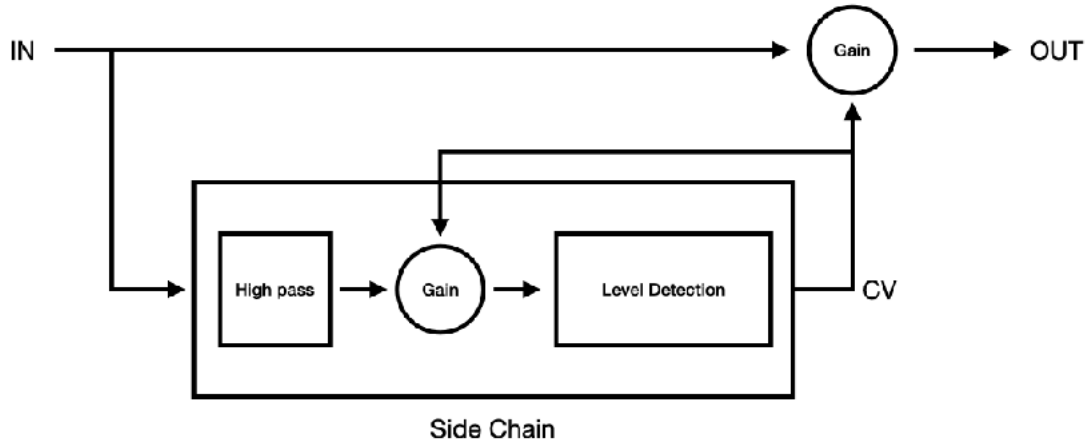


High pass filter is applied to the input of the side chain and the signal is routed to the gain stage in the side chain. The output of the gain stage is routed to the level detection. The level detector detects level of the input signal and generates control signal based on the level of the gain reduction required. The control signal is routed to the amplifier in the gain stage in the side chain to adjust level of the input signal from the high pass filter. The same control signal is also routed to the amplifier of the main gain stage to adjust level of the input signal.

The feedback topology is common in early analog compressors. Although there are several disadvantages to this topology, it is considered more musical than feed-forward design used in modern compressors. The feedback loop is implemented without unit delay to emulate behavior of the analog circuit.


Threshold and Ratio

When level of the input signal passes above the threshold, the input signal is compressed by the ratio.

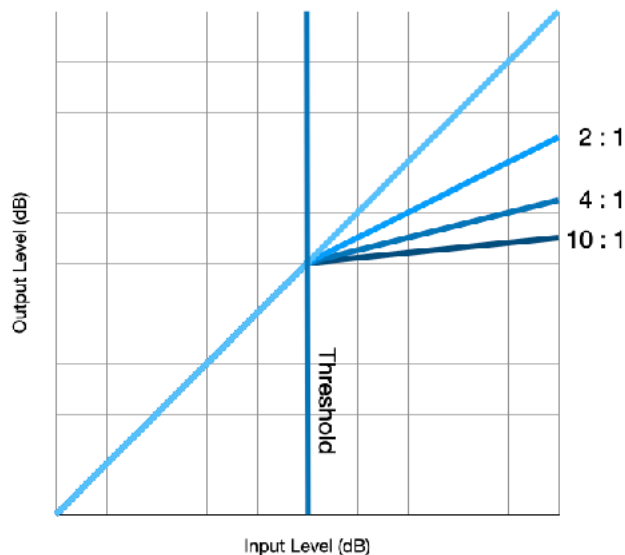


Attack and Release

Attack is the time it takes for the signal to be compressed by the given ratio. Release is the time it takes the gain reduction to return to zero.



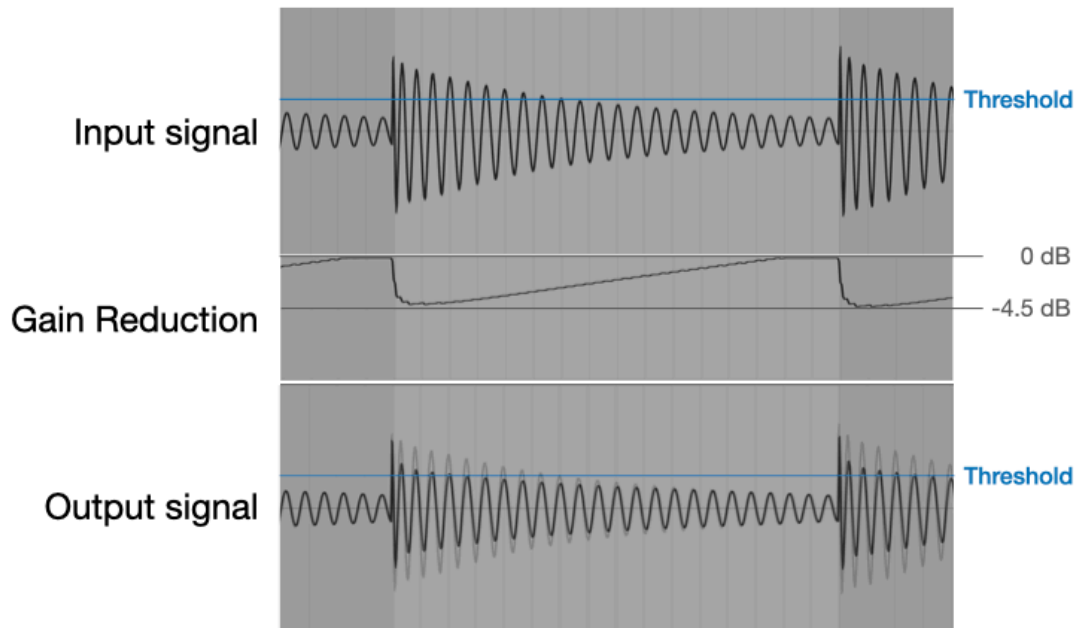


In this example, attack is 1 ms and release is 0.6 s. The initial transient pass through the compressor without gain reduction. It takes a while for the gain reduction to return to 0 dB after the input signal goes below the threshold.

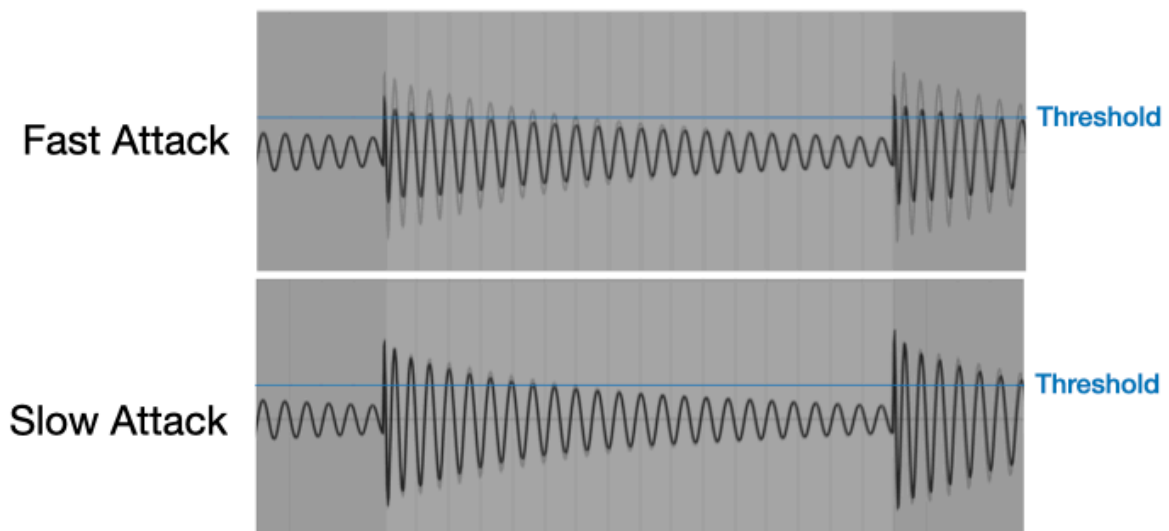

Fast attack makes compressor to start gain reduction immediately after the input signal passes above the threshold. Slow attack, on the other hand, allows many of the transients to pass through compressor without gain reduction.

The figures below illustrate characteristic of the attack and the release. 1KHz Sine wave is used as an input signal (shown as transparent background images). It shows how compressor reacts with various combination of the attack and release settings.

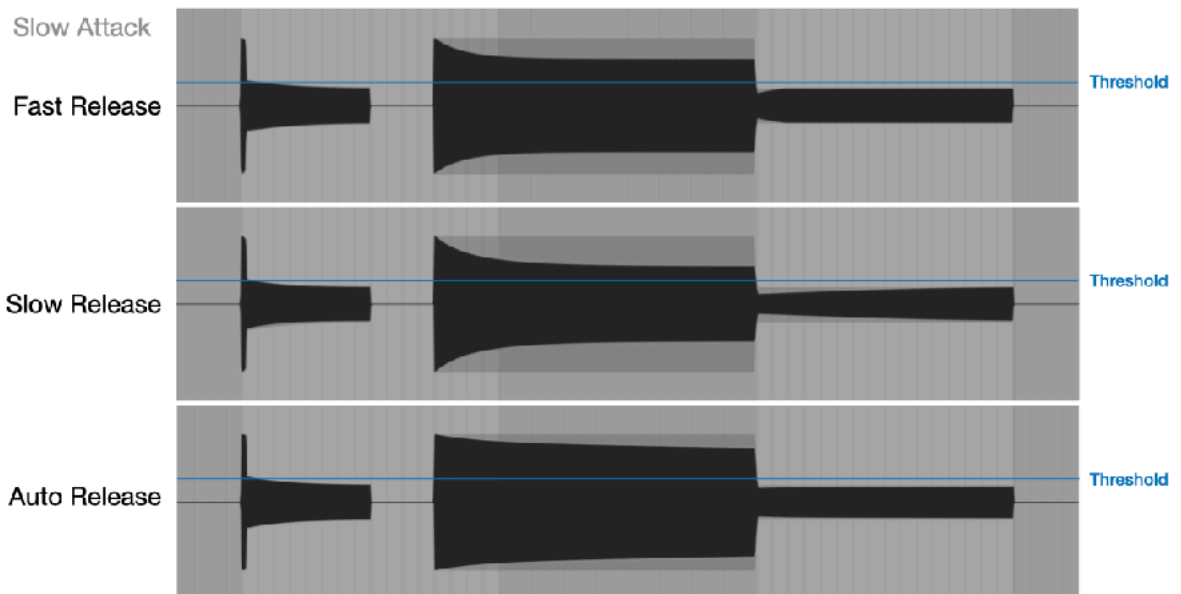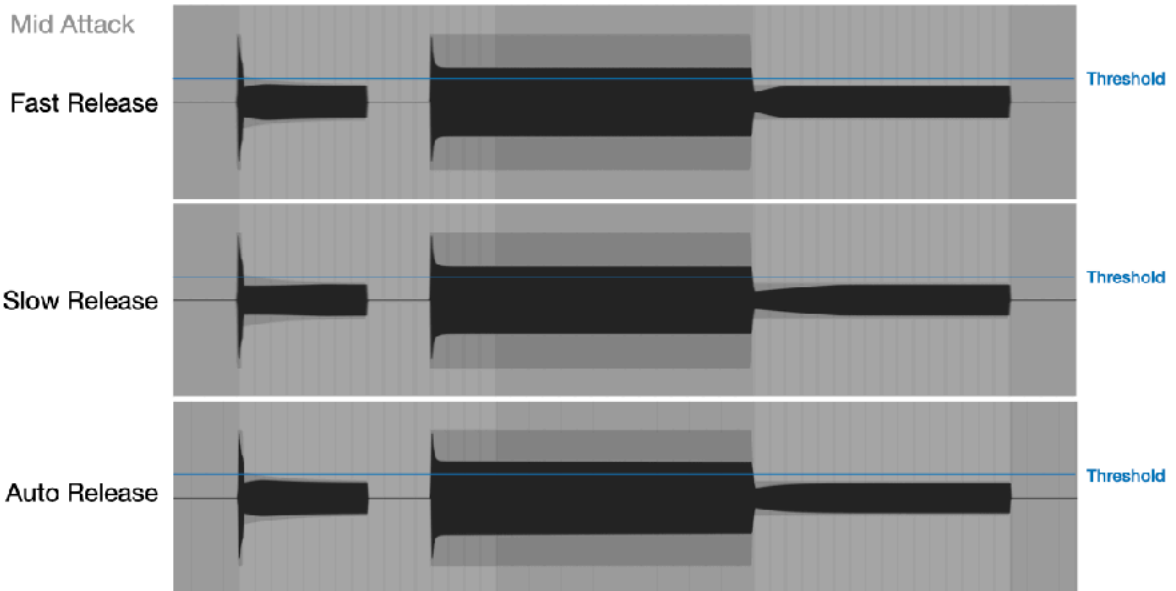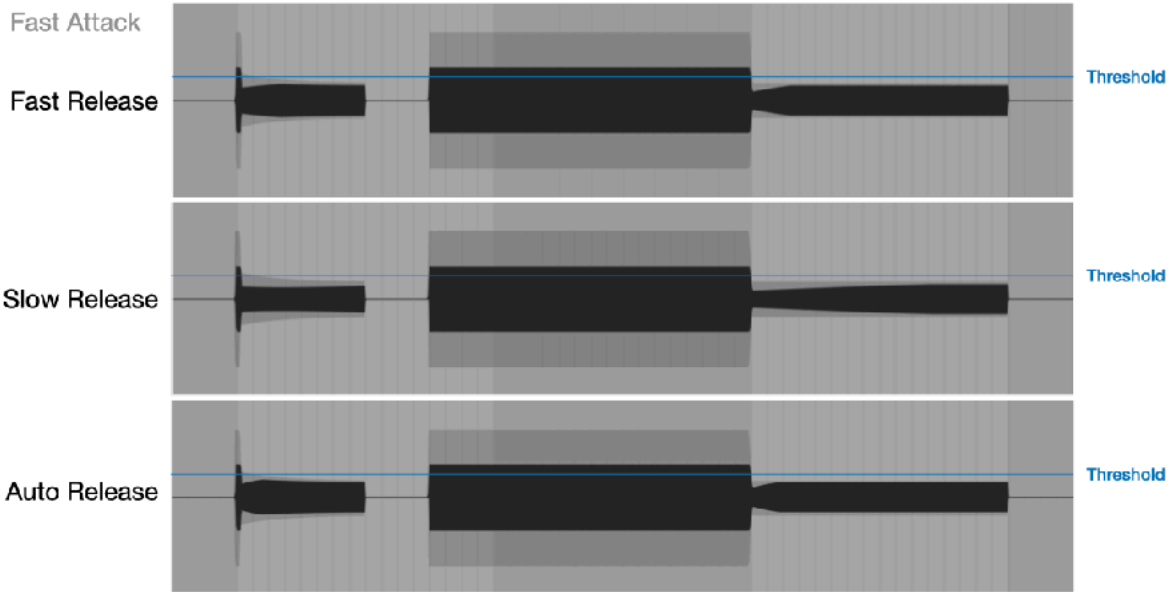

Auto Release uses two time constants for the peak detector. It will react differently for the short transients and the long sustained sound.

Fast attack reduces the level of the transients and make sound soft, slow attack allows transients to pass through and gives a punch to the sound.

Fast release causes pumping and breathing effects. Slow release continues to reduce level for a long period of time after compressing louder part of the sound.


Side Chain High Pass Filter

-6 dB / octave high pass filter is applied to the input signal of the side chain. Frequency range is from 20 Hz to 185 Hz. This filter removes low frequency information from the input signal for the level detector to control excessive gain reduction and pumping effect.

Makeup Gain


Use Makeup to compensate the gain reduced by the compressor. The range is from 0 dB to 20 dB. Gain reduction meters show the amount of the gain reduction. You can use the information to adjust level of the makeup gain.

Gain Reduction Meter

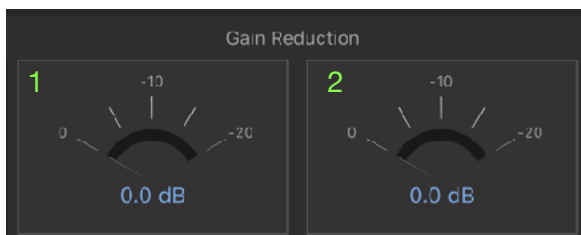

Gain reduction meters show peak level of the gain reductions in dB.

1. Gain reduction for the left channel
2. Gain reduction for the right channel

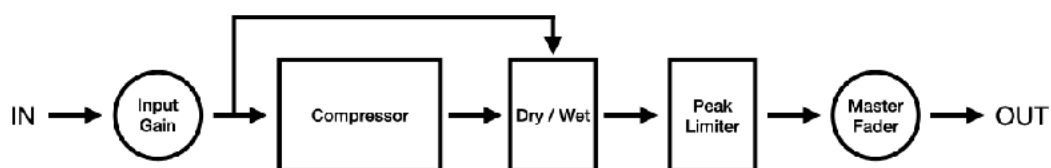

Input Gain

Adjust gain of the input signal routed to the compressor. The range is from -20 dB to 20 dB. When level of input signal is increased, GR meters show gain reductions even if threshold is set to 0 dB.


Dry / Wet

Use Dry / Wet to mix uncompressed signal (dry) and compressed signal (wet). Parallel compression technique, also known as New York compression can be achieved by adjusting amount of the wet signal mixed with the dry signal. When set to 0%, output is the dry signal. When set to 100%, output is the wet signal. When set to 50%, equal amount of the dry and the wet signal are mixed for the output.


Peak Limiter

Peak Limiter is an analog style limiter and provides clean sounding output signal. This limiter is not a lookahead brick wall limiter, so that it can't offer brick wall limiting. However it does not introduced any latency to the output signal.


Frequency response of the peak limiter is illustrated in the figure below. Output signal shows the result of 1 dB gain reduction.

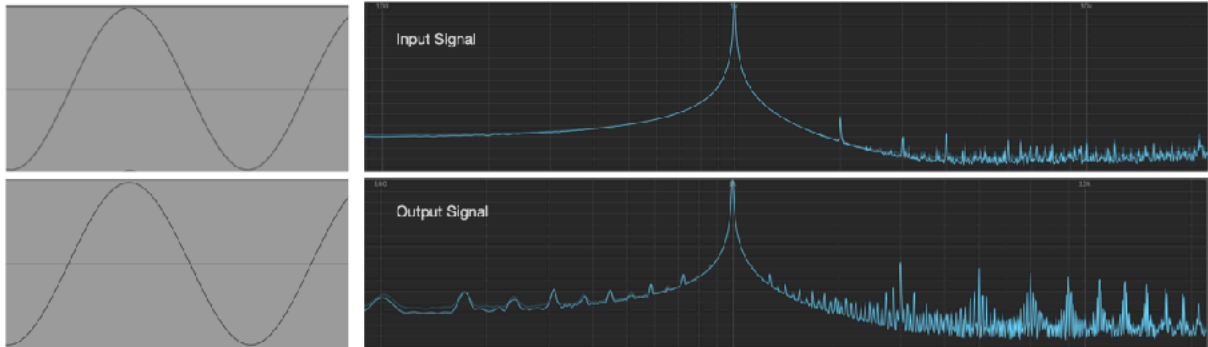

Key Pad

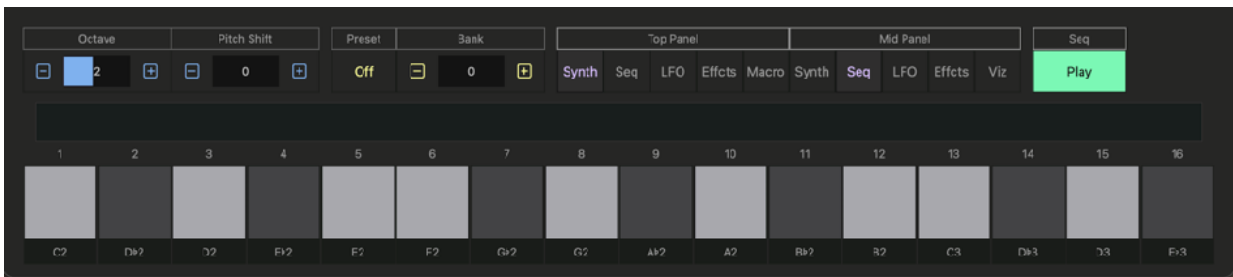


Select Keyboard

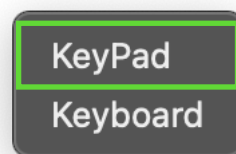


Hold this button (right click on macOS) to show keyboard menu. Select KeyPad. Tap the button in tool bar to show key pad.

 Select Octave




Use plus / minus buttons to adjust octave range of the key pad. Indicator shows octave of the lowest note of the key pad.

 Select Pitch Shift




Use plus / minus buttons to adjust pitch range of the key pad.

 Select Preset Type




Select a preset type. Options are Off, Factory and User. When factory or user is selected, tap on key pad to select a preset. Play note indicated below the key pad from external keyboard also can select a preset.

 Select Preset Bank




Use plus / minus buttons to select a preset bank. Preset number is sum of the key pad number and bank number * 16.

 Select Top Panel




Select a module for the top panel.

 Select Mid Panel



Select a module for the mid panel.

 Enable Play Switch for Step Sequencer




Turn it on to enable sequencer for playing. Tap any key on key pad to start the sequencer.

Ribbon Controller



Dragging the Ribbon Controller applies linear pitch bend.

Keyboard

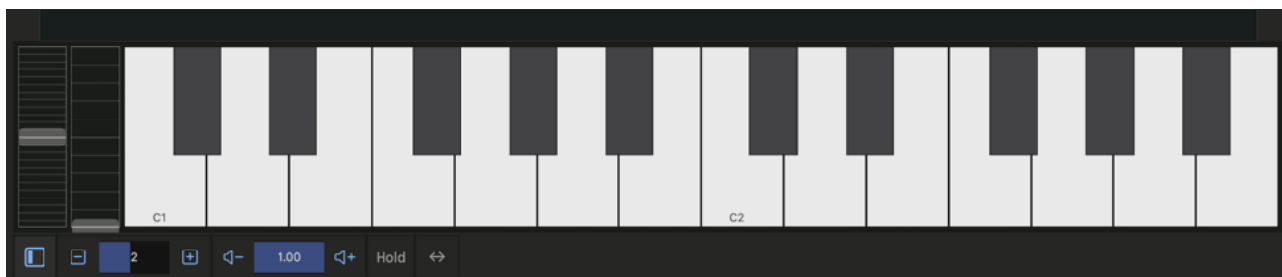


Select Keyboard




Tap keyboard button in tool bar to show keyboard.

Select Key Range

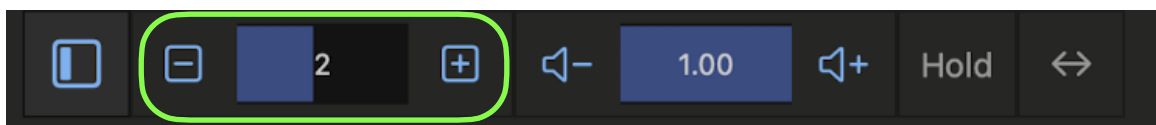


Use plus / minus buttons to adjust range of the keyboard. Indicator shows lowest note of the keyboard.

Use Modulation Wheel

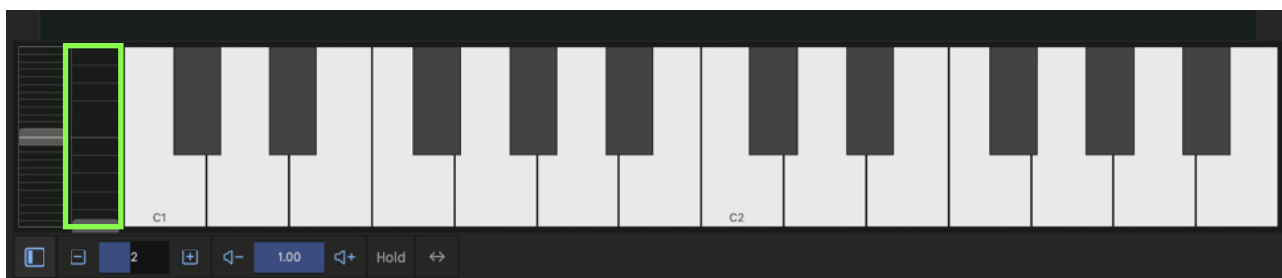


Adjust amount of the modulation when Mod Wheel is selected in modulation source.

Use Pitch Wheel

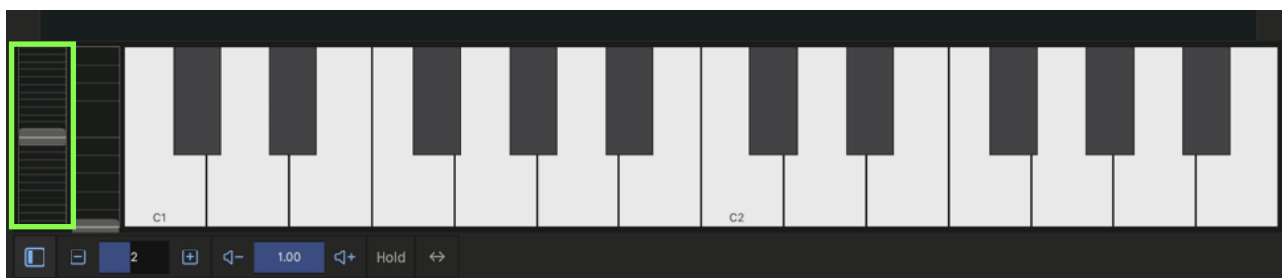


Adjust pitch of the oscillators. Range is plus / minus one octave.

Set Velocity

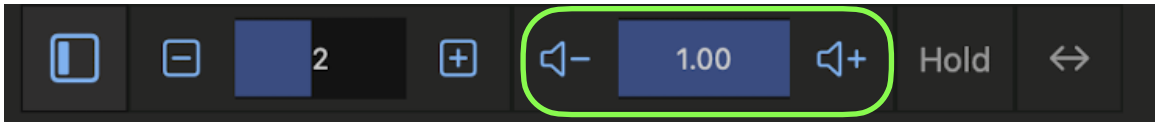


Use plus / minus buttons to adjust velocity.

Use Key Hold

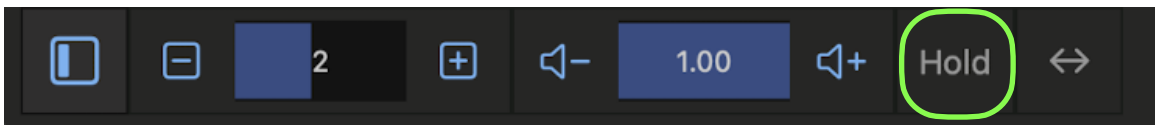


Tap to Enable/Disable Key Hold.

Scroll Keyboard

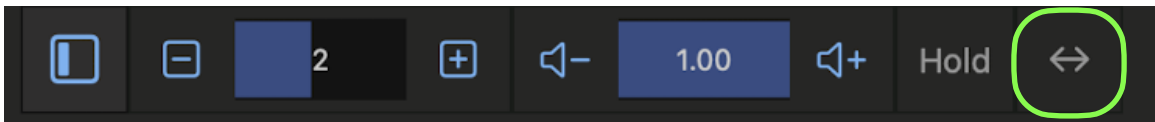

Tap this button to enable/disable keyboard scrolling.


Ribbon Controller

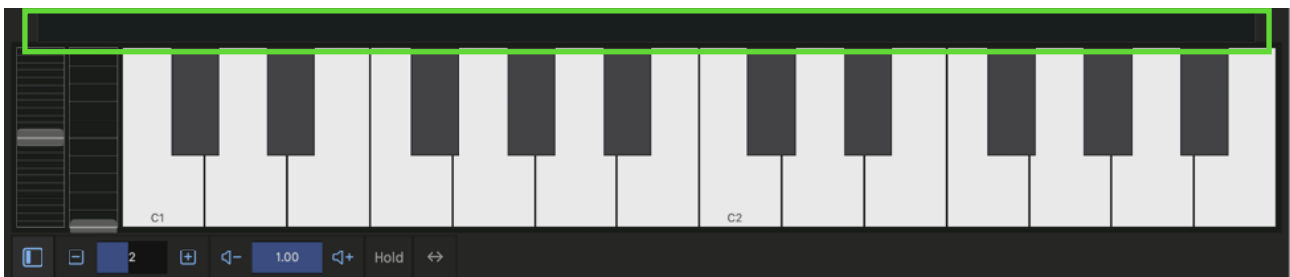


Dragging the Ribbon Controller applies linear pitch bend.

Assignable Controllers

Tap synth button to show synth menu. Select Macro to show Assignable Controllers (Macro).

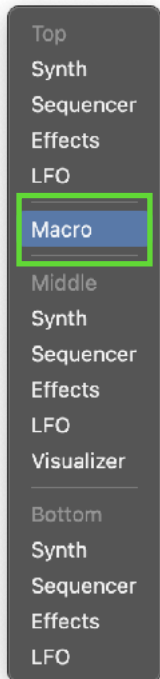

 Tap Macro button in KeyPad to show Assignable Controllers (Macro).





Tap "Assign" button and tap on a selected control to assign the parameter to the control.

Macro Factory Presets


Five factory presets, Synth, VCA_Mod&EFX, CF_Mod, ChannelStrip and Effects, can be used to set parameters to Assignable Controllers.

Sequencer (Piano Roll)


Enable Piano Roll Sequencer in setting panel to show piano roll sequencer.

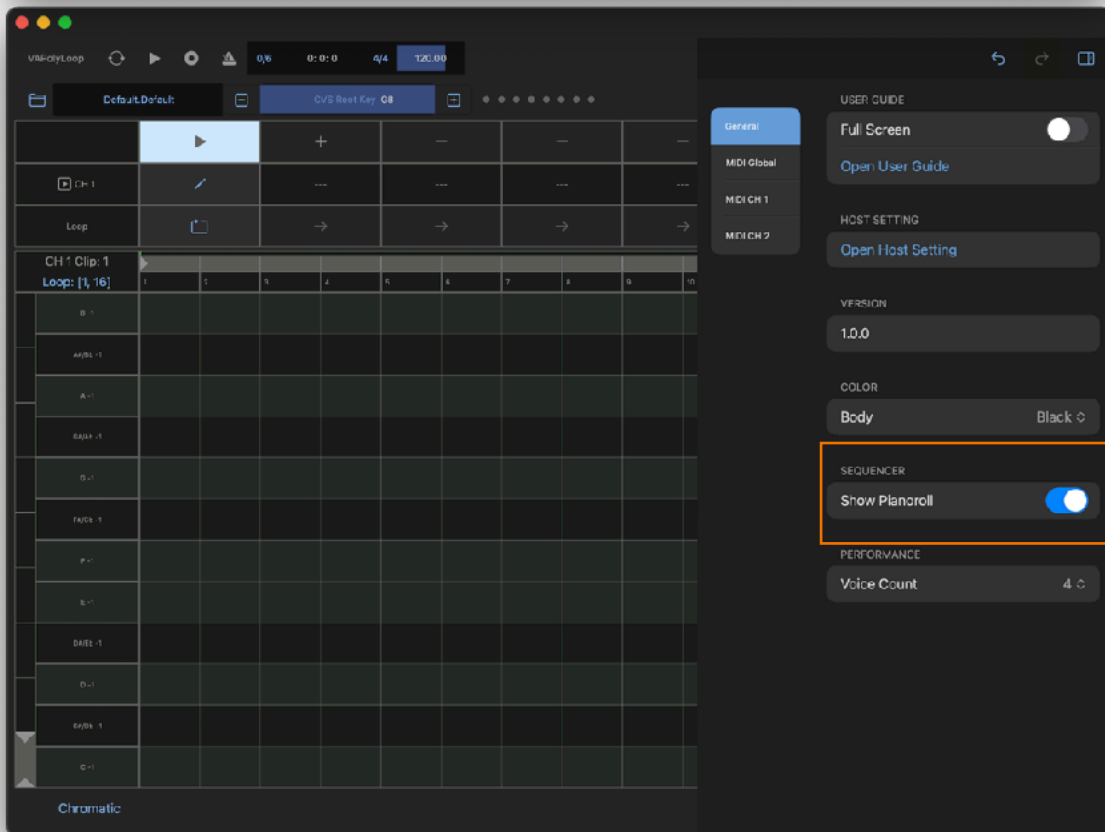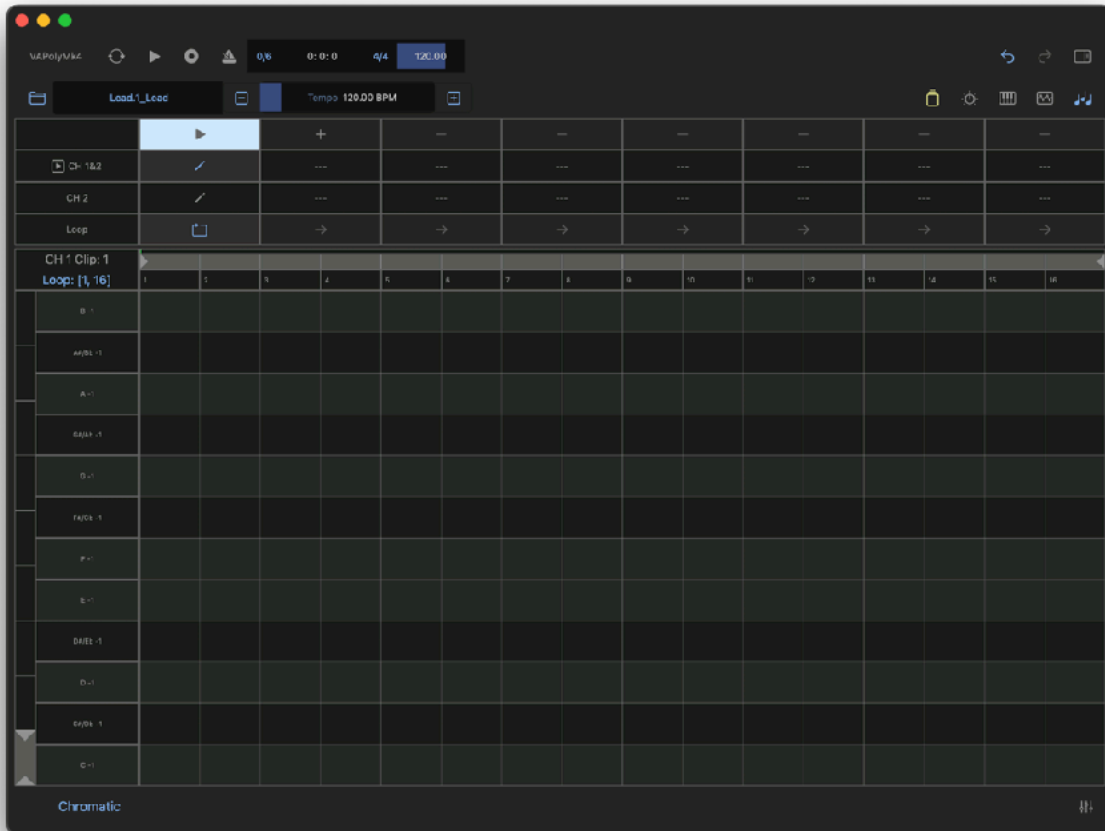

Clip Editor

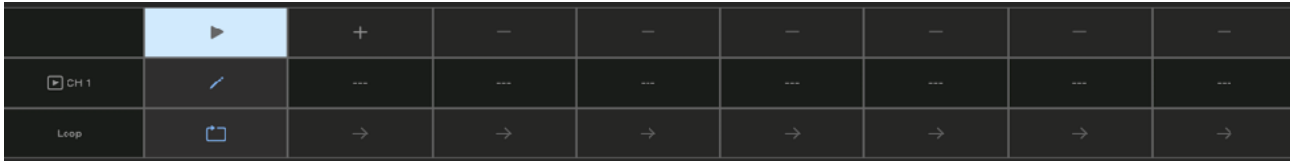

Each clip contains note event and parameter automation events for length of 16 bars. Maximum number of clips are 8.

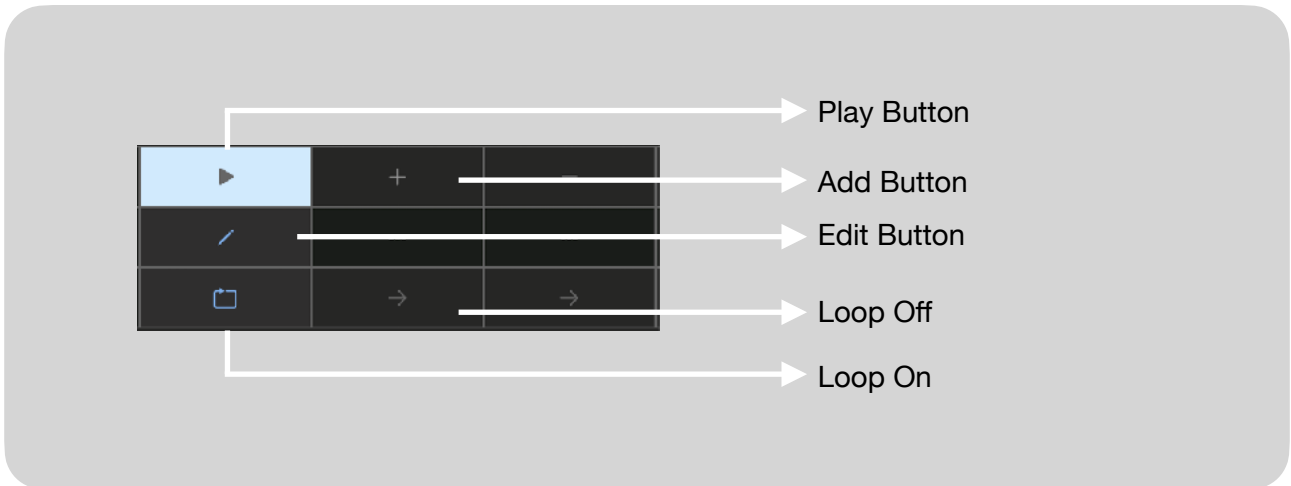

Load Clip

Tap load button to load clip to make it active.

Play/Stop Clip

Tap play button to play/stop clip.

Edit Piano Roll

Tap edit button to open piano roll editor.

Add edit button

Tap plus button to add edit button.


Set Loop Mode

Tap this button to enable/disable loop mode. When loop is off, tap square icon to select a clip to play next.

Auto Select Editor

Tap Synth Row Label to toggle Auto Select Editor Switch. When Auto Select is enabled, editor changes while playing sequence.

Piano Roll Editor

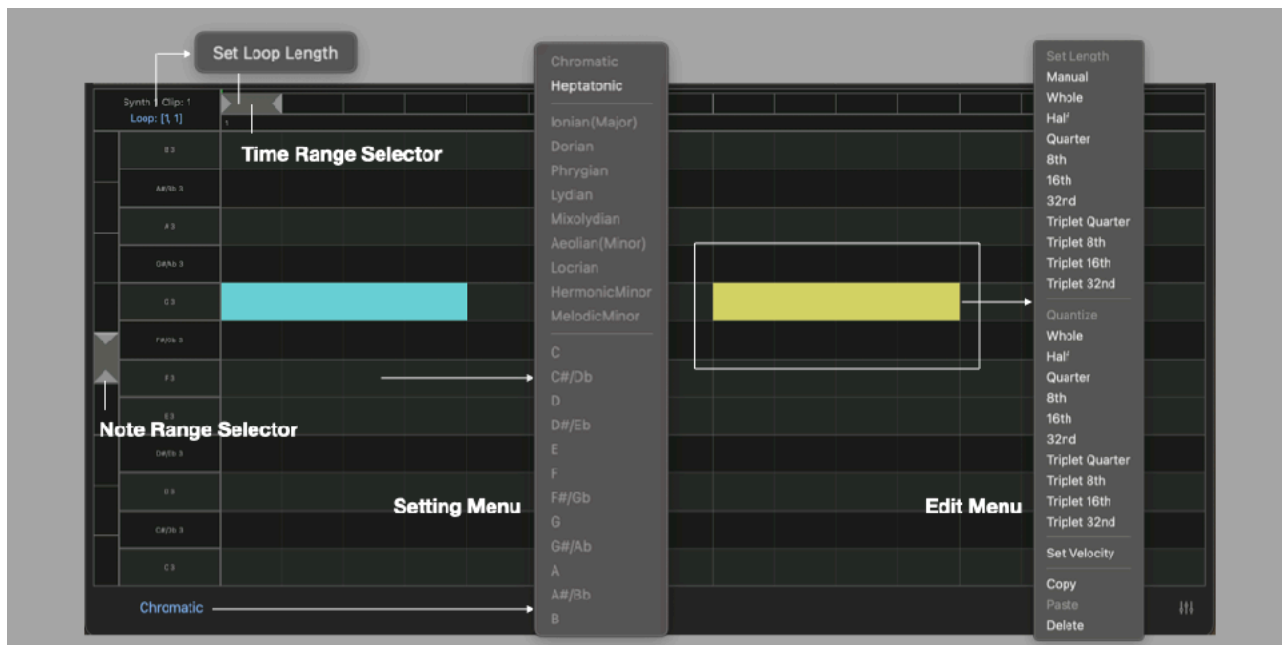

Select Time Range and Loop Length

Use “Time Range Selector” to select Time Range for editing and Loop Length. On iOS, pinch gesture control zooming and drag gesture control scroll position. To set Loop Length, tap on Loop Length button to show menu and select “Set Loop Length”. Right click on selector on Mac also show the menu.

Select Note Range

Use “Note Range Selector” to select note range for editing. On iOS, pinch gesture control zooming and drag gesture control scroll position.

Add Note

Double tap to add a note.

Delete Note

Select note and select Delete from context menu.

Scale Menu

Press and hold (right click on macOS) editor to show scale menu. Tap on scale button also shows the menu.

Edit Menu

Press and hold (right click on macOS) selected note to show edit menu.

- Chromatic
- Heptatonic**
- Ionian(Major)
- Dorian
- Phrygian
- Lydian
- Mixolydian
- Aeolian(Minor)
- Locrian
- HermonicMinor
- MelodicMinor
- C
- C#/Db
- D
- D#/Eb
- E
- F
- F#/Gb
- G
- G#/Ab
- A
- A#/Bb
- B

Chromatic Scale

Select Chromatic to edit notes in Chromatic Scale (12 tones).

Heptatonic Scale

Select Heptatonic to edit notes in Diatonic Scale, Harmonic Minor Scale or Melodic Minor Scale (7 degrees).

Root Key

Select a root key, when editing note in Diatonic Scale, Harmonica Minor or Melodic Minor Scale.

- Set Length
- Manual
- Maximum
- Whole
- Half
- Quarter
- 8th
- 16th
- 32nd
- Triplet Quarter
- Triplet 8th
- Triplet 16th
- Triplet 32nd

- Quantize
- Whole
- Half
- Quarter
- 8th
- 16th
- 32nd
- Triplet Quarter
- Triplet 8th
- Triplet 16th
- Triplet 32nd

- Hide Velocity

- Copy
- Paste
- Delete

Set Length

Select an option to set note length.

Quantize

Select an option to quantize note.

Set Velocity

Open velocity editor to edit note velocity.

Copy

Copy selected notes.


Paste

Paste notes.

Delete


Delete selected notes.

Velocity Editor

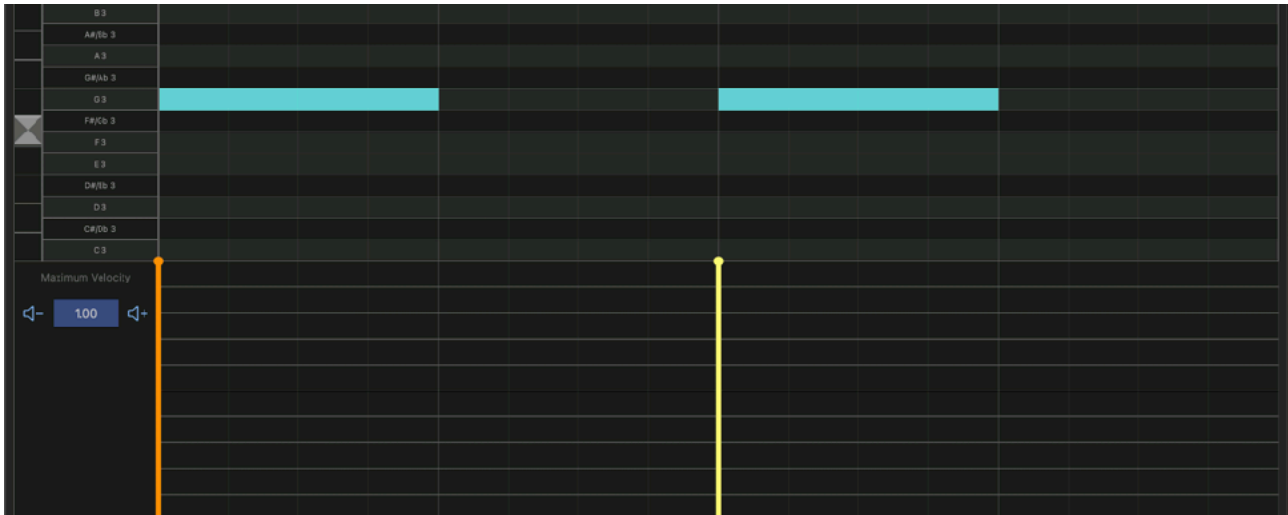


1. Select a note and open context menu.
2. Select "Set Velocity" in context menu
3. Select velocity sliders and adjust the velocity. Indicator in side bar shows maximum velocity in the selection. Maximum velocity value can be adjusted by plus and minus button and slider of the indicator.

Parameter Automation Editor

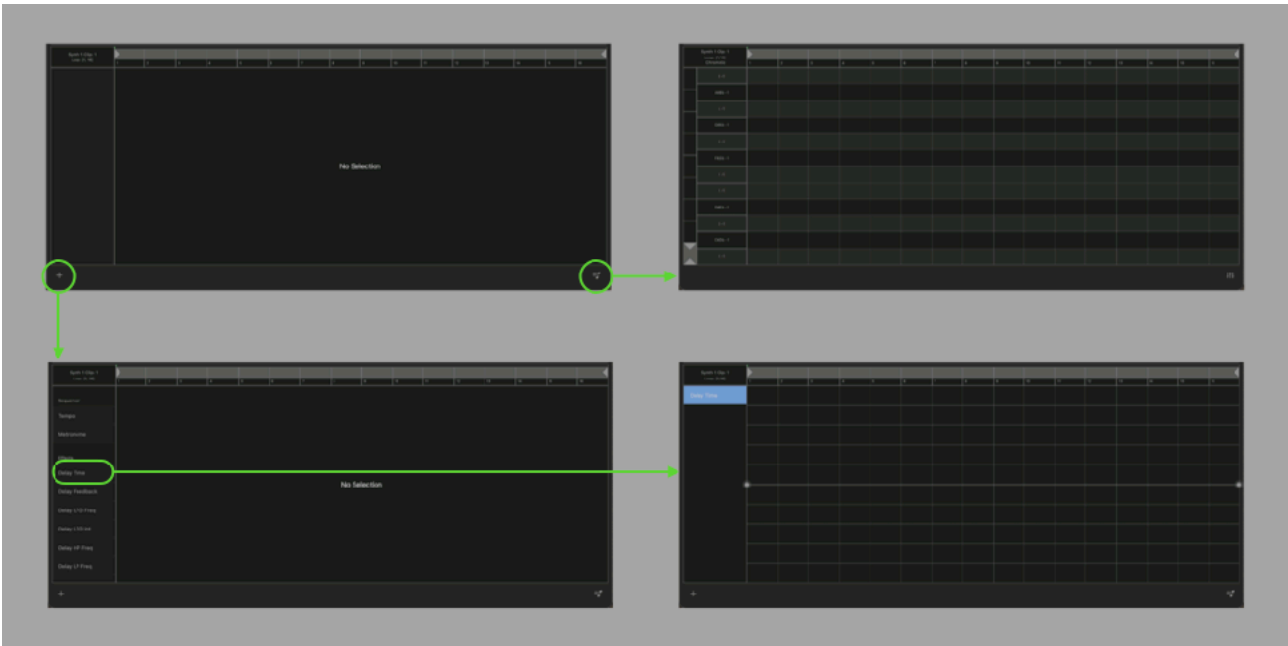

1. Tap plus button to show parameter list.
2. Select a parameter to edit.
3. Press and hold (right click on macOS) on parameter name to show context menu. Tap Delete to delete the parameter form editor.

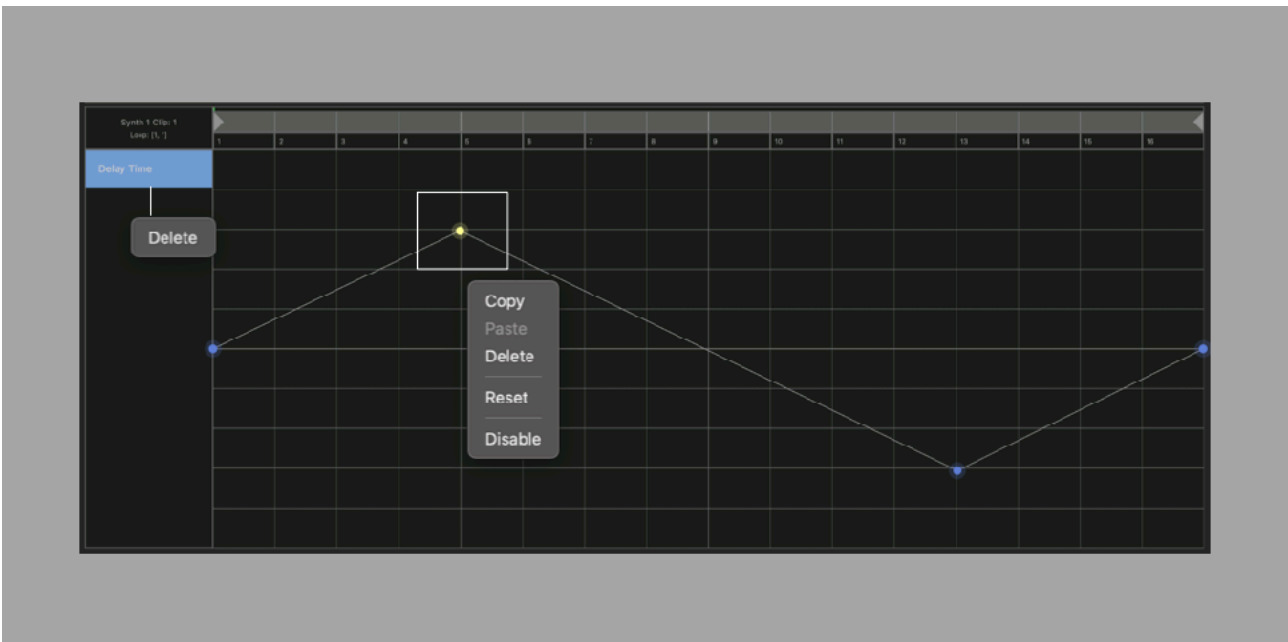

4. Double tap to add an edit point.
5. Select edit points and press and hold (right click on macOS) on editor to show context menu.
6. Select Reset from context menu to reset the parameter.
7. Select Disable to inactivate automation.

Play Sequence

1. Set host sync

Tap sync button in transport bar to enable / disable sync mode.

When sync mode is enabled,

Stand Alone

Sequencer is synced to the clock provided by container application. The container application can use Ableton Link to synchronized with the Link enabled devices. Use buttons in transport bar to play / stop sequence and change tempo.

Plugin

Sequencer is synced to the clock provided by the host application. Use transport switches of the host application to play / stop the sequence and change tempo.

When sync mode is disabled,

Sequencer is driven by internal clock. Use buttons in transport bar to play / stop the sequence and change tempo.

2. Set tempo

Tap plus / minus button at the tempo section in the transport bar to open tempo slider. Tempo can be adjusted by the plus / minus buttons and the tempo slider. Tempo slider can adjust tempo by range of plus/minus 20 BPM. Double tap on the slider set center position to the current tempo value. Alternatively tapping on tempo indicator allows you to type in tempo value by computer keyboard.

3. Set loop

Use Time Range Selector to set loop length.

4. Set swing

Tap swing button in transport bar to show swing menu. Select an option from the menu to apply the swing.

Swing Type	Delay time	Duration (Ratio)	Note
Swing 0/6	0 (no swing)	50%	Straight
Swing 1/6	1/6 of 16th note	54%	Soft swing
Swing 2/6	2/6 of 16th note	58%	Soft swing
Swing 3/6	3/6 of 16th note	62%	Soft swing
Swing 4/6	4/6 of 16th note	66%	Triplet swing
Swing 5/6	5/6 of 16th note	70%	Hard swing
Swing 6/6	16th note	75%	Dotted hard swing

Delay time is an amount of delay applied to the third 16th note when a beat is divided by four 16th notes.

Duration (ratio) is a ratio of duration from the first 16th note to the third 16th note when a beat is divided by four 16th notes.

Amount of delay for the notes in a beat changes proportionally.

5. Set metronome switch

Tap metronome button in transport bar to enable / disable metronome.

6. Play

Tap play / stop button in transport bar or transport switches of the host application to play / stop the sequence.

Record Sequence

1. Set recording mode

Tap record button in transport bar to enable recording mode.

2. Play sequence

Play the sequence by following the steps described above. Recording will start after count-in. When tap recording button while playing, recording start without count-in. To start recording without count-in, play sequence first then tap record button.

3. Record notes

Play keypads or MIDI keyboard to record notes. Notes are automatically quantized at 16 step position.

4. Record parameters automation

Before recording parameter values, use edit command “Reset to Dial Value” to reset values of the parameter to the rest position.

Turn a dial or switch to record the parameter values. The color of the control changes to green to indicate the parameter is recorded. The control won't move automatically until disabling the recording mode in order to move the control freely during the recording.

If the synth or the effects is not producing sound, parameter value will not be recorded.

5. Stop recording

Tap record button in transport bar to disable recording mode or tap play button to stop playback.

Preset

User Preset contains values of the synth parameters and the sequence data. When loading a user preset, value of the synth parameters and the sequence data are both changed. User Presets can be saved in iCloud Drive or in AUv3 plug-in on the device.


To save user preset in iCloud drive, select Save in File Menu. User Presets in iCloud Drive can be accessed from iPhone, iPad or Mac.

To save user preset in plug-in, tap Add button in Preset Browser. Plug-In Preset is stored on the device and can be accessed from any host application which support AUv3 User Preset.

Factory presets contains only values of parameters of the synth and the effects. It doesn't contain any sequence data. When loading the preset, it will change the value of the parameters but sequence data remains the same.

To load factory presets, select a preset in Preset Browser.

File Menu

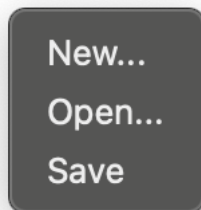

New...

Reset parameters and sequence data.


Open...

Open a preset from iCloud drive.

Save

Save a preset in iCloud drive.

Preset Browser

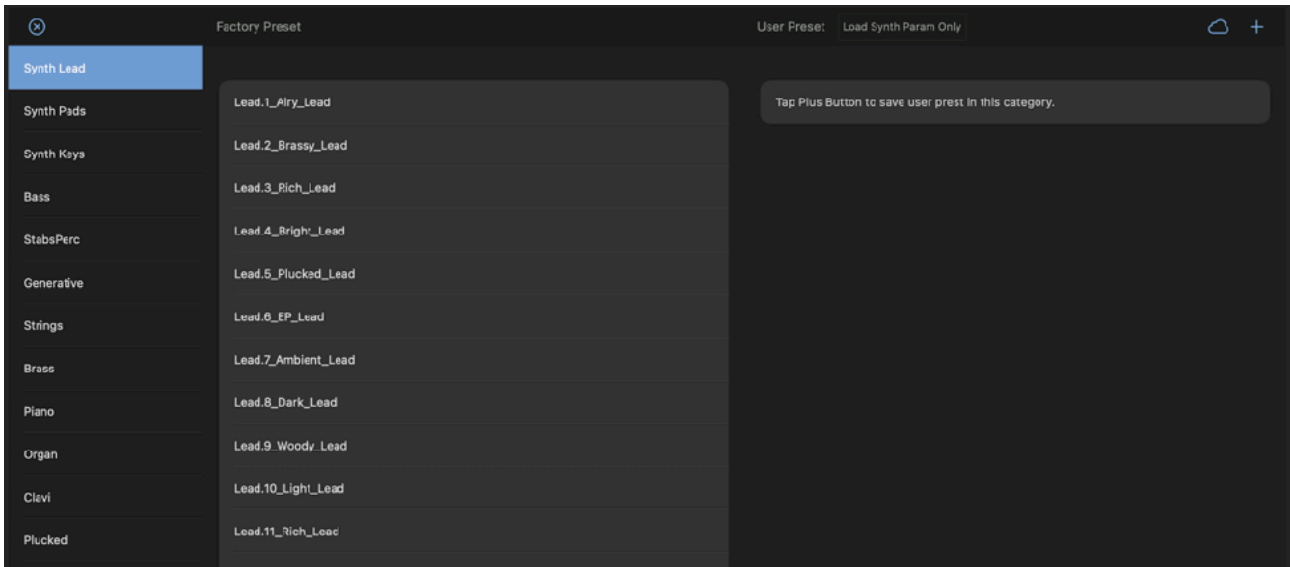

Load Factory Preset

Select a category from a list in the side bar. Tap on the name of the preset in Factory Preset Section to load.

 
Load User Preset

Select a category from a list in the side bar. Tap on the name of the preset in User Preset Section to load. If “Load Synth Param Only” is on, only synth parameters will be loaded. If the option is off, synth param and sequencer data will be loaded.

Delete User Preset

Tap and hold (right click on macOS) on the name of the preset in User Preset Section to show context menu and select Delete.

Save User Preset




Select a category from a list in the side bar. Tap on plus button to add a user preset.

Backup/Restore User Presets stored in the device




To back up or restore all user presets, tap on the iCloud icon to show export menu.

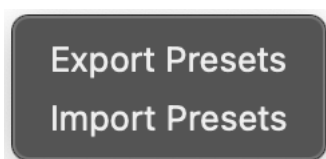

Select Export Presets to back up all of the user presets to iCloud.

Select Import Presets to import saved presets from iCloud.


Close File Browser

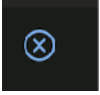

Tap on X icon to close the browser.

Setting Panel

General

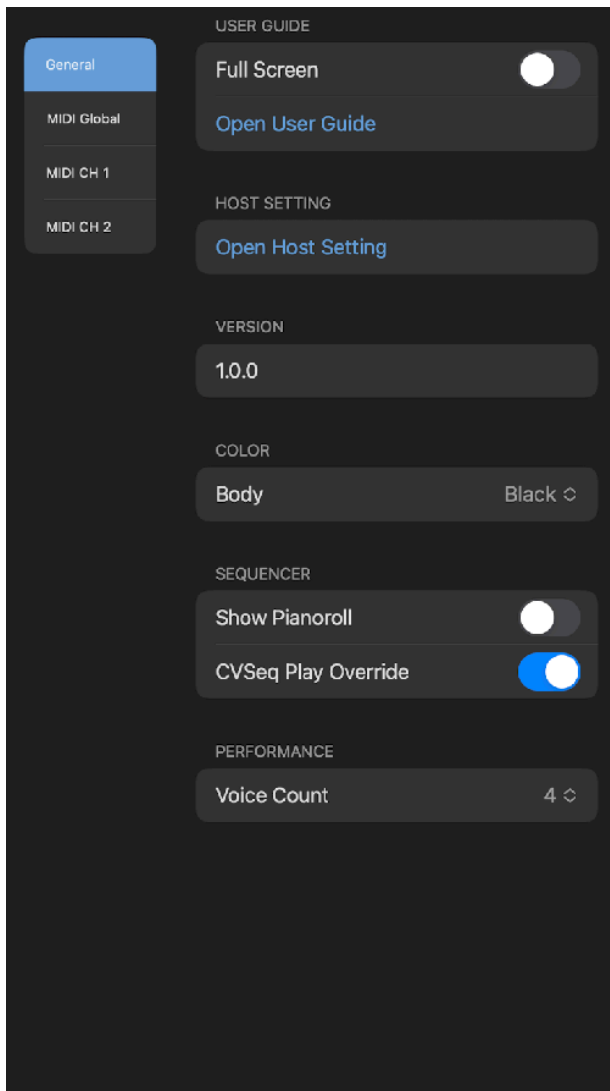

Full Screen

Enable this option to open User Guide in full screen (full window size on macOS).

Open User Guide

Tap this button to open User Guide

Open Host Setting

Tap this button to open Stand Alone Settings

Version

Indicate version number of the installed app.

Color

Select color. Options are black, navy and gray.

Show Piano Roll

Enable to show piano roll sequencer.


CVSEQ Play Override

Enable CVSEQ Play override option.

Voice Count

Set voice count.

MIDI Global

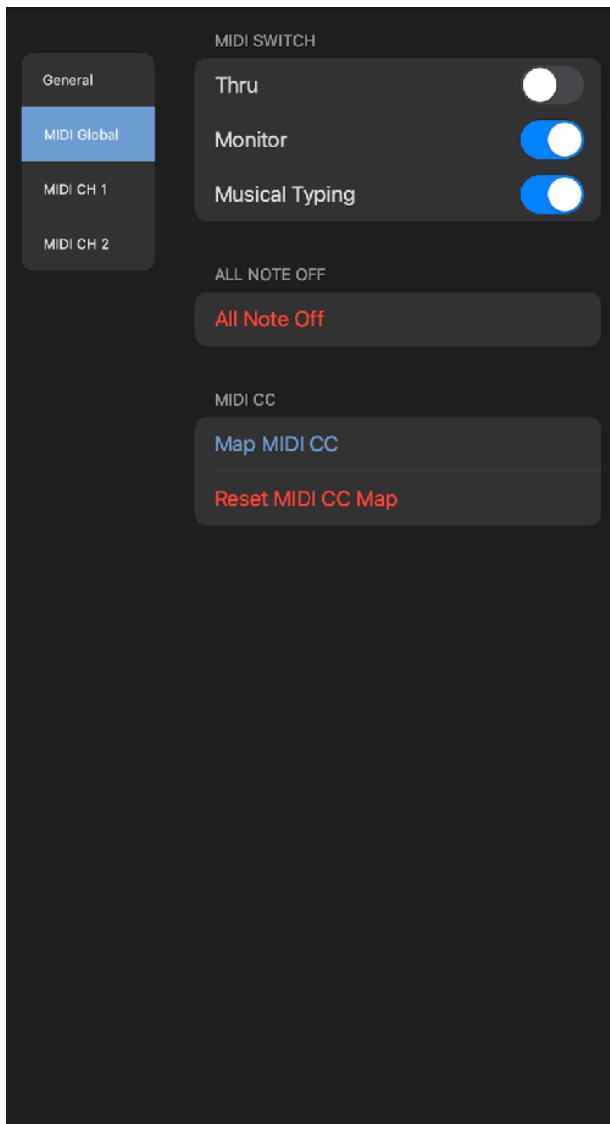

MIDI Thru

When MIDI thru is turned on, MIDI messages received in MIDI input will be send out from MIDI output. This setting is required when connected device's local switch is turned off.

MIDI Monitor

Enable / disable MIDI key input monitoring. Key Range of keyboard and sequencer is automatically adjusted based on the input note.

Musical Typing

Enable / disable computer keyboard to play MIDI notes.

All Notes Off

Send note off message to all notes.


Map MIDI CC

Open or Close Map MIDI CC view.

Reset MIDI CC Map

Remove all MIDI CC Map assignments.

MIDI Synth

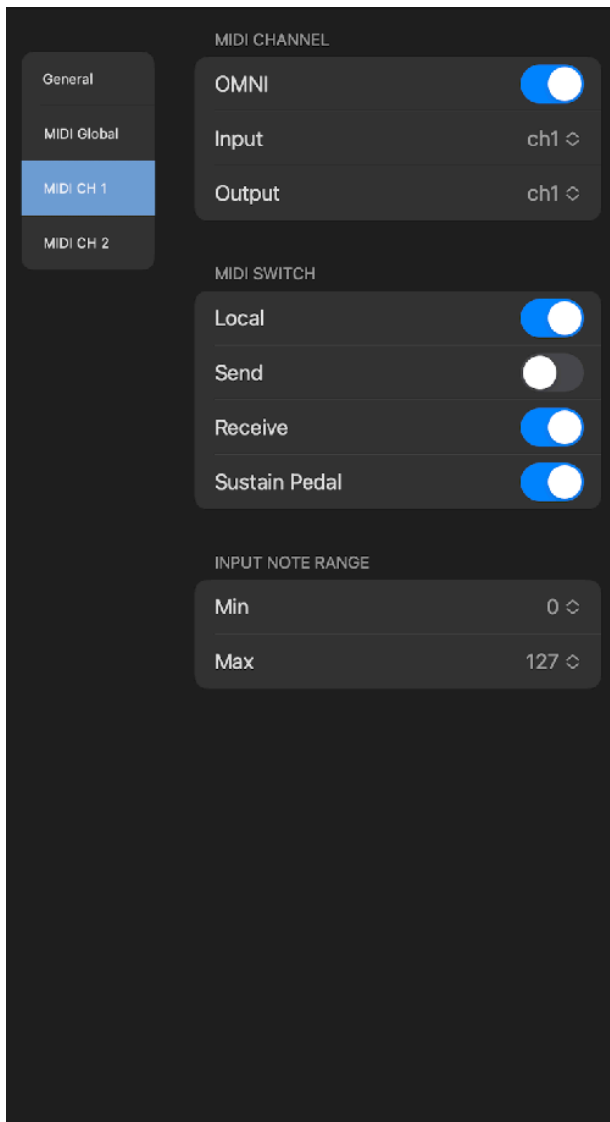

OMNI

Turn this on to connect all channel.

Input

Select input channel

Output

Select output channel

MIDI Local

When sending and receiving MIDI, connected device may send back the MIDI. This causes each notes to play twice. If this problem occurs, turn MIDI Local Switch OFF to disconnect User Interface from the audio engine.

MIDI Send

Enable / disable MIDI output.

MIDI Receive

Enable / disable MIDI input.

Sustain Pedal

Enable / disable to receive Damper Pedal message (MIDI CC #64).

Min


Set min value of MIDI note input.

Max

Set max value of MIDI note input.

Stand Alone Setting

AbletonLink

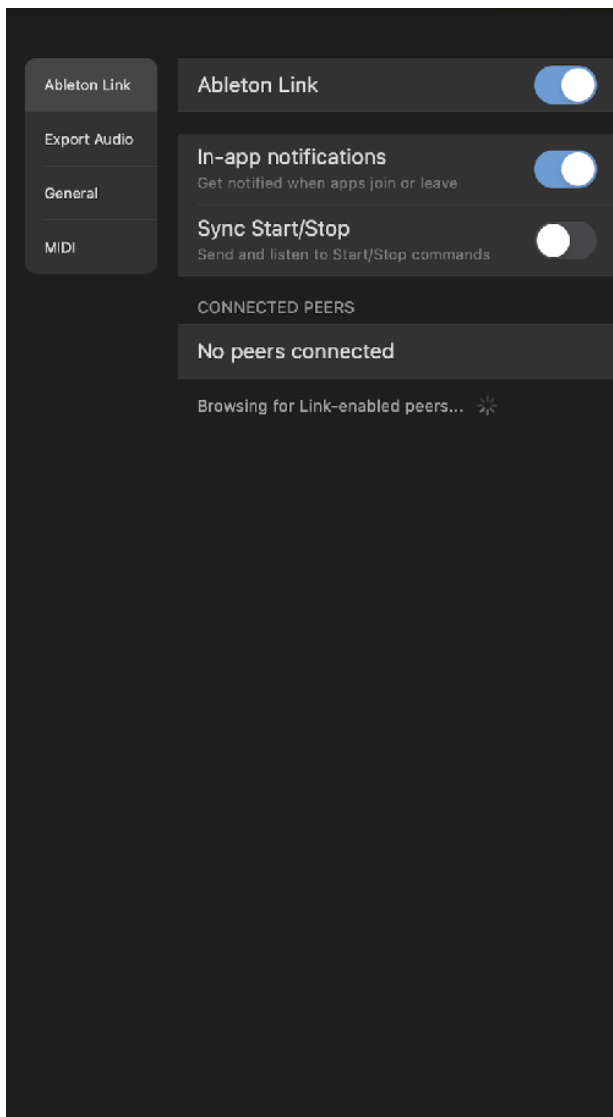

Ableton Link is a new technology that synchronizes beat, phase and tempo of Ableton Live and Link-enabled iOS apps over a wireless network. It lets you play devices together with the freedom of a live band. Anyone can start and stop their part while others keep playing, and anyone can adjust the tempo and the rest will follow. You can use Link to play with several instances of Ableton Live, with Live and iOS apps, or even without Live in your setup: using Link-enabled apps on multiple devices, or multiple apps on the same device.

Ableton Link

Switch on to enable Ableton Link.

In-app notification

Switch on to displays a message when an Ableton Link enabled app is connected.

Sync Start/Stop


Switch on to synchronize start and stop with connected apps.

Connected Apps

Indicate number of currently connected apps.

Ableton Link requires Wireless Local Network Connections. Your device and other Link-enabled devices must be connected to the same local network.

Export Audio

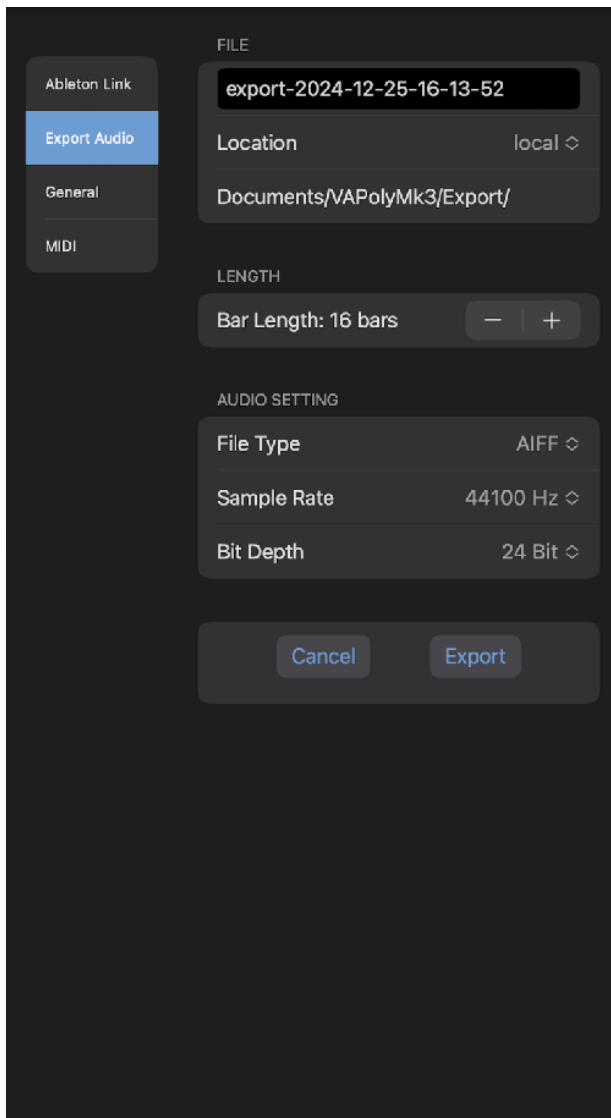

Save As

Specify name of the audio file to export.

Location

Select location for the audio file to be stored. Options are Local or iCloud.

Length (Bars)

Length of the audio to be recorded. Specify the length by number of bars.

File Type

Select file type of the audio file. Options are AIFF, WAV, CAF and ACC.

Sample Rate

Select a sample rate of the audio file. Options are 44.1KHz, 48KHz, 88.2KHz and 96KHz.

Bit Depth

Specify bit depth of the audio file. Options are 16 bit, 24 bit and 32 bit.


Export

Tap export to export audio file.

Cancel

Tap cancel to return to the home page of the setting panel.

General

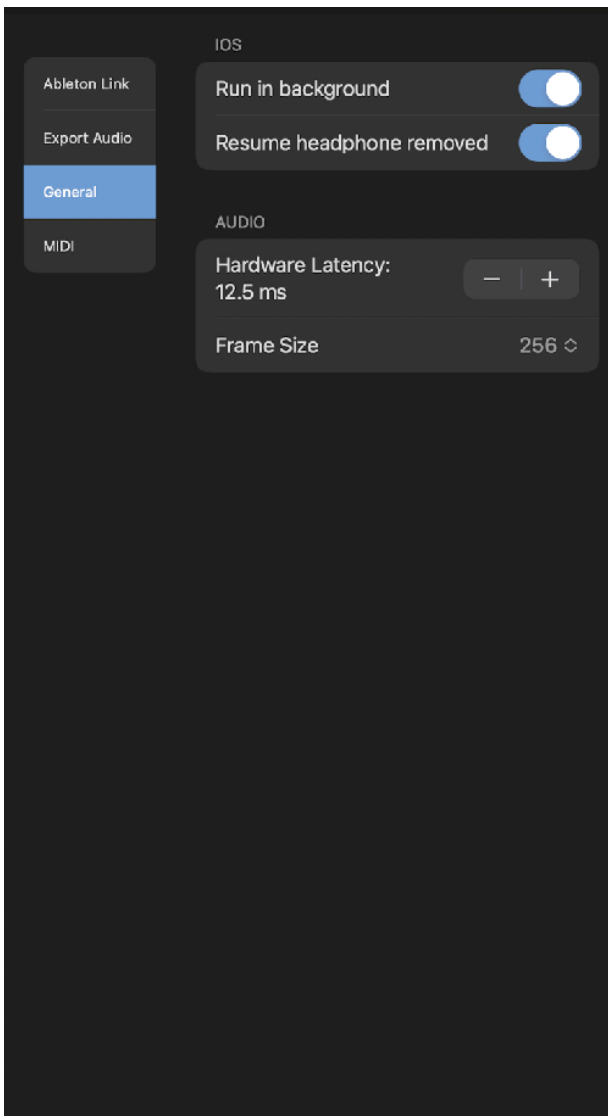

Run in Background

Turn this switch on to allow app to play continuously when the app enters in the background.

Resume Headphone Removed

Turn this switch on to allow app to play continuously when headphone is disconnected.

Hardware Latency

When Ableton Link is enabled, playback is synchronized to the Link-enabled devices. If there is a latency, output signal may not be aligned with the beginning of the each step.


In order to adjust the latency, set time in milliseconds in Hardware Latency. This value is used to compensate the latency of the output signal.

The latency varies on audio Interface and sample rate. Default value is 12.5 millisecond (sample rate is 44.1KHz)

Frame Size

Frame Size (Buffer Size) is a number of samples contained in an audio buffer. Higher frame size increases system performance but increases latency. Lower frame size decrease latency but decreases system performance. If you experience a problem with system performance, set higher frame size to improve the performance. Default setting is 256.

MIDI

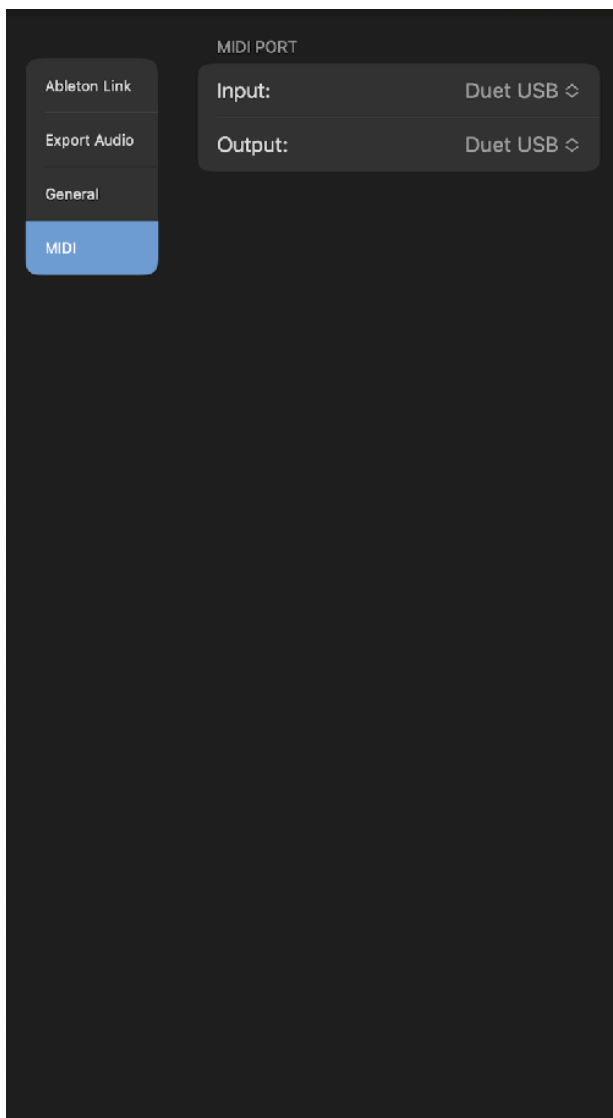

Input


Select MIDI input port

Output

Select MIDI output port


Bluetooth (BLE) MIDI

Central

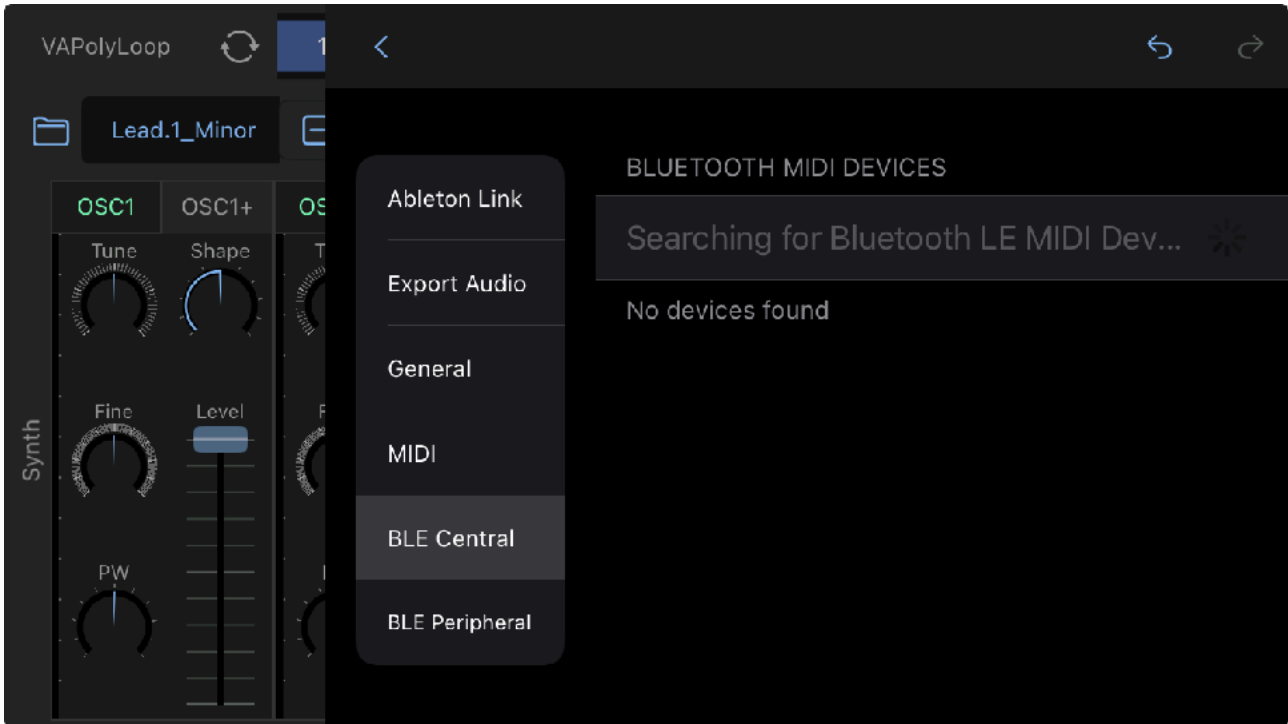

Open Bluetooth MIDI Central, which list available bluetooth devices. Select a name to connect to the device.

Peripheral

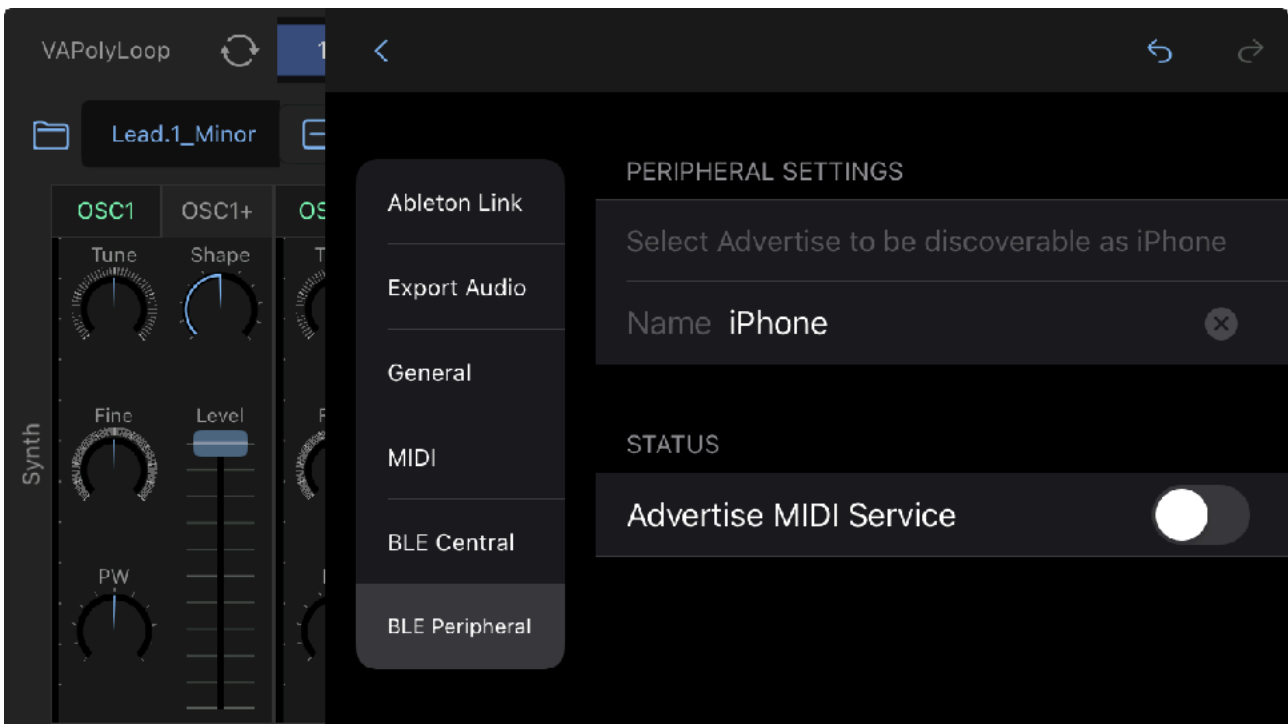

Open Bluetooth MIDI Peripheral. Turn Advertise MIDI Service switch on to makes the device to be discoverable from the other Bluetooth MIDI devices.

Export Audio

Prepare for exporting audio

1. Stop playback

Make sure the playback is stopped.

2. Select the first clip to play

Open clip editor and select a clip which should be played at first.

3. Turn off metronome

Make sure that metronome is turned off.

Adjust export settings

1. Save As

Type in file name if necessary.

2. Length

Set total length of the recordings by number of bars. This length should include the length of the delay or reverb tail.

3. Location

Select location to save the file. Options are local and iCloud.

4. File Type

Select a file type. Options for linear PCM format are AIFF, WAV or CAF. For compressed audio file, choose AAC. If the exported audio file is going to be edited in a different application, it is recommended to choose linear PCM format.

5. Sample Rate

Select sample rate. Options are 44.1KHz, 48KHz, 88.2KHz and 96KHz.

6. Bit Depth


Select bit depth. Options are 16 bit, 24 bit and 32 bit. Higher number results in better quality. If the exported file is going to be used in a different application, make sure that the which bit depth of the selected file type is supported by the application. (* 32 bit may not be supported in some applications).

Export Audio File

Tap export button to generate audio file and save the file in the specified location. When exporting the file is completed, browser can be open to audition the exported file.

Map MIDI CC

Tap “Map MIDI CC” in “MIDI Global” of the setting panel to show MIDI CC Map View. Use “Synth” button in tool bar to select a synth section or effects to map MIDI CC. Tap “Hide MIDI CC” in “MIDI Global” of setting panel to close MIDI CC Map View.

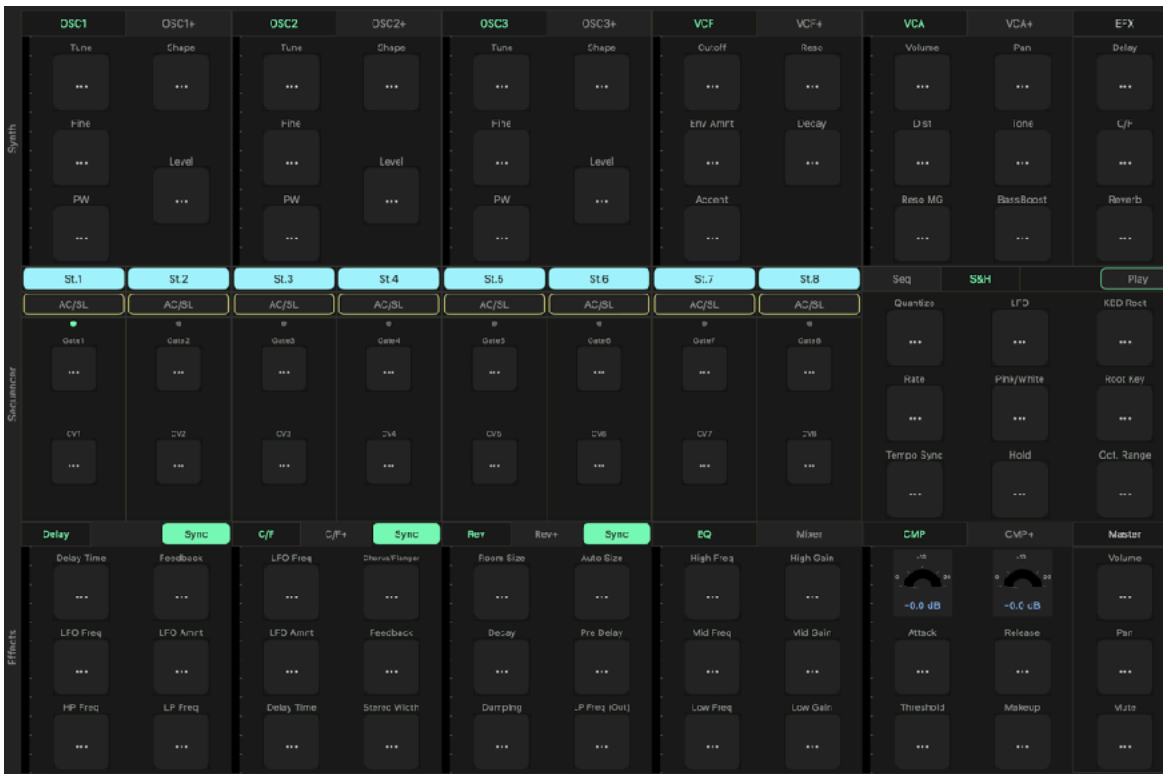

To make a MIDI CC (Continuous Controller) assignment, Tap a button then turn a knob on MIDI controller. The first MIDI CC number detected will be assigned to the parameter.

When CC is assigned, the button shows the CC number.

To cancel the assignment or to remove the mapping, tap the button.

To remove all assignments, select “Reset MIDI CC Map” in MIDI Global of the setting panel.

All the MIDI CC assignments are restored when app is launched in the next time.

Override Automation

When a parameter is controlled by MIDI controller, it is not possible to automatically override automation. To override, turn off automation switch of the parameter or turn the dial of the parameter on screen that will stop the automation and the parameter can be controlled freely by MIDI controller.

MIDI Program Change

Program Change is received as following.

Factory: Bank (CC#0) = 0, Sub (CC#32) = [0, 1], Program = [0, 127] => preset [0, 255]
 Plugin: Bank (CC#0) = 1, Sub (CC#32) = 0, Program = [0, 127] => Preset Number

Presets stored in iCloud Drive can't be selected by the MIDI program change.

Use External MIDI Keyboard with Stand Alone

1. Open host setting
2. Select MIDI from side bar menu. Set input MIDI port and output MIDI port.
3. Close host setting
4. Select MIDI Synth1 from side bar menu. Make sure “Receive” switch is turned on. Adjust channel and note range.
5. To stop hanging note, select MIDI Global from side bar menu, Tap on “All Note Off”.

Use MIDI Foot Pedal

CC#11 and CC#64 are supported for MIDI Foot Pedal. Targets of Expression can be selected in KBD Control Routing Panel. Sustain switch can be used to sustain currently played note.

Undo / Redo



1. Tap Undo / Redo button. Tap Undo to undo previous operation. Tap Redo to redo previous undo operation.

* Some operation such as play, stop or record are excluded from undo / redo operation.

* On macOS, turn on “Musical Typing” to enable keyboard shortcut, command + z for undo and shift + command + z for redo.


macOS

Stand Alone on macOS supports menu bar, keyboard shortcuts, context menu and touch bar. AUv3 plug-in on macOS supports keyboard shortcuts and context menu.

Menu Bar



Application

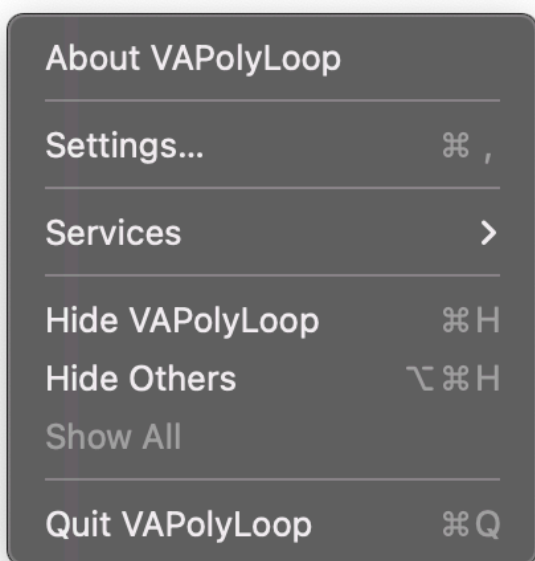


Open a window to display version information.

Open Preference window.

Quit this application.

File

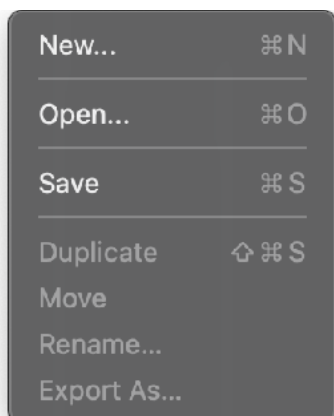


Reset all parameters and sequence data.

Open a preset from iCloud drive.


Save a preset to iCloud drive.

Edit

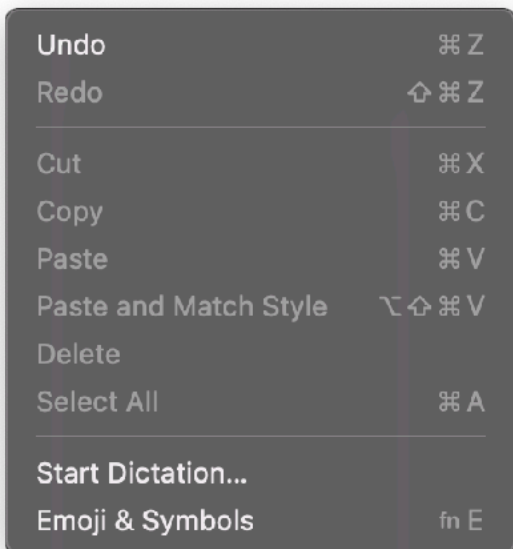


Edit Commands are enabled when typing text.

View

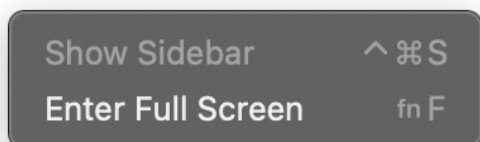

Enable/disable full screen mode.

 Export




Open Export Audio Page in Setting Panel.


Window



 Help




Preference

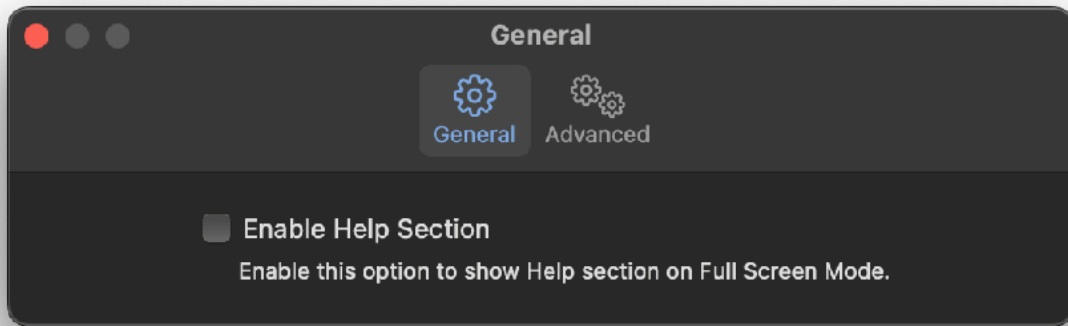

Enable Help Section

Enable this option to show Help Section on Full Screen Mode.

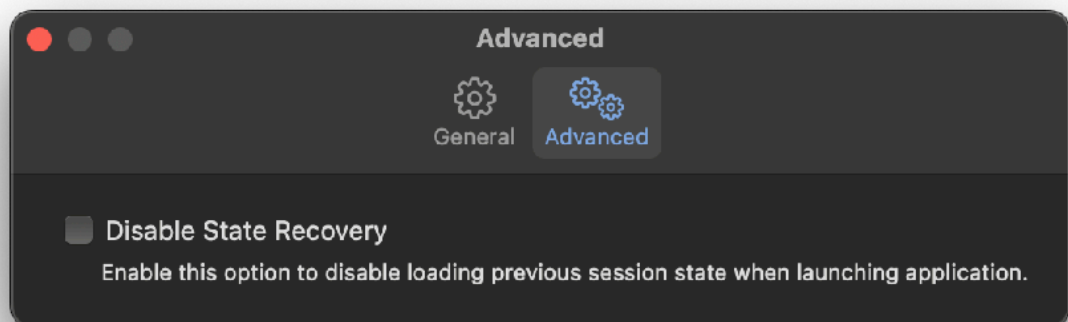

Disable State Recovery

When application is launched, state of the previous session is automatically loaded by default. Check this option to disable state recovery, so the application always start in default state.

Touch Bar (MacBook Pro)



1. Play / Stop


Tap to play / stop sequencer

2. Tempo


Adjust tempo. Range of the slider is from 20 BPM to 240 BPM.

Use Computer Keyboard as MIDI Keyboard

Enable Musical Typing option in setting.

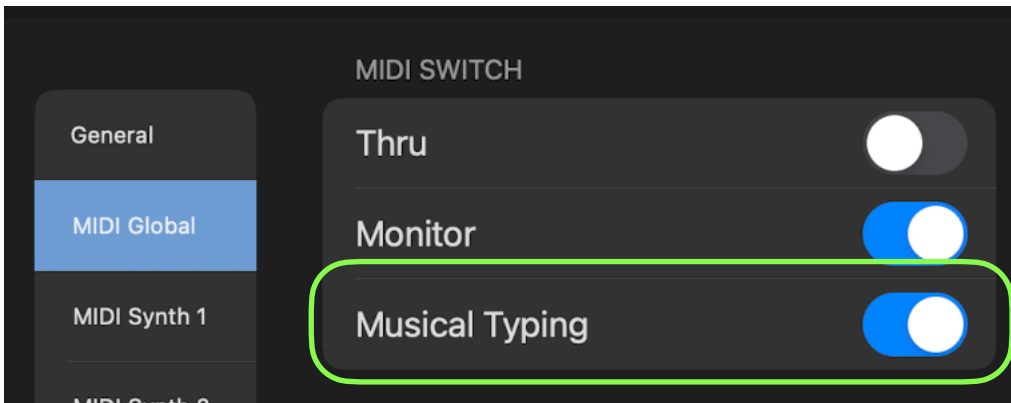

Keys are mapped as shown in the figure below.

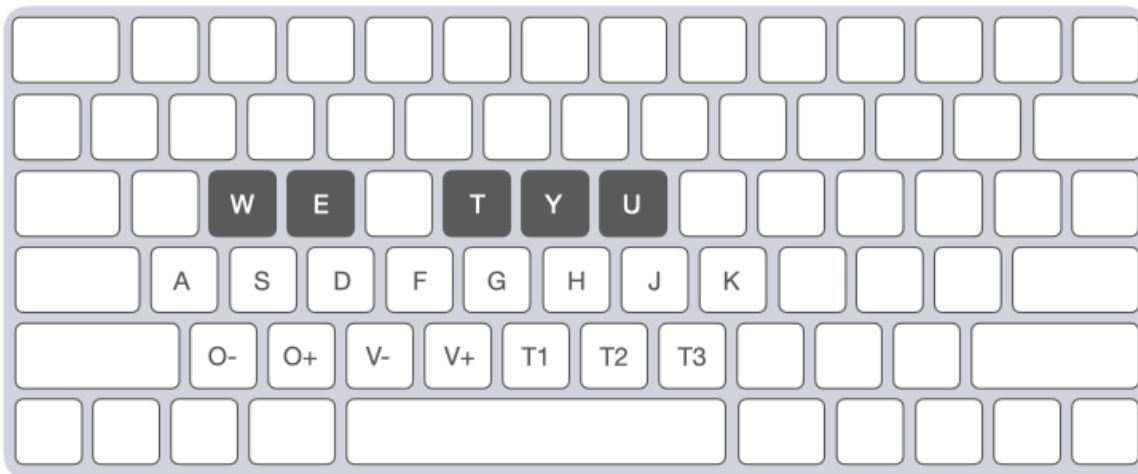

Change Octave

[O-] Press Z key to select one octave below.
[O+] Press X key to select one octave above.

Change Velocity

[V-] Press C key to decrease velocity.
[V+] Press V key to increase velocity.

Set Timbral

[T1] Press B key to select Layer.
[T2] Press N key to select Synth1.
[T3] Press M key to select Synth2.

Keyboard Shortcut

Command	Key	AUv3	Note
New	Command-N	N/A	
Open	Command-O	N/A	
Save	Command-S	N/A	
Undo	Command-Z	✓	
Redo	Shift-Command-Z	✓	
Cut	Command-X	✓	Available for Text Input
Copy	Command-C	?	
Paste	Command-V	?	
Delete	Command-Delete	?	
Select All	Command-A	?	
Enter/Exit Full Screen	fn-F	N/A	
Play/Stop	Space	?	
Change Focus	Tab	?	
List Up	Arrow-Up	?	
List Down	Arrow-Down	?	
List Select	Enter	?	


? : (AUv3) Availability is depends on the host application, which can disable these functions.

* Some of the keyboard shortcut will be available in the future version update.


AUv3 on Apple Garage Band (Mac)

Load Plug-in


1. Launch GarageBand.
2. Choose a project dialogue window appears. Select a project and click on Choose.

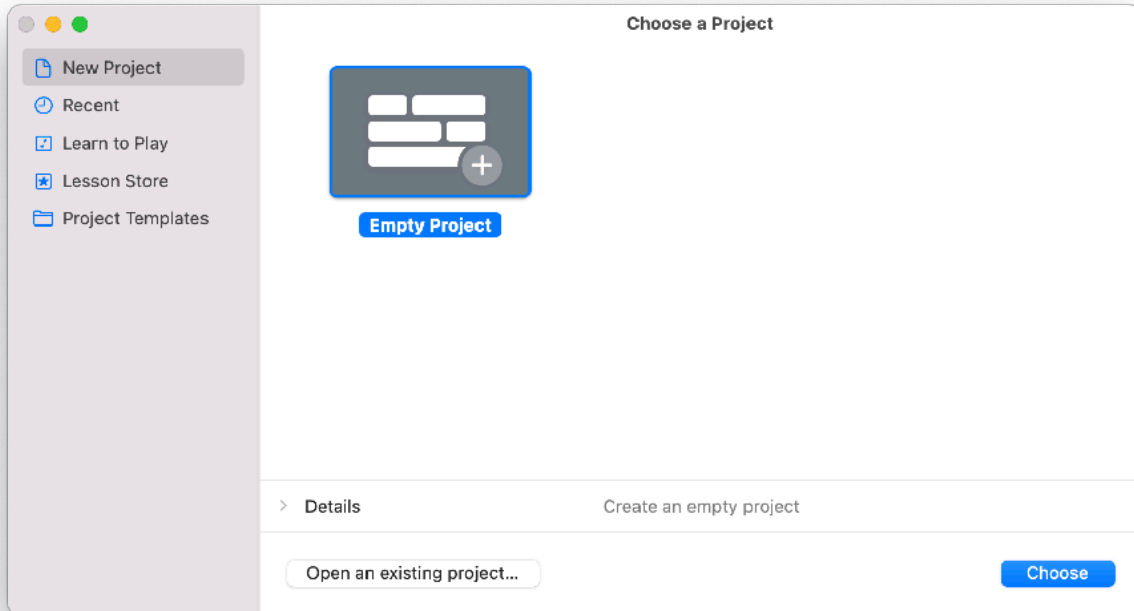


3. Choose a track type dialogue appears. Select Software Instrument and click Create.

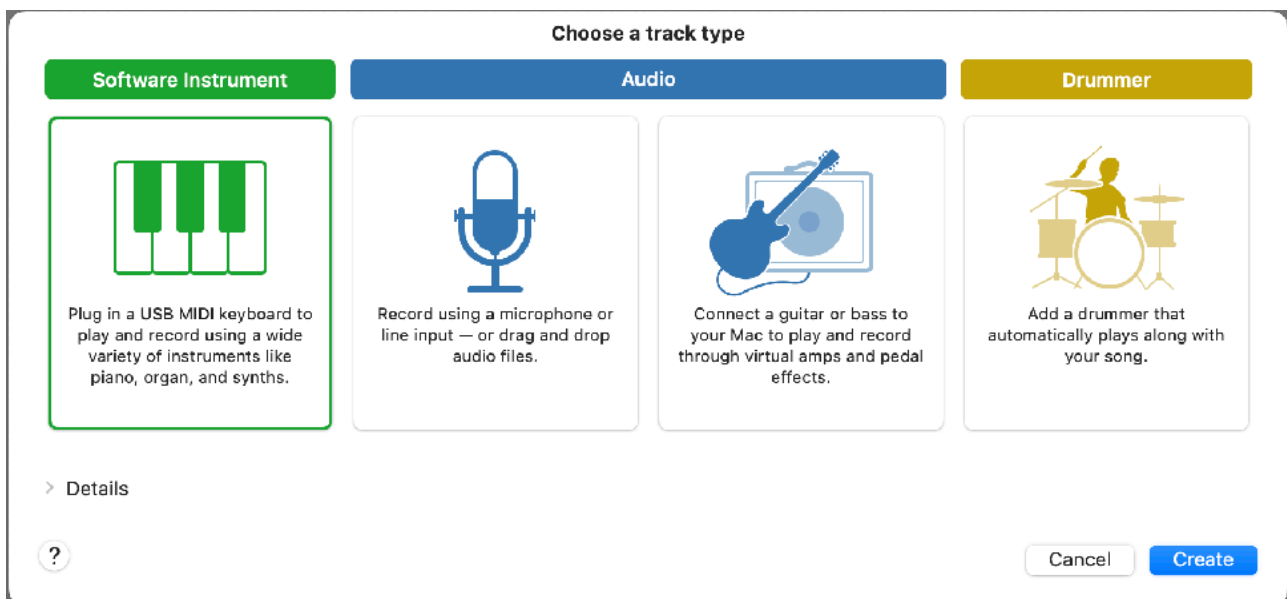


4. Click Plug-ins in Track Section.

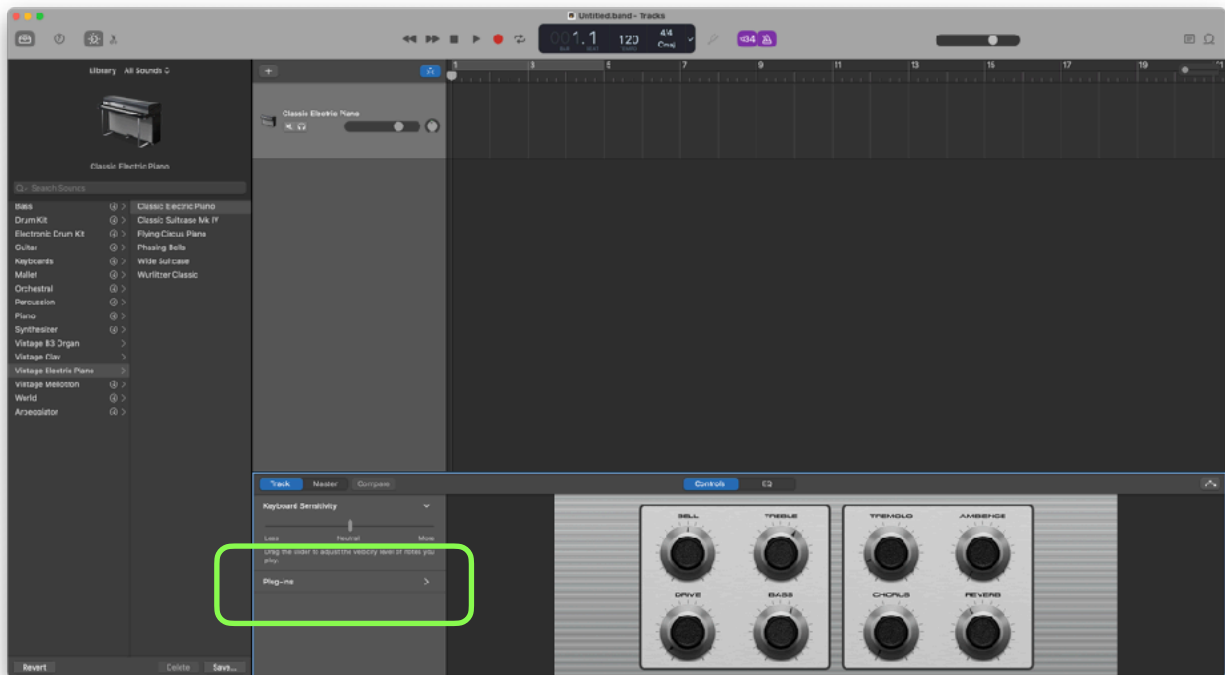


5. Click arrows at the right side of the blue button “E-Piano”.

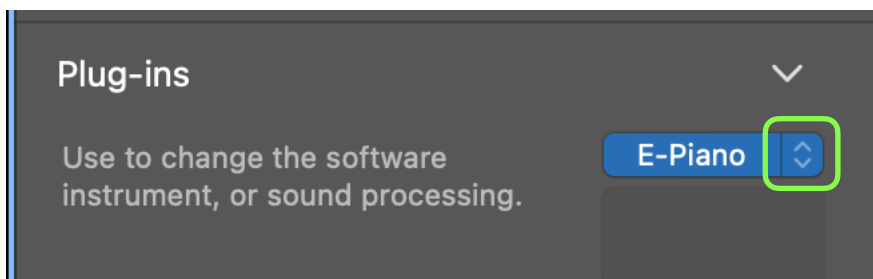

6. Select AU Instruments > RTMS > VAPolyLoop

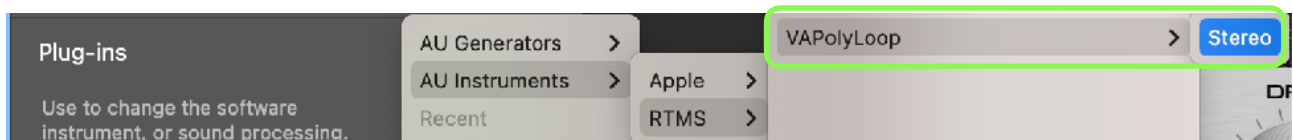

7. If plug-in window doesn't displayed. Tap blue button.

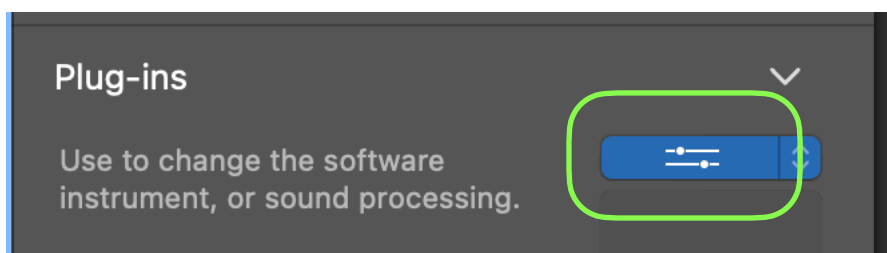

Activate Plug-In

After loading VAPolyLoop or opening a project file, DSP engine of VAPolyLoop may not be running.


In order to start the DSP engine, please do one of the followings.

- Press Play button on GarageBand.
- Play MIDI notes from GarageBand.

To play midi note by computer keyboard, select “Window > Show Musical Typing” from menu bar of the Garage Band. While the Musical Typing window is displayed, type A for note C.

Offline Renering

To start Offline Rendering on Apple Garage Band, select Cycle Range and select “Share > Export Song to Disk” from menu bar of the Garage Band. Selected Cycle Range will be rendered.

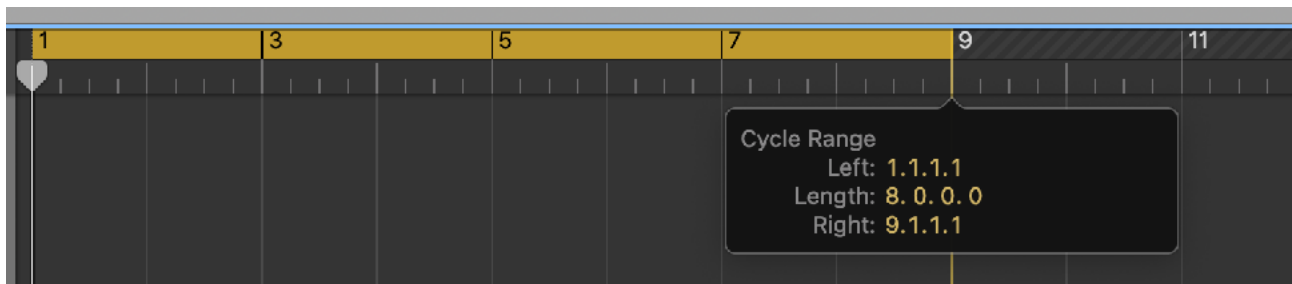

The followings are a few tips for offline rendering on Apple Garage Band.

- Make sure to save your project before performing offline rendering.
- Audition before initiating offline rendering. In order to perform offline rendering, DSP engine of VAPolyLoop needs to be running. Please press play on GarageBand and make sure that DSP engine is running.
- If you are using clips, add an empty clip at the end and set the length to INF. Garage Band will stop rendering when audio level is dropped to inaudible level. This helps to record tail of the delay or reverb effect.


Known Limitations

- DSP Engine doesn't start until a user presses play button or play MIDI notes on GarageBand.
- Touch Bar shows blanc screen when showing button menu or context menu.
- GarageBand doesn't record MIDI notes from keyboards or sequencer of the VAPolyLoop plugin.


AUv3 on Apple Garage Band (iOS)

Load Plug-in


1. Launch Garage Band
2. Create a new song

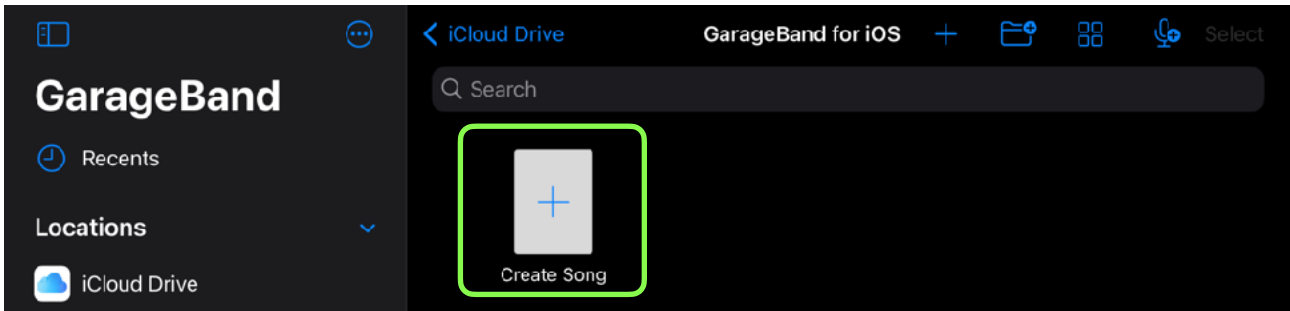

3. Select External > Audio Unit Extension

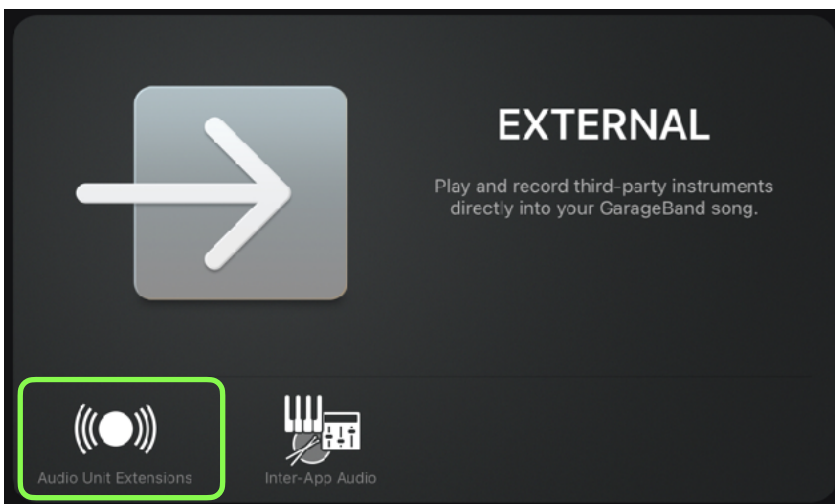

4. Select VAPolyLoop

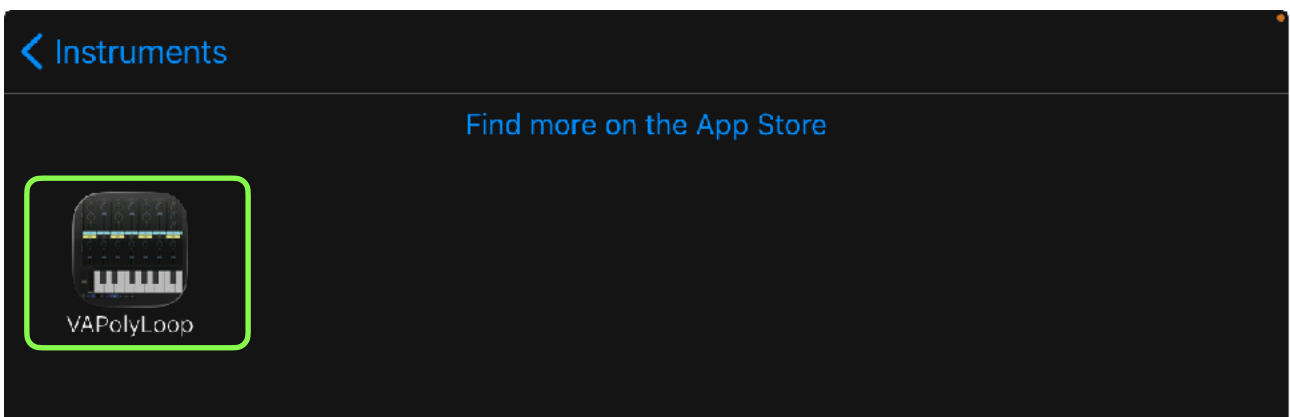

Change Plug-in Window Size

Tap arrow icon to resize the plug-in window.




Record Notes


Tap record button and play keyboard.



Edit Notes

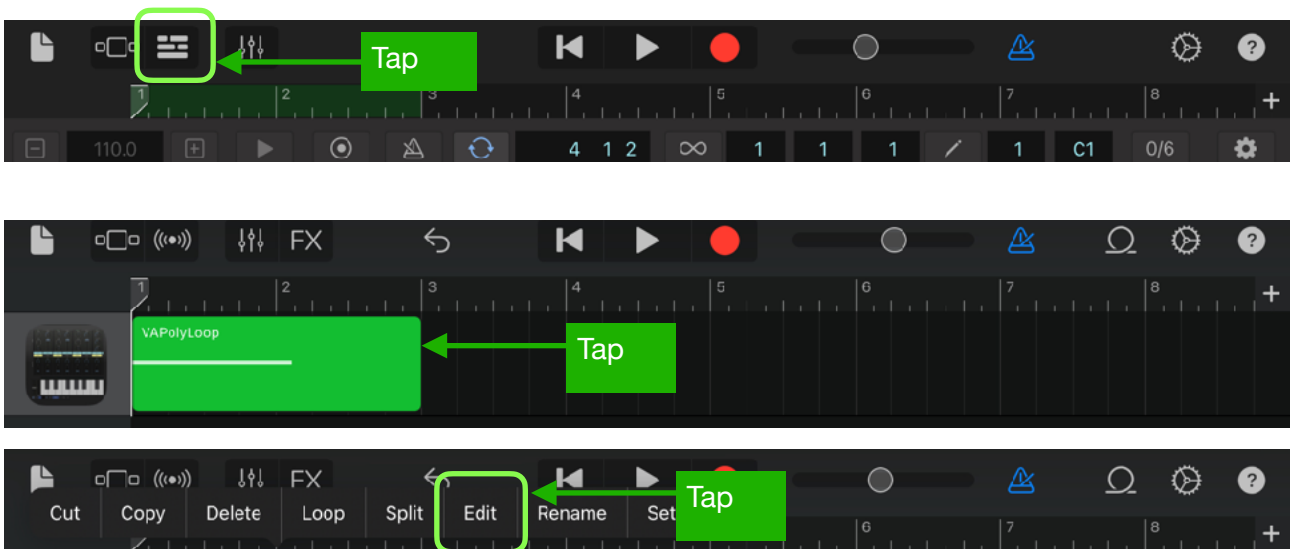


Select Edit from menu and edit notes. Tap “Done” to close the window.

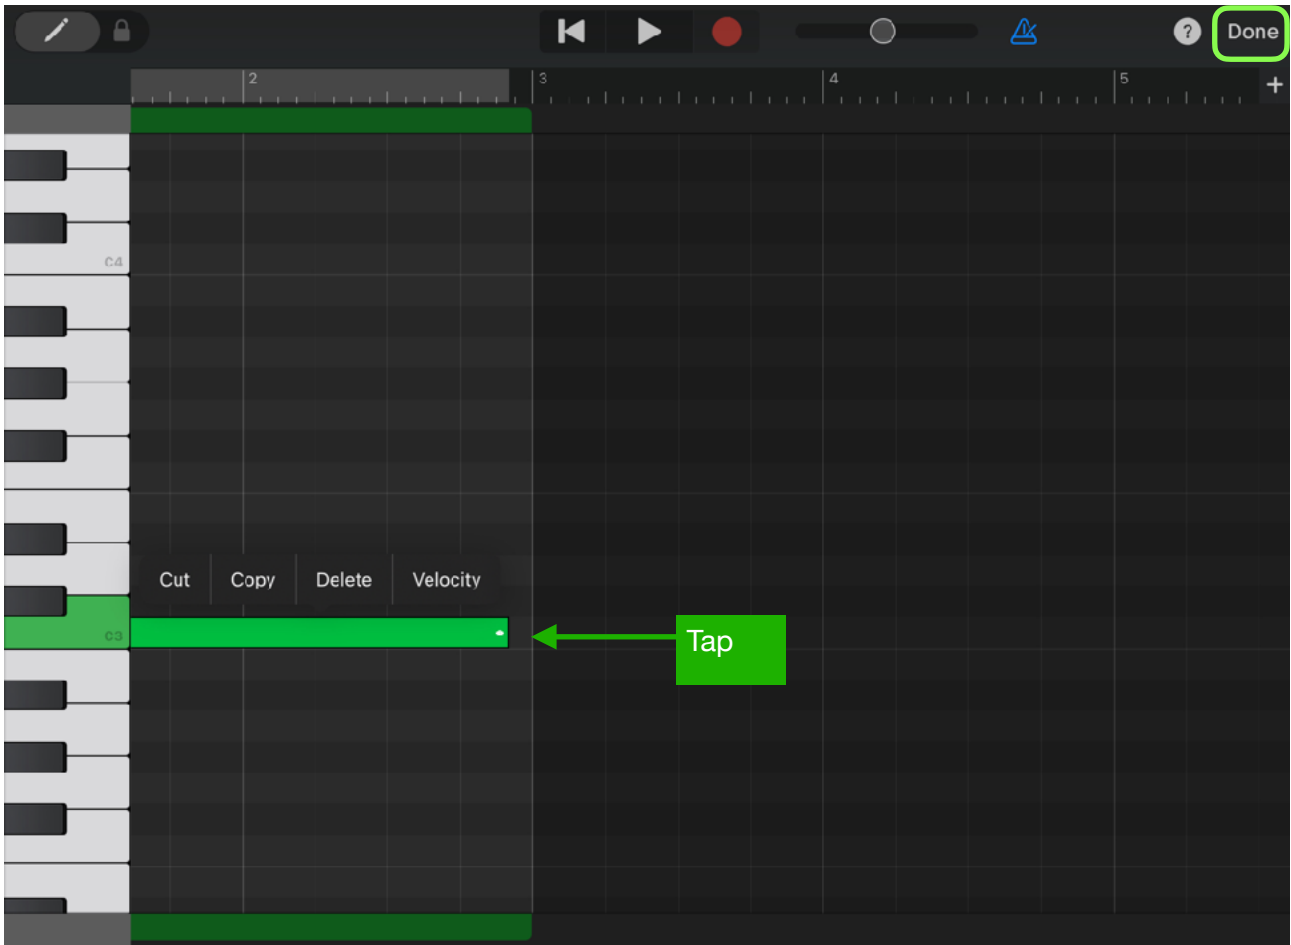


Save Project

Tap document icon to save the song.

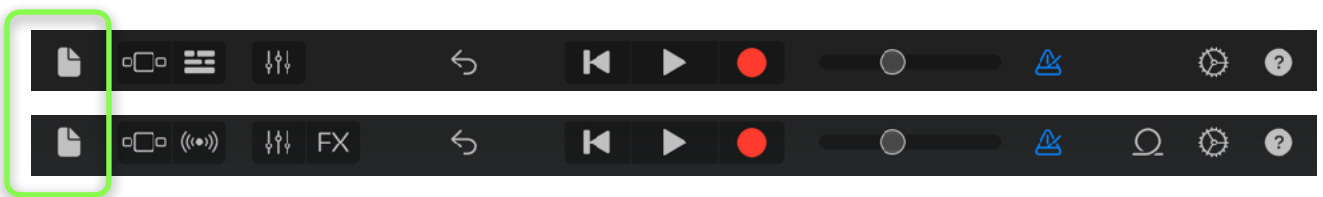


Host Sync

Tap Host Sync button to sync transport and tempo to host application.

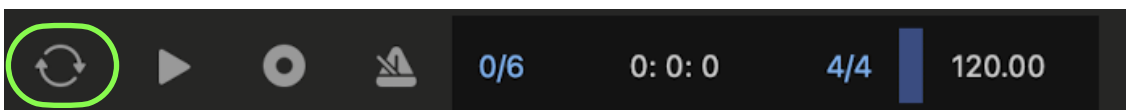

To disable transport sync, tap and hold sync button and select “Disable Transport Sync” from menu.

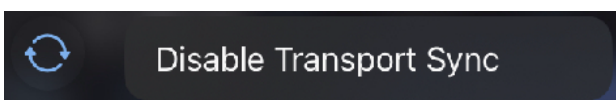

System Interruptions (iOS)

It is important to aware that system may interrupt playback in the following situations. Please make sure to test and make a plan to handle the situations.

1. Incoming calls or activating Siri

When receiving an incoming call or when activating Siri, it interrupts playback and send App to background. In order to avoid it occurs, turn off the followings in the Setting App.

- Do Not Disturb > Do Not Disturb > turn on.
- Siri & Search > Listen for “Hey Siri” > turn off.
- Siri & Search > Press Home for “Siri” > turn off.

2. Connecting or disconnecting a headphone

Headphone output has own DAC⁵ and own sample rate. The sample rate may be different form the sample rate of the audio engine. What will happens when connecting or disconnecting a headphone depends on the sample rates.

If the sample rates are same, playback continues when headphone is connected. When headphone is unplugged, playback will stop. You can change this behavior by turn Resume when headphone is unplugged on in Settings.

If sample rates are different, when connecting headphone or when disconnecting headphone stops playback and system will re-configure audio engine for the new sample rate.

The sample rate of the audio engine is set by an application or an audio interface. For example, when connecting an iOS device to Mac using a cable that came with your device, Inter Device Audio and MIDI on macOS uses 44.1KHz but Quicktime player app on macOS uses 48KHz.

If you are planning to connecting or disconnecting headphone for monitoring during playback, please make sure to test and learn what will occurs.

3. Changing sample rate setting

As described above, if sample rate of the audio engine is changed for any reasons, playback stops.

4. Media Reset

Under rare circumstances, the system terminates and restarts its media services daemon. When it occurs playback stops.

5. Pressing the Home button or sending App to background

When app is sent to background by pressing home button, showing notification center or any other reasons, playback stops. You can change this behavior by turn Run in Background on in Settings.

Additional Settings

Followings are other settings in the Settings App which you may want to adjusted.

- Display & Brightness > Auto-Lock > set to Never
- Sounds > turn off all system sound
- Notifications > Show Previews > set to Never
- Home Screen & Dock > Multitasking > Gestures > turn off

If you have installed apps that may send you a notifications or may interrupt playback, make sure to adjust settings of the apps to disable the functions.

If you are using Ableton Link, make sure that Local Network in Privacy is turned on. If you are using Bluetooth MIDI, make sure that Bluetooth in Privacy is turned on.

⁵ Digital to Analog Converter

Specification

Synthesizer

- Polyphonic Synthesizer

Oscillator 1, 2 & 3

- Continuously variable wave shape (triangle, sawtooth, square)
- Pulse width for square
- Tuning +/- 24 semitones
- Fine tuning +/- 50 cents
- Frequency Modulation (Exponential)
- Pulse Width Modulation

Filter

- Low pass filter: -24 dB per octave
- Frequency modulation: LFO
- EnvAmount Modulation: LFO
- Env Decay Modulation: LFO

Amplifier

- Envelope: Gate (AR)
- Amplitude modulation: LFO
- Pan modulation: LFO
- Distortion: Amount, Tone

LFO

- Wave shape: sine, saw, down saw, square, triangle, random
- Frequency Range: From 0.04Hz to 42.2Hz

Step Sequencer (Analog Style)

- 8 Steps
- Sample & Hold
- Clock Frequency: From 1 Hz to 20 Hz

Controllers

- Modulation Wheel, Pitch Bend Wheel, Ribbon Control

Effects

- Delay, Chorus, Flanger, Reverb, EQ and Compressor

Sequencer (Piano Roll)

Steps: 16 steps per bar
Loop Length: from 1 bar to 16 bars
Clip: 8 clips
Tempo: from 20 BPM to 999 BPM
Host Sync: On and Off

Delay

Delay Time	Range from 20ms to 1200ms
Feedback	Range from 0% to 100%
Highpass Filter	Range from 20Hz to 500Hz
Lowpass Filter	Range from 1000Hz to 20000Hz
LFO Frequency	Range from 0.01Hz to 10Hz
LFO Intensity	Range from 0.0 to 1.0 (from 0ms to +/- 10ms)
Effect Switch	ON or OFF
Sync Switch	ON or OFF
Frequency Range	From 0Hz to 22.05KHz (effect)

Chorus / Flanger

Delay Time	Range from 1ms to 40ms (chorus), from 1ms to 13ms / 20ms (flanger)
Feedback	Range from 0% to 100% (flanger)
Highpass Filter	Range from 20Hz to 500Hz
Lowpass Filter	Range from 1000Hz to 20000Hz
LFO Frequency	Range from 0.01Hz to 10Hz
LFO Intensity	Range from 0.0 to 1.0 Chorus: from 0ms to +/- 1ms Flanger: from 0ms to 12ms / 19ms / 39ms
Effect Switch	ON or OFF
Sync Switch	ON or OFF
Effect Selector	Chorus or Flanger
Frequency Range	From 0Hz to 22.05KHz (effect)

Reverb

Input lowpass filter	Range from 1KHz to 20KHz
Input high-pass filter	Range from 20Hz to 500Hz
LFO Frequency	Range from 0.01Hz to 10Hz
LFO Intensity	Range from 0.0 to 1.0
Pre Delay	Range from 1ms to 100ms
Size	Range from 0% to 100%
Auto Size Mode	ON or OFF
Decay	Range from 0% to 100%

Damp	Range from 0% to 100%
Output Lowpass Filter	Range from 1KHz to 20KHz
Early/Late Mix	Range from 0% to 100%
Tempo Sync	ON or OFF
Effect Switch	ON or OFF

Equalizer

Low Shelving	Frequency Range	Range from 21Hz to 1092Hz
	Gain	Range from -INF to +12dB
	High Pass Filter response	12dB / Oct
Mid Peak / Notch	Frequency Range	Range from 151Hz to 2389Hz
	Gain	Range from -14dB to +14dB
	Bandwidth	1 octave
High Shelving	Frequency Range	Range from 296Hz to 21096Hz
	Gain	Range from -INF to +12dB
	Low Pass Filter response	12dB / Oct

Compressor

Input Gain	Range from -20dB to 20dB
Input High Pass Frequency	Range from 20Hz to 185Hz
Threshold	Range from -40dB to 0dB
Makeup Gain	Range from 0dB to 20dB
Ratio	2, 4, 10
Attack	0.01ms, 0.1ms, 0.3ms, 1ms, 3ms, 10ms, 30ms
Release	0.1s, 0.3s, 0.6s, 1.2s, Auto
Dry / Wet	Range from 0% to 100%

*Appearance and specification of the product are subject to change without notice.

Release Notes

What's new in version 1.0

- Initial release

What's new in version 1.1.0

- Version 1.1.0 contains bug fixes and improvements.
- Added an Assignable Controller.
- Added an ability for transport control of host application or built-in piano roll sequencer to start and stop the step sequencer.
- Fixed a problem of midi note input monitoring.
- Fixed a problem than step sequencer starts running when AUv3 plugin is loaded in host application.

What's new in version 1.1.1

- Version 1.1.1 contains bug fixes and improvements.
- Fixed a problem that text color and background color of text input field displayed as white in some circumstances.
- Fixed a problem that preset can't be changed by external keyboard or sequencer if keypad is not visible on screen.
- Fixed a problem of slide time when slide switches are turned on in step sequencer.
- Added unison option to voice mode selector of step sequencer.
- Added options to change text size of control titles.