


VAPolyEnsemble

Polyphonic Synthesizer

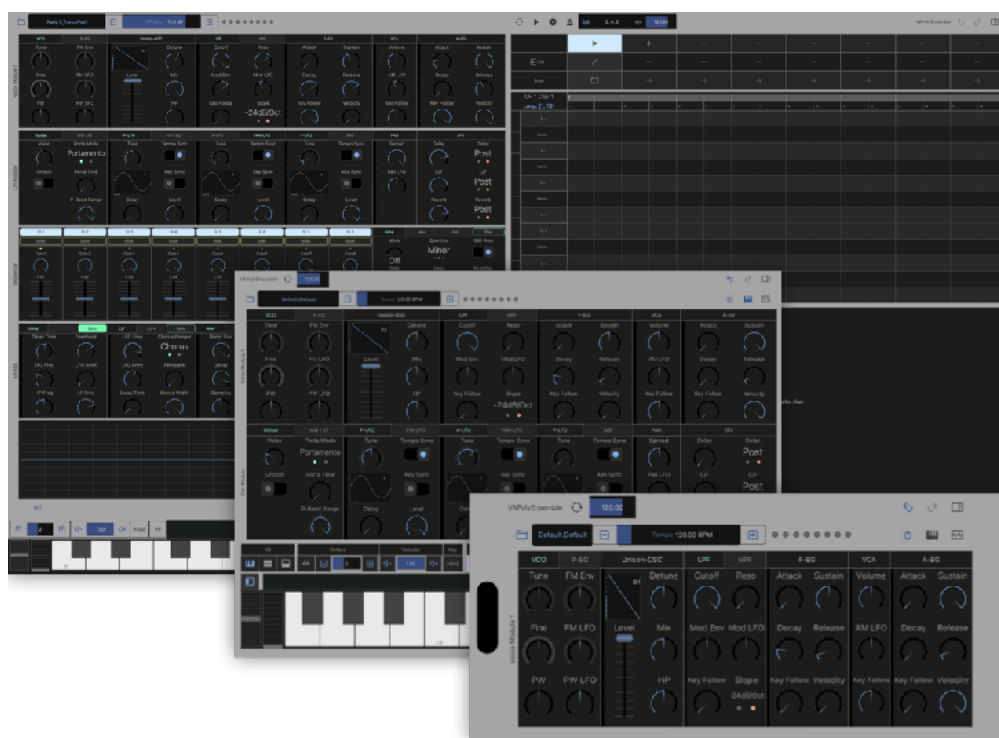

User Guide

Version 1.0.0

Table of Contents

Introduction	15
Privacy Settings	15
Main Features	15
System Requirements	15
Use as Stand Alone	16
Use as AudioUnit Extension (AUv3)	16
Factory Preset	16
User Preset	16
State Recovery	16
About MIDI Latency	16
Maximum Number of Touches	16
User Interface	17
Tool Bar	19
Controller	21
VCO	21
Unison-OSC	21
LPF	21
F-EG	21
VCA	22
A-EG	22
P-EG	22
HPF	22
Global	23
P-LFO	23
A-LFO	23
F-LFO	23
PAN	23
EFX	24
Mod Wheel / Aftertouch	24

PW-LFO	24
PAN-LFO	24
ARP	25
Step Sequencer	25
Modulation	27
Sample & Hold	27
Delay	29
Chorus / Flanger	29
Reverb	29
EQ and Mixer	29
Compressor	30
Master Output	30
Chorus / Flanger	31
Reverb	31
Mixer	31
Compressor	31
Key Pad	33
Keyboard	34
Visualizer	36
Sequencer (Piano Roll)	38
Clip Editor	39
Piano Roll Editor	40
Parameter Automation Editor	41
Synthesizer	42
Block diagram	42
Control Signal & MIDI Flow	43
VCO	44
Tune	44
Fine	44
PW (Pulse Width)	44

FM Env	44
FM LFO	44
PW LFO	44
Shape	44
Level	44
Detune	44
Mix	44
HP	44
Attack	44
Decay	44
Sustain	45
Release	45
Velocity	45
Key Follow	45
PAN	45
Spread	45
Pan LFO	45
Low Pass Filter	46
Cutoff	46
Resonance	46
Mod Env	46
Mod LFO	46
Key Follow	46
LPF Slope	46
High Pass Filter	47
Cutoff	47
Resonance	47
Mod Env	47
Mod LFO	47
Key Follow	47

Gain	47
VCA (Amplifier)	48
Volume	48
AM LFO	48
Key Follow	48
ADSR (Envelope Generator)	49
Attack	49
Decay	49
Sustain	49
Release	49
Velocity	49
Key Follow	49
LFO	50
Tune	50
Shape	50
Delay	50
Tempo Sync	50
Key Sync (Key Re-Trigger)	50
Level	50
ARP	51
Arp Pattern	51
Arp Rate	51
Gate	51
Arp Switch	51
Arp Tempo Sync	51
Global	52
Voice	52
Unison	52
OSC Sync	52
Portamento Mode	52

Portamento Time	52
Pitch Bend Range	52
Mod Wheel & Aftertouch	53
Vibrato	53
Tremolo	53
CF Offset	53
RE Offset	53
EFX Send	54
Delay Send	54
C/F Send	54
Reverb Send	54
Delay Pre/Post	54
C/F Pre/Post	54
Reverb Pre/Post	54
Output Mixer	55
Delay Level	55
C/F Level	55
Reverb Level	55
Master Output	55
Volume	55
Pan	55
Mute	55
Step Sequencer	56
Step Switch	56
Slide Switch	56
Gate	56
CV	56
Play	57
Mode	57
Rate	57

Tempo Sync	57
Quantize	57
Steps	57
Gate	57
KBD Root	57
Root Key	57
Octave Range	57
Clock Division	58
Mod Amount	58
Target	58
Mod Attack	58
Mod Release	58
Sync	58
Hold	59
LFO1/LFO2	59
Pink/White	59
Sync with Transport Control	60
Assignable Controllers	61
Effects	62
Delay	62
Signal Flow	62
Delay Time	62
Regeneration	62
Modulation	62
Chorus / Flanger	63
Signal Flow	63
Input Signal Level	63
Effect Type	63
Modulation Speed	63
Modulation Width	63

LFO Shape	63
Stereo Width	63
Regeneration	63
Filters	64
Reverb	65
Signal Flow	65
Input Filter	65
Pre Delay	65
Modulation Speed	65
Modulation Width	65
Size and Decay	65
Damping	65
Output Filter	65
Early / Late Mix	66
Equalizer	67
Low Shelving	67
Mid Peak / Notch	67
High Shelving	67
Compressor	68
Overview	68
Threshold and Ratio	68
Attack and Release	69
Side Chain High Pass Filter	71
Makeup Gain	71
Gain Reduction Meter	71
Input Gain	71
Dry / Wet	71
Peak Limiter	72
Key Pad	73
Select Key Pad	73

Select Octave	73
Select Pitch Shift	73
Select Preset Type and Bank	73
Select Top and Mid Panel	73
Play Switch for Step Sequencer	74
Override Switch for Step Sequencer	74
Ribbon Controller	74
Keyboard	75
Select Keyboard	75
Select Key Range	75
Use Modulation Wheel	75
Use Pitch Wheel	75
Set Velocity	76
Use Key Hold	76
Top & Mid Panel	76
Play Switch for Step Sequencer	76
Override Switch for Step Sequencer	76
Show Double Keyboard	77
Ribbon Controller	77
Sequencer (Piano Roll)	78
Clip Editor	79
Load Clip	79
Play/Stop Clip	79
Edit Piano Roll	79
Add edit button	79
Set Loop Mode	79
Auto Select Editor	79
Piano Roll Editor	80
Select Time Range and Loop Length	80
Select Note Range	80

Add Note	80
Delete Note	80
Scale Menu	80
Edit Menu	80
Chromatic Scale	81
Heptatonic Scale	81
Root Key	81
Set Length	82
Quantize	82
Set Velocity	82
Copy	82
Paste	82
Delete	82
Velocity Editor	83
Parameter Automation Editor	84
Play Sequence	85
1. Set host sync	85
2. Set tempo	85
3. Set loop	85
4. Set swing	85
5. Set metronome switch	86
6. Play	86
Record Sequence	86
1. Set recording mode	86
2. Play sequence	86
3. Record notes	86
4. Record parameters automation	86
5. Stop recording	86
Preset	87
File Menu	87

New...	87
Open...	87
Save	87
Preset Browser	88
Load Factory Preset	88
Load User Preset	88
Delete User Preset	88
Save User Preset	88
Backup/Restore User Presets stored in the device	88
Close File Browser	89
Setting Panel	90
General	90
Full Screen	90
Open User Guide	90
Open Host Setting	90
Version	90
Color	90
Font Size	90
Show Piano Roll	90
CVSEQ Play Override	90
Voice Count	90
Show Wave Shape Diagram	90
MIDI Global	91
MIDI Thru	91
MIDI Monitor	91
Musical Typing	91
All Notes Off	91
Map MIDI CC	91
Reset MIDI CC Map	91
MIDI Synth	92

OMNI	92
Input	92
Output	92
MIDI Local	92
MIDI Send	92
MIDI Receive	92
Sustain Pedal	92
Min	92
Max	92
Stand Alone Setting	93
AbletonLink	93
Ableton Link	93
In-app notification	93
Sync Start/Stop	93
Connected Apps	93
Export Audio	94
Save As	94
Location	94
Length (Bars)	94
File Type	94
Sample Rate	94
Bit Depth	94
Export	94
Cancel	94
General	95
Run in Background	95
Resume Headphone Removed	95
Hardware Latency	95
Frame Size	95
MIDI	96

Input	96
Output	96
Bluetooth (BLE) MIDI	97
Central	97
Peripheral	97
Export Audio	98
Prepare for exporting audio	98
1. Stop playback	98
2. Select the first clip to play	98
3. Turn off metronome	98
Adjust export settings	98
1. Save As	98
2. Length	98
3. Location	98
4. File Type	98
5. Sample Rate	98
6. Bit Depth	98
Export Audio File	98
Map MIDI CC	99
MIDI Program Change	99
Use External MIDI Keyboard with Stand Alone	100
Use MIDI Foot Pedal	100
Undo / Redo	101
macOS	102
Menu Bar	102
Application	102
File	102
Edit	103
View	103
Export	103

Window	104
Help	104
Preference	105
Enable Help Section	105
Disable State Recovery	105
Touch Bar (MacBook Pro)	106
1. Play / Stop	106
2. Tempo	106
Use Computer Keyboard as MIDI Keyboard	107
Keyboard Shortcut	108
AUv3 on Apple Garage Band (Mac)	109
Load Plug-in	109
Activate Plug-In	111
Offline Rendering	111
Known Limitations	111
AUv3 on Apple Garage Band (iOS)	112
Load Plug-in	112
Change Plug-in Window Size	113
Record Notes	114
Edit Notes	114
Save Project	115
Host Sync	115
System Interruptions (iOS)	116
Specification	117
Release Notes	121
What's new in version 1.0	121

Introduction


Thank you for purchasing VAPolyEnsemble. To help you get the most out of this product, please read this manual carefully.

VAPolyEnsemble features a unison oscillator that can produce seven detuned saw, pulse, or triangle waves per voice. It is followed by a stereo resonant low-pass filter, a stereo resonant high-pass filter, and a stereo amplifier.

VAPolyEnsemble operates as a stand alone or as an AudioUnit Extension (AUv3) for iPhone, iPad and Mac. Stand Alone supports Ableton Link, MIDI and audio file export. Built-in Effects include delay, chorus, flanger, reverb, eq and compressor. Project files can be saved in iCloud Drive, so that the project can be accessed from iPhone, iPad or Mac.

Privacy Settings

VAPolyEnsemble uses local area network to connect Ableton Link enable devices and it uses bluetooth to connect with bluetooth MIDI keyboard and controllers. When dialogue appears to confirm use of the local network or the bluetooth, tap OK to give a permission to use them. These settings can be edited in Privacy section of the Setting App.

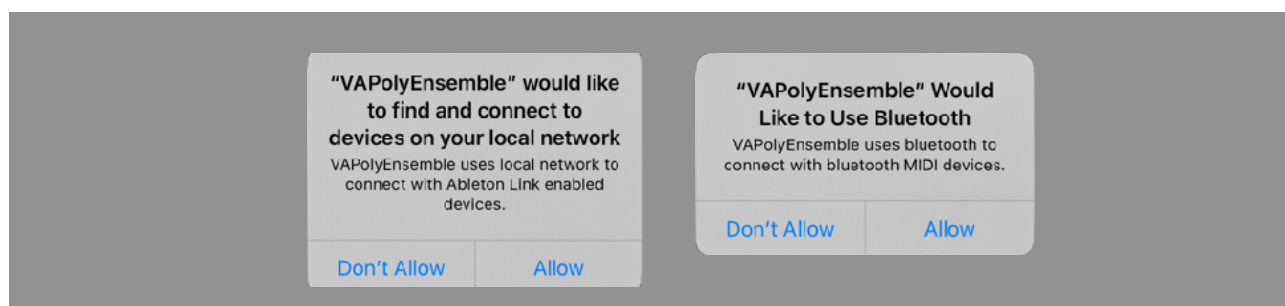

Main Features

Unison oscillator that can produce seven detuned saw, pulse, or triangle waves per voice.
Stereo VCF and Stereo VCA.
Low pass Filter is modeled on cascaded OTA -24dB per octave low pass filter circuit.
3 channel analog style step sequencer.

Maximum 8 voice polyphony. it depends on performance of the device it is running.
Built-in effects and piano roll sequencer.
Audio Export. Linear PCM format (AIFF, WAV and CAF) and compressed format (AAC)
Support Audio Unit Extension (AUv3).
Support MIDI 2.0. Support Foot Pedal.
Support Ableton Link, Bluetooth MIDI, MIDI In / Out.
Works on iPhone, iPad and Mac. Support iCloud Drive to share project files between the platforms.

System Requirements

iOS 17.0 or later
macOS 14.0 or later
Devices with Apple Silicon are recommended. A13 Fusion or above is highly recommended.
AudioUnit Extension (AUv3) requires host application which support AudioUnit Extension.
AudioUnit Extension is supported by Apple Logic and Apple Garage Band on iOS and macOS.
For any other DAW, it depends on the application and some of them don't support AudioUnit Extension.

Sound may be distorted if CPU of the device doesn't have enough power. If it happens reduce number of voices.

Use as Stand Alone

Stand Alone mode features Audio Export, Ableton Link, MIDI input / output and bluetooth MIDI. Sequencer can be synced with Ableton Link enabled devices and softwares.

Use as AudioUnit Extension (AUv3)

VAPolyEnsemble supports AudioUnit Extensions. VAPolyEnsemble works with host applications which support AUv3 plug-ins. By enabling host sync mode, VAPolyEnsemble can be synced with tempo and transport state of the host application. VAPolyEnsemble can send and receive MIDI message to/from the host, if the host supports midi in/out of AUv3.

Factory Preset

Factory presets contains only values of parameters of the synth and the effects. It doesn't contain any sequence data. When loading the preset, it will change the value of the parameters but sequence data remains the same.

User Preset

User Preset contains values of the synth parameters and the sequence data. When loading a user preset, value of the synth parameters and the sequence data are both changed.

User Presets can be saved in iCloud Drive or in AUv3 plug-in. User Presets in iCloud Drive can be accessed from iPhone, iPad or Mac. AUv3 Plug-In Preset is stored on the device and saved preset can be accessed from any host application which support AUv3 User Preset.

State Recovery

When VAPolyEnsemble is used as a stand alone, it stores state of the app when the app is terminated. Stored data is recovered when it is launched at the next time. macOS version can disable this feature. The state is stored locally on the device.

About MIDI Latency

Sending or receiving MIDI notes and messages to Software Applications introduces a latency. If you have a problem of latency and DAW or host application has channel delay, adjust the delay time to compensate the latency.

Maximum Number of Touches

Maximum number of touches are varied on devices. Number of notes simultaneously playing on built-In-Keyboards are limited to the maximum number of touches.

- * Apple, Mac and GarageBand are trademarks of Apple Inc., registered in the U.S. and other countries.
- * Ableton and Link are trademarks of Ableton AG.
- * All products, companies and standard names are trademarks or registered trademarks of their respective holders.

User Interface



macOS



Tool Bar



Show Piano Roll Sequencer turned on (Setting Panel)



1. Host Sync

Tap this button to enable / disable host sync. When host sync is enabled, tempo and transport is controlled by the host application.

2. Play/Stop

Tap this button to play / stop the sequencer.

3. Record

Tap this button to enable / disable recording mode.

4. Metronome

Tap this button to enable / disable metronome.

5. Swing

Tap this button to show Swing menu.



6. Beat Counter

Indicates current beat time as a format of bar, beat, and sixteenth.

7. Time Signature

Tap this button to show Time Signature menu.



8. Tempo

Adjust BPM (Beat Per Minutes).

9. Undo

10. Redo

Tap the button to undo / redo.

11. Setting Panel

Tap this button to open setting panel.



1. File

Tap this button to show file menu.



2. Preset


Indicates name of the selected preset. Tap this button to show preset browser.

3. Parameter

Indicates name and value of the selected parameter. Use plus button, minus button and slider to adjust the value. Double tap to enable menu and tap on the name to show parameter list.


4. Synth

Tap this button to show synth menu.

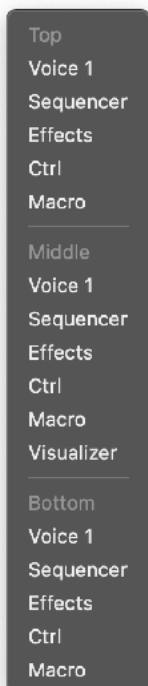


5. Keyboard

Tap this button to show keyboard. Hold this button (right click on macOS) to show keyboard menu.

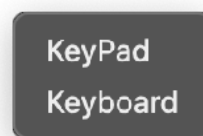


Mac, iPad

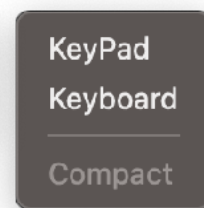

iPhone


6. Visualizer

Tap this button to show audio visualization tool. Hold this button (right click on macOS) to show visualizer menu.

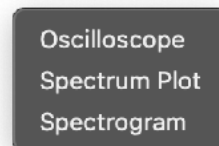

7. Sequencer

Tap this button to show sequencer. Hold this button (right click on macOS) to show sequencer menu.

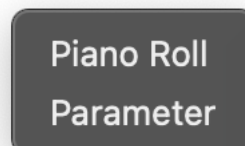

* Content of the menu is dependent on the platform.

Controller



VCO

1. Tune
Adjust tuning in semi tones.
2. Fine
Adjust fine tuning in cents.
3. PW
Adjust pulse width for the pulse wave.
4. FM Env
Adjust amount of envelope to modulate frequency (pitch).
5. FM LFO
Adjust amount of LFO1 to modulate frequency (pitch).
6. PW LFO
Adjust amount of LFO1/LFO2 to modulate pulse width.

Unison-OSC

7. Shape
Adjust shape of the waveform.
8. Level
Adjust level of the oscillator output.
10. Detune
Adjust amount of detune.
11. Mix
Adjust amount of oscillator levels.
12. HP
Adjust amount of hp output mixed with dry signal.

LPF

13. Cutoff

Adjust cutoff frequency of the filter.

14. Mod Env
Adjust amount of envelope to modulate cutoff frequency.
15. Key Follow
Adjust amount of key follow. When it is 100%, cutoff frequency is equals to note frequency.
16. Resonance
Adjust amount of resonance.
17. Mod LFO
Adjust amount of LFO to modulate cutoff frequency. Turn clockwise from center for mono mode, turn counter-clockwise from center for stereo mode.
18. Slope
Select slope of the filter. Options are -12dB Per Octave and -24 dB Per Octave.

F-EG

19. Attack
Adjust amount of attack time.
20. Decay
Adjust amount of decay time.
21. Key Follow
Adjust amount of key follow. Duration of each stages is decreased when higher note is played.
22. Sustain
Adjust amount of sustain level.
23. Release
Adjust amount of sustain time.
24. Velocity
Adjust amount of velocity to control level of envelope.

VCA

25. Volume

Adjust volume of VCA output.

26. AM LFO

Adjust amount of LFO to modulate amplitude. Turn clockwise from center for mono mode, turn counter-clockwise from center for stereo mode.

27. Key Follow

Adjust amount of level scaling. Output level is decreased when higher note is played.

A-EG

28. Attack

Adjust amount of attack time.

29. Decay

Adjust amount of decay time.

30. Key Follow

Adjust amount of key follow. Duration of each stages is decreased when higher note is played.

31. Sustain

Adjust amount of sustain level.

32. Release

Adjust amount of sustain time.

33. Velocity

Adjust amount of velocity to control level of envelope.



P-EG

1. Attack

Adjust amount of attack time.

2. Decay

Adjust amount of decay time.

3. Key Follow

Adjust amount of key follow. Duration of each stages is decreased when higher note is played.

4. Sustain

Adjust amount of sustain level in semi tones. Range is from -24 ST to 24 ST.

5. Release

Adjust amount of sustain time.

6. Velocity

Adjust amount of velocity to control level of envelope.

HPF

13. Cutoff

Adjust cutoff frequency of the filter.

14. Mod Env

Adjust amount of envelope to modulate cutoff frequency.

15. Key Follow

Adjust amount of key follow. When it is 100%, cutoff frequency is equals to note frequency.

16. Resonance

Adjust amount of resonance.

17. Mod LFO

Adjust amount of LFO to modulate cutoff frequency. Turn clockwise from center for mono mode, turn counter-clockwise from center for stereo mode.

18. Gain

Adjust output reduction gain of VCF. Range is from -3.0 dB to 0.0 dB.



Global

1. Voice
Select number of voices.
2. Unison
Turn on to enable unison mode.
3. OSC Sync
Adjust amount of phase offset. When dial is turned fully clockwise position, phase offset is zero.
4. Portamento Mode
Select a mode. Options are Portamento and Glissando.
5. Portamento Time
Adjust time of portamento. Range is from 0 to 10 seconds.
6. Pitch Bend Range
Adjust range of pitch modulation from 0 to 24 semitones (2 octaves).

P-LFO

7. Tune
Adjust pitch of the low frequency oscillator.
8. Shape
Select shape of the low frequency oscillator waveform.
9. Delay
Adjust delay time to start the low frequency oscillator.
10. Tempo Sync
Turn it on to enable Tempo Sync.
11. Key Sync
Turn it on to enable Key Sync.
12. Level
Adjust level of LFO signal.

A-LFO

13. Tune
Adjust pitch of the low frequency oscillator.
14. Shape
Select shape of the low frequency oscillator waveform.
15. Delay
Adjust delay time to start the low frequency oscillator.
16. Tempo Sync
Turn it on to enable Tempo Sync.
17. Key Sync
Turn it on to enable Key Sync.
18. Level
Adjust level of LFO signal.

F-LFO

19. Tune
Adjust pitch of the low frequency oscillator.
20. Shape
Select shape of the low frequency oscillator waveform.
21. Delay
Adjust delay time to start the low frequency oscillator.
22. Tempo Sync
Turn it on to enable Tempo Sync.
23. Key Sync
Turn it on to enable Key Sync.
24. Level
Adjust level of LFO signal.

PAN

25. Spread
Adjust amount of stereo width.

26. Pan LFO
Adjust amount of LFO to modulate pan position.

EFX

28. Delay
Adjust level of delay send.

29. C/F
Adjust level of Chorus/Flanger send.

30. Reverb
Adjust level of Reverb send.

31. AUX1 Pre/Post
Select pre/post of aux1 (Delay) send.

32. AUX2 Pre/Post
Select pre/post of aux2 (Chorus/Flanger) send.

33. AUX3 Pre/Post
Select pre/post of aux3 (Reverb) send.

“Pre” means pre fader. Signal is taken before volume level is applied to the signal. “Post” means post fader. Signal is taken after volume level is applied to the signal.



Mod Wheel / Aftertouch

1. Vibrato
Adjust amount of mod wheel for vibrato.

2. Tremolo
Adjust amount of mod wheel for tremolo.

3. CF Offset
Adjust amount of offset that mod wheel to control VCF cutoff. (negative or positive)

4. Vibrato
Adjust amount of aftertouch for vibrato.

5. Tremolo
Adjust amount of aftertouch for tremolo.

6. RE Offset
Adjust amount of offset that mod wheel to control VCF resonance. (negative or positive)

PW-LFO

7. Tune
Adjust pitch of the low frequency oscillator.

8. Shape
Select shape of the low frequency oscillator waveform.

9. Delay

Adjust delay time to start the low frequency oscillator.

10. Tempo Sync
Turn it on to enable Tempo Sync.

11. Key Sync
Turn it on to enable Key Sync.

12. Level
Adjust level of LFO signal.

PAN-LFO

13. Tune
Adjust pitch of the low frequency oscillator.

14. Shape
Select shape of the low frequency oscillator waveform.

15. Delay
Adjust delay time to start the low frequency oscillator.

16. Tempo Sync
Turn it on to enable Tempo Sync.

17. Key Sync
Turn it on to enable Key Sync.

18. Level

Adjust level of LFO signal.

Adjust rate of arpeggio.

ARP

19. Pattern

Select a pattern of arpeggio.

20. Rate

21. Gate


Adjust pulse width of gate signal.

22. Off/On

Turn on/off arpeggio.

23. Tempo Sync

Turn on/off tempo sync.

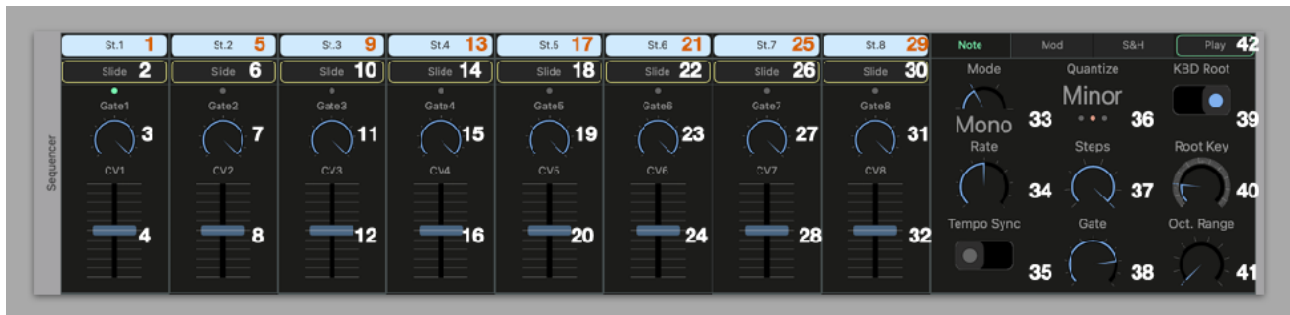

Step Sequencer

1. Step1 Switch

Enable / Disable trigger to the step.

Enable / Disable accent (trigger on) or slide (trigger off).

2. Slide Switch

Enable / Disable accent (trigger on) or slide (trigger off).

11. Gate3

Adjust amount of Gate signal (Velocity) for the step.

3. Gate1

Adjust amount of Gate signal (Velocity) for the step.

12. CV3

Adjust Amount of CV signal (Pitch) for the step.

4. CV1

Adjust Amount of CV signal (Pitch) for the step.

13. Step4 Switch

Enable / Disable trigger to the step.

5. Step2 Switch

Enable / Disable trigger to the step.

14. Slide Switch

Enable / Disable accent (trigger on) or slide (trigger off).

6. Slide Switch

Enable / Disable accent (trigger on) or slide (trigger off).

15. Gate4

Adjust amount of Gate signal (Velocity) for the step.

7. Gate2

Adjust amount of Gate signal (Velocity) for the step.

16. CV4

Adjust Amount of CV signal (Pitch) for the step.

8. CV2

Adjust Amount of CV signal (Pitch) for the step.

17. Step5 Switch

Turn it on to enable the step

9. Step3 Switch

Enable / Disable trigger to the step.

18. Slide Switch

Enable / Disable accent (trigger on) or slide (trigger off).

10. Slide Switch

19. Gate5

Enable / Disable trigger to the step.

20. CV5

Adjust Amount of CV signal (Pitch) for the step.

21. Step6 Switch

Enable / Disable trigger to the step.

22. Slide Switch

Enable / Disable accent (trigger on) or slide (trigger off).

23. Gate6

Adjust amount of Gate signal (Velocity) for the step.

24. CV6

Adjust Amount of CV signal (Pitch) for the step.

25. Step7 Switch

Enable / Disable trigger to the step.

26. Slide Switch

Enable / Disable accent (trigger on) or slide (trigger off).

27. Gate7

Adjust amount of Gate signal (Velocity) for the step.

28. CV7

Adjust Amount of CV signal (Pitch) for the step.

29. Step8 Switch

Enable / Disable trigger to the step.

30. Slide Switch

Enable / Disable accent (trigger on) or slide (trigger off).

31. Gate8

Adjust amount of Gate signal (Velocity) for the step.

32. CV8

Adjust Amount of CV signal (Pitch) for the step.

33. Mode

Select operation mode, mono, chord or Unison.

34. Rate

Adjust frequency of clock to drive the sequencer.

35. Tempo Sync

Turn it on to enable Tempo Sync.

36. Quantize

Select a quantize option, Off, Minor or Major.

37. Steps

Select number of steps

38. Gate

Adjust pulse width of gate signal.

39. KBD Root Key Switch

Enable / Disable pressed key on keyboard to set root key.

40. Root Key


Select a Root Key when KBD Root switch is turned off.

41. Octave Range

Select an Octave Range

42. Stop/Play

Turn it on to enable sequencer for playing. Tap any key on keyboard to start the sequencer.

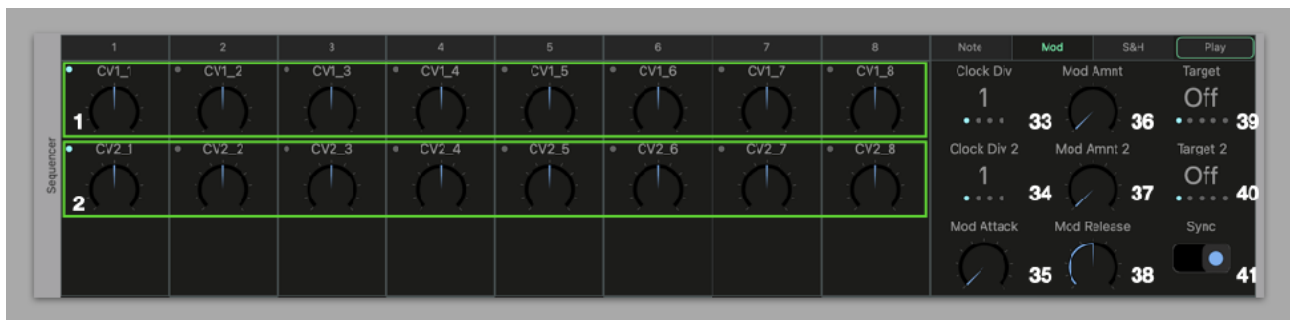

Modulation

1. CV1_1 ... CV1_8

Adjust amount of CV signal for the step.

2. CV2_1 ... CV2_8

Adjust amount of CV signal for the step.

33. Clock Div 1

Adjust speed of clock. Options are 1, 1/2, 1/4 and 1/8.

34. Clock Div 2

Adjust speed of clock. Options are 1, 1/2, 1/4 and 1/8.

35. Mod Attack

Adjust attack time of envelope for modulation signal.

36. Mod Amount 1

Adjust amount of modulation.

37. Mod Amount 2

Adjust amount of modulation.

38. Mod Release

Adjust release time of envelope for modulation signal.

39. Target 1

Select a target of the modulation. Options are MO (Modulation Operator Level), OP AM, WF, LPG and Delay.

40. Target 2

Select a target of the modulation. Options are MO (Modulation Operator Level), OP AM, WF, LPG and Delay.

41. Sync

Turn is on to sync phase of note sequencer and modulation sequencers.



Sample & Hold

33. Hold

Select number of steps to hold the sampled CV.

Select number of steps to hold the sampled CV for mod 1.

34. Hold 2

35. Hold 3

Select number of steps to hold the sampled CV for mod 2.

36. LFO Amount

Adjust balance of LFO1/LFO2 signal to be sampled.

37. LFO Amount

Adjust balance of LFO1/LFO2 signal to be sampled for mod 1.

38. LFO Amount

Adjust balance of LFO1/LFO2 signal to be sampled for mod 2.

39. Noise Amount

Adjust amount of pink noise/white noise signal to be sampled.

40. Noise Amount

Adjust amount of pink noise/white noise signal to be sampled for mod 1.

41. Noise Amount

Adjust amount of pink noise/white noise signal to be sampled for mod 2.



Delay

1. Delay Time
Adjust delay time.
2. LFO Frequency
Adjust frequency of LFO (low frequency oscillator).
3. HP Frequency
Adjust frequency of high pass filter for the delayed sound.
4. Feedback
Adjust amount of the feedback.
5. LFO intensity
Adjust amount of LFO delay time modulation.
6. LP Frequency
Adjust frequency of low pass filter for the delayed sound.

Sync Switch Tab
Turn it on to enable tempo sync.

Chorus / Flanger

7. LFO Frequency
Adjust frequency of the LFO.
8. LFO intensity
Adjust amount of LFO for delay time modulation.
9. Delay Time
Adjust delay time.
10. Chorus/Flanger
Select Chorus or Flanger.
11. Feedback
Adjust amount of the feedback.
12. Stereo Width
Adjust stereo width.

Sync Switch Tab
Turn it on to enable tempo sync.

Reverb

13. Room Size
Adjust room size of the late reflection.
14. Decay
Adjust decay of the late reflection.
15. Damping
Adjust absorption of high frequency in the late reflection.
16. Auto Size
Turn it on to enable auto size mode.
17. Pre Delay
Adjust pre delay time of the early reflection.
18. Output LP Frequency
Adjust frequency of output low pass filter.

Sync Switch Tab
Turn it on to enable tempo sync.

EQ and Mixer

19. High Frequency
Adjust frequency of high shelving filter.
20. Mid Frequency
Adjust frequency of mid peak / notch filter.
21. Low Frequency
Adjust frequency of low shelving filter.
22. High Gain
Adjust gain of the high shelving filter.
23. Mid Gain
Adjust gain of the mid peak / notch filter.
24. Low Gain
Adjust gain of the low shelving filter.

Compressor

25. Reduction Gain Meter

Indicate amount of gain reduction.

26. Attack

Adjust time to start compression.

27. Threshold

Adjust level of threshold to begin compression.

29. Release

Adjust time to end compression.

30. Makeup

Adjust amount of makeup gain.

Master Output

31. Volume

Adjust amount of master volume.

32. Pan

Adjust amount of master pan.

33. Mute

Turn it on to mute output signal.



Chorus / Flanger

7. Sine/Triangle

Adjust shape of the LFO waveform, Sine or Triangle.

8. HP Frequency

Adjust frequency of high pass filter for the effected sound.

9. LP Frequency

Adjust frequency of high pass filter for the effected sound.

Adjust amount of LFO for delay time modulation.

18. EFX Input

Adjust amount of input signal from Delay and Chorus/Flanger.

Mixer

19. Delay Level

Adjust level of Delay.

20. C/F Level

Adjust level of Chorus / Flanger.

21. Reverb Level

Adjust level of Reverb.

Reverb

13. HP Frequency

Adjust frequency of input high pass filter.

14. LFO Frequency

Adjust frequency of LFO (Low Frequency Oscillator).

15. Early/Late

Adjust amount of the early reflection and amount of the late reflection.

16. LP Frequency

Adjust frequency of input low pass filter.

17. LFO intensity

Compressor

26. Input Gain

Adjust amount of input gain.

27. HP Frequency

Adjust frequency of high pass filter at the input of the compressor.

29. Ratio

Adjust compression ratio.

30. Dry/Wet

Adjust amount of the dry and wet signal.



A. Delay Sync Switch Tab

Turn it on to enable tempo sync.

B. C/F Sync Switch Tab

Turn it on to enable tempo sync.

C. Reverb Sync Switch Tab

Turn it on to enable tempo sync.

1. Delay: Delay Time

Adjust delay time in note length.

7. C/F: LFO Frequency

Adjust frequency in note length.


13. Reverb: Room Size

Adjust room size in note length.

14. Reverb: LFO Frequency

Adjust frequency in note length.

Key Pad

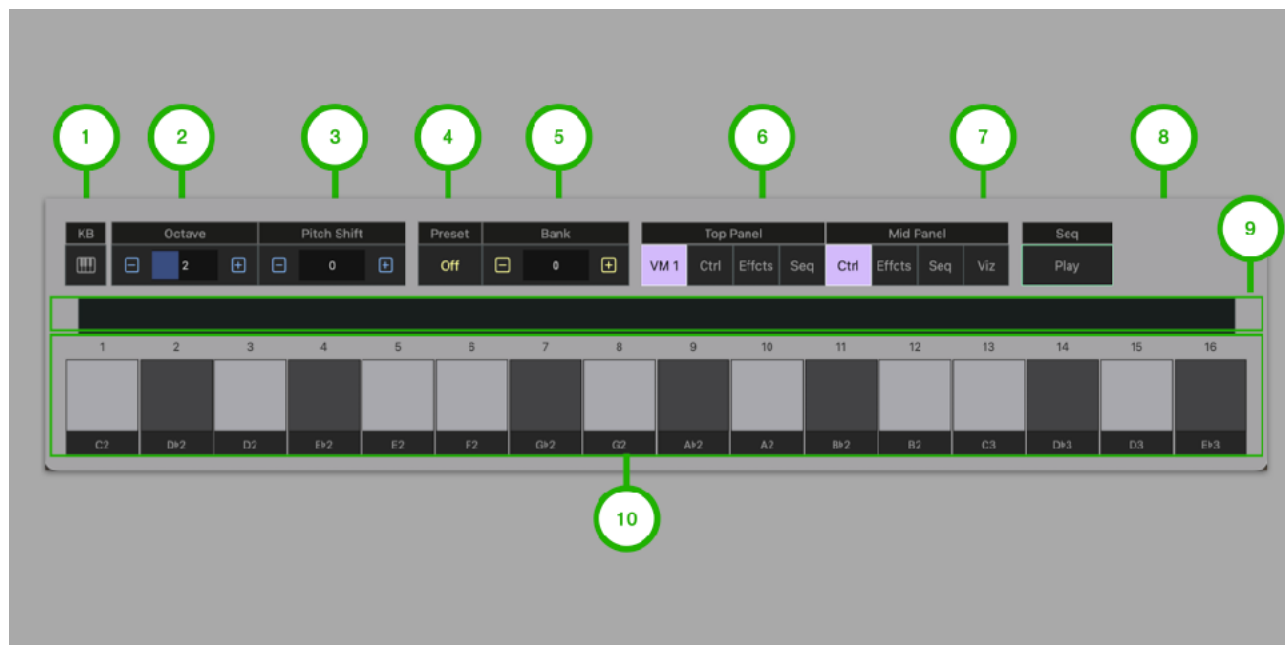

1. Keyboard

Turn the button on to show keyboard view.
Turn it off to show key pad view.

2. Octave Range

Use plus / minus buttons to adjust octave range of the key pad. Indicator shows octave of the lowest note of the key pad¹. When “Midi Monitor” is enabled in Setting Panel, the range is automatically set based on the incoming midi note.

3. Pitch Shift

Use plus / minus buttons to adjust note range of the key pad.

4. Preset

Select preset type from the menu. Options are Off, Factory and User. Tap on a key pad to select a preset when factory or user is selected.

5. Bank

Select a preset bank. Preset number is pad number + bank * 16.

6. Top Panel

Select a module for the top panel.

7. Mid Panel

Select a module for the mid panel.

8. Sequencer Play

Turn it on to enable sequencer for playing.
Tap any key on key pad to start the sequencer.

9. Ribbon Controller


Drag on the Ribbon to adjust Pitch in linear scale.

10. Key Pad

Tap on the pad to play note or select preset when preset type is factory or user.

¹ Middle C (midi note 60) is C3.

Keyboard

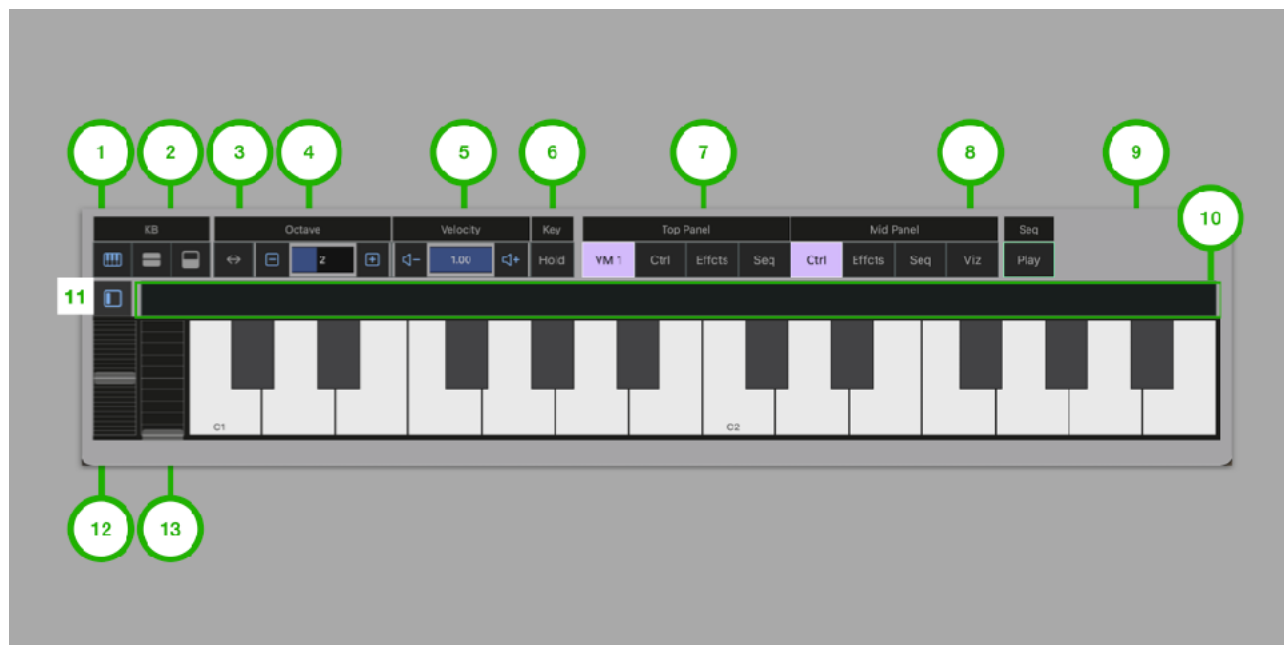

1. Keyboard

Turn the button on to show keyboard view. Turn it off to show key pad view.

2. Split & Target

Tap this button to show split keyboard. Tap target button to select a target of control.

3. Keyboard Scroll

Tap on arrow button to enable/disable keyboard scrolling.

4. Octave Range

Use plus / minus buttons to adjust octave range of the keyboard. Indicator shows lowest note of the keyboard². When “Midi Monitor” is enabled, the range is automatically set based on the incoming midi note. Tap on arrow button to enable/disable keyboard scrolling.

5. Velocity

Use plus/minus button to adjust keyboard velocity.

6. Hold

Tap this button to enable /disable key holding.

7. Top Panel

Select a content of top panel.

8. Mid Panel

Select a content of mid panel.

9. Sequencer Play

Turn it on to enable sequencer for playing. Tap any key on keyboard to start sequencer.

10. Ribbon Controller

² Middle C (midi note 60) is C3.

Drag on the Ribbon to control Pitch or Expression. Targets of the ribbon control can be selected by pitch and expression buttons on the left. Targets of the expression can be selected in KBD Control Routing Panel.

11.Wheel View Switch

Tap this button to show/hide pitch wheel and mod wheel.


12.Pitch Wheel

Adjust pitch of the oscillators. Range is plus / minus one octave.

13.Mod Wheel

Adjust amount of the modulation. Targets of the modulation can be selected in KBD Control Routing Panel.

Visualizer

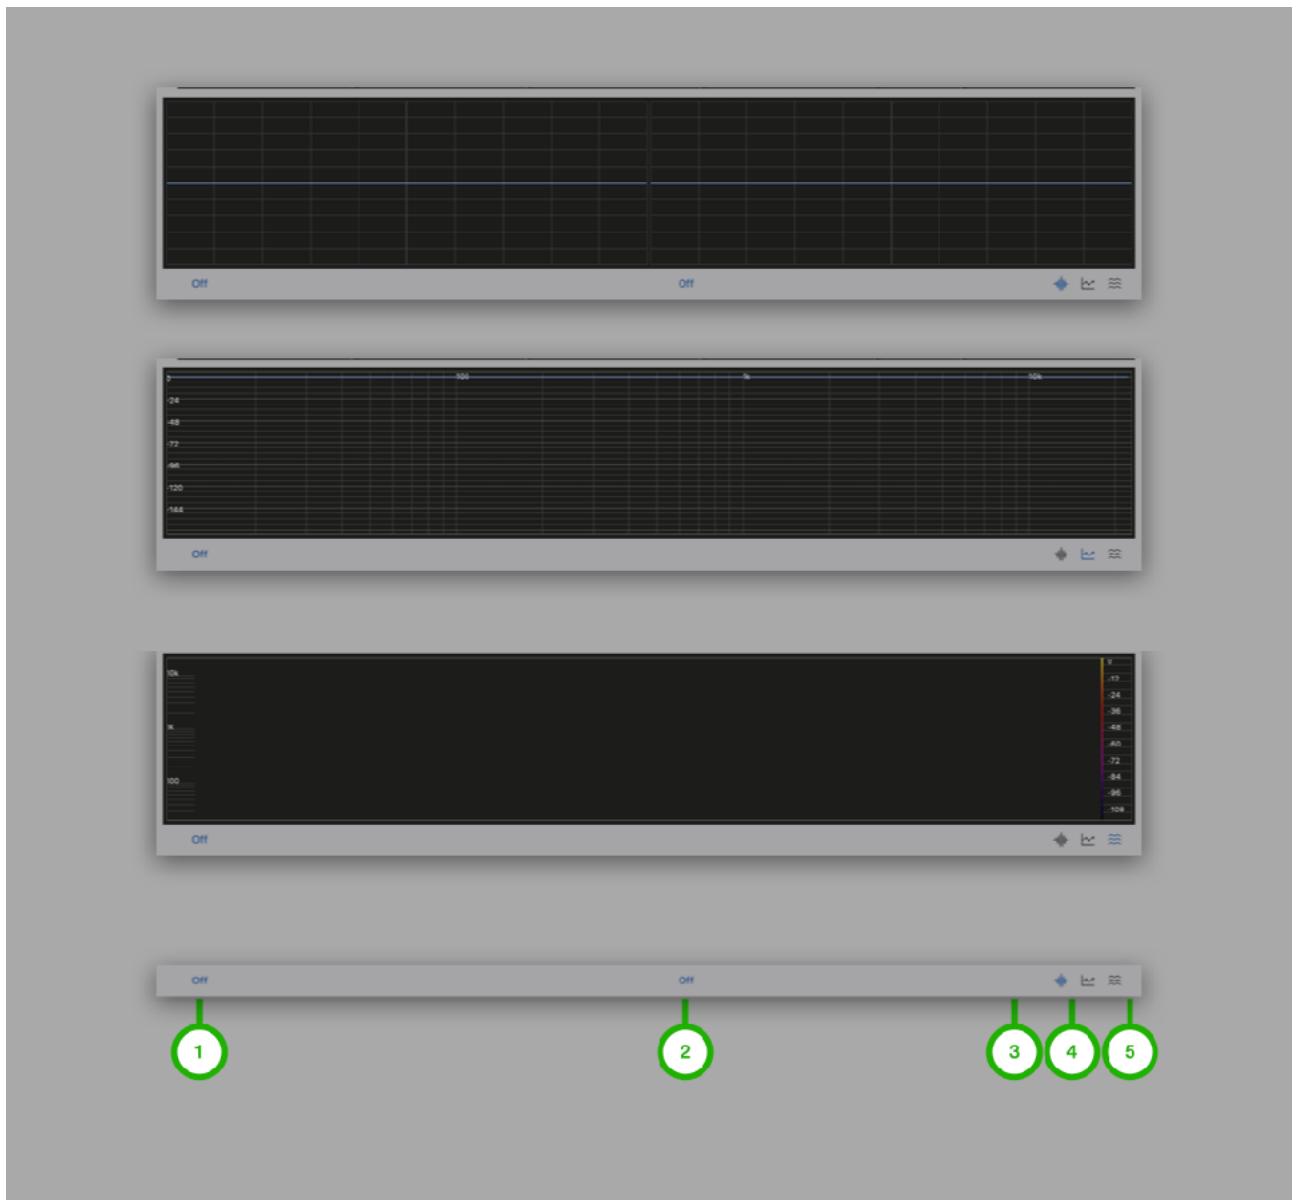

1. Audio Source Selector
Tap this button to show a list. Select audio source for the visualization.

2. Audio Source Selector
Tap this button to show a list. Select audio source for the visualization.

3. Oscilloscope Button
Tap this button to select Oscilloscope.

4. Spectrum Plot Button
Tap this button to select Spectrum Plot.

5. Spectrogram Button
Tap this button to select Spectrogram.

Tap and hold (right click on macOS) to show context menu.





Select a tool for audio visualization. Options are Oscilloscope, Spectrum Plot and Spectrogram.




Select a source of audio for the visualization.

Sequencer (Piano Roll)

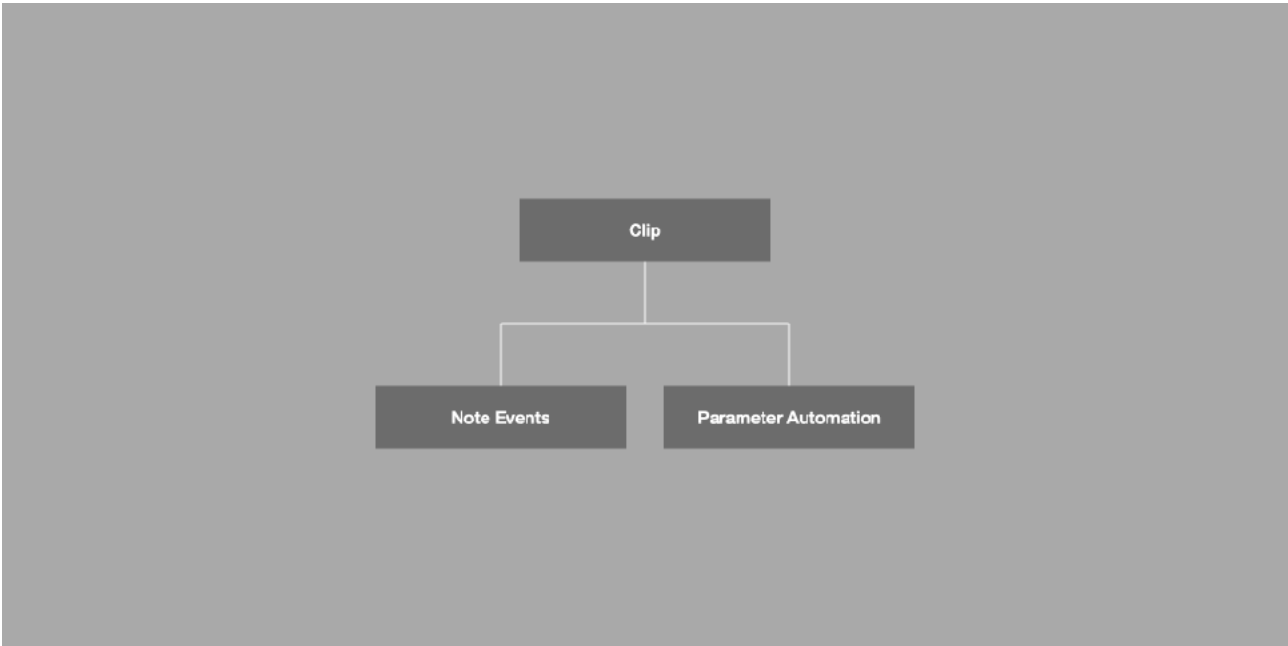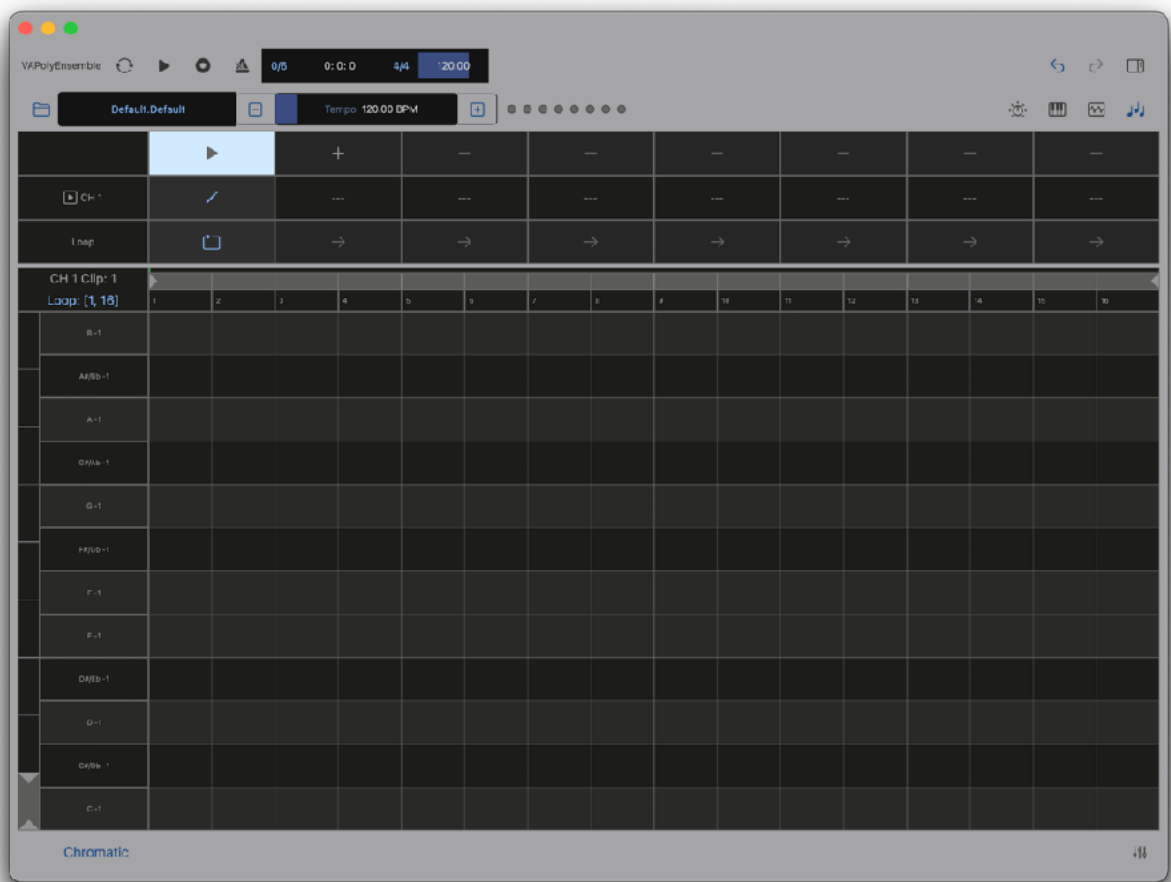

Clip contains note events and parameter automation events for each timbral. Maximum length of clip is 16 bars. Maximum number of clips are 8.

Clip Editor

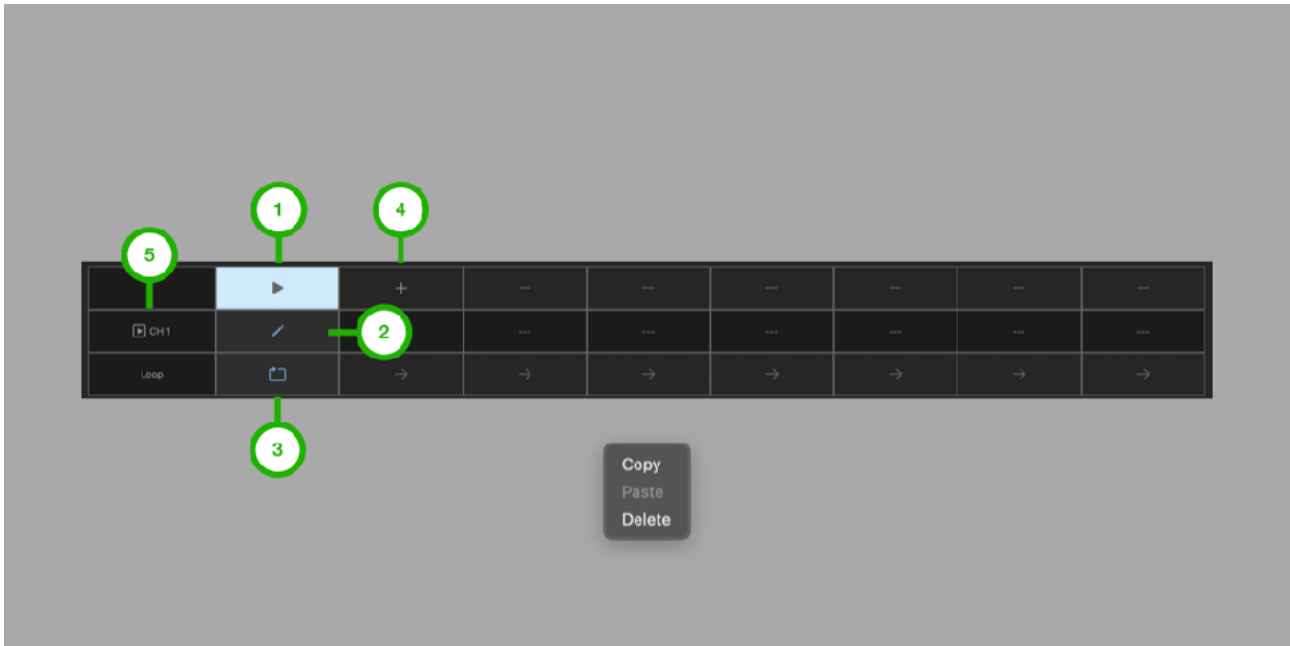

1. Launch Button

Tap this button to play/stop clip.

2. Edit Button

Tap this button to open piano roll editor.

3. Loop Selector

Select loop options.


4. Add Button

Tap this button to add edit button.

5. Auto Select Button

Enable/Disable Auto Select to select editor while sequencer is playing.

Piano Roll Editor

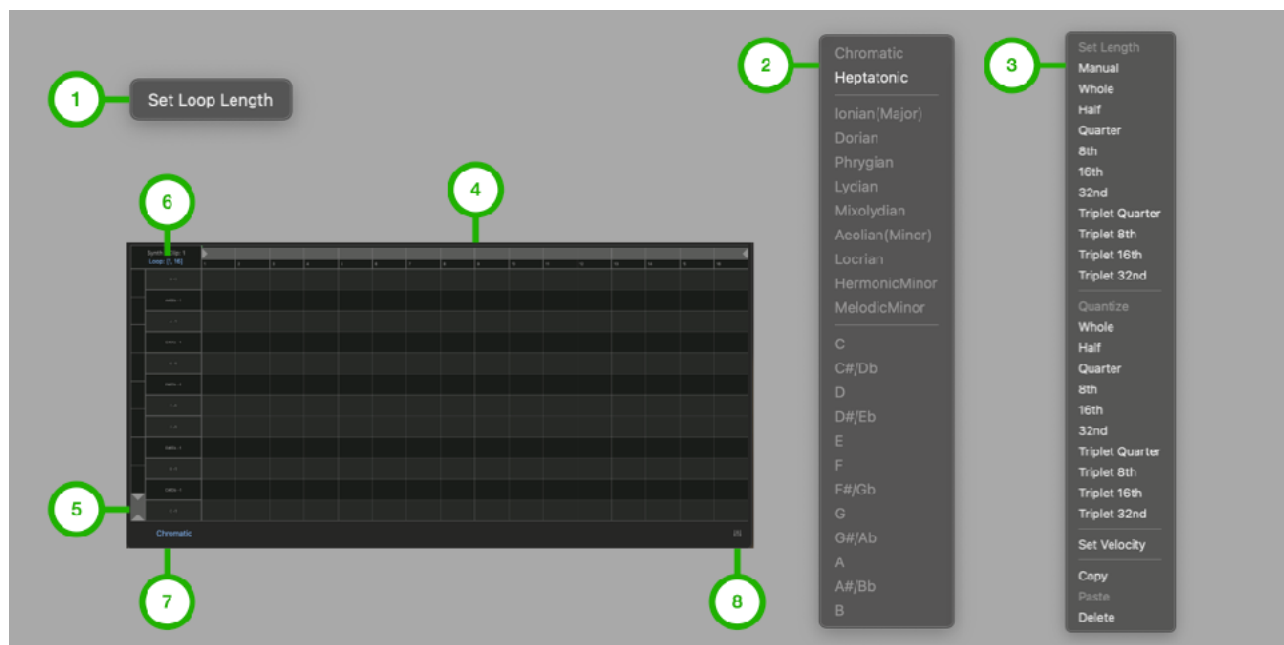

1. Loop Menu

Press and hold (right click on macOS) Time Range Selector to show this menu. Tap on “Set Loop Length” to set loop length to current length selected by the Time Range Selector.

2. Scale Menu

Press and hold (right click on macOS) editor to show this menu.

3. Editing Menu

Press and hold (right click on macOS) note to show this menu.

4. Time Range Selector

Select time range for editing and for loop length. On iOS, pinch gesture control zooming and drag gesture control scroll position.

5. Note Range Selector

Select note range for editing. On iOS, pinch gesture control zooming and drag gesture control scroll position.

6. Loop Range

Tap this button to show Loop Menu.


7. Scale

Tap this button to show Scale Menu

8. Parameter Automation Button

Tap this button to show Parameter Automation Editor

Parameter Automation Editor

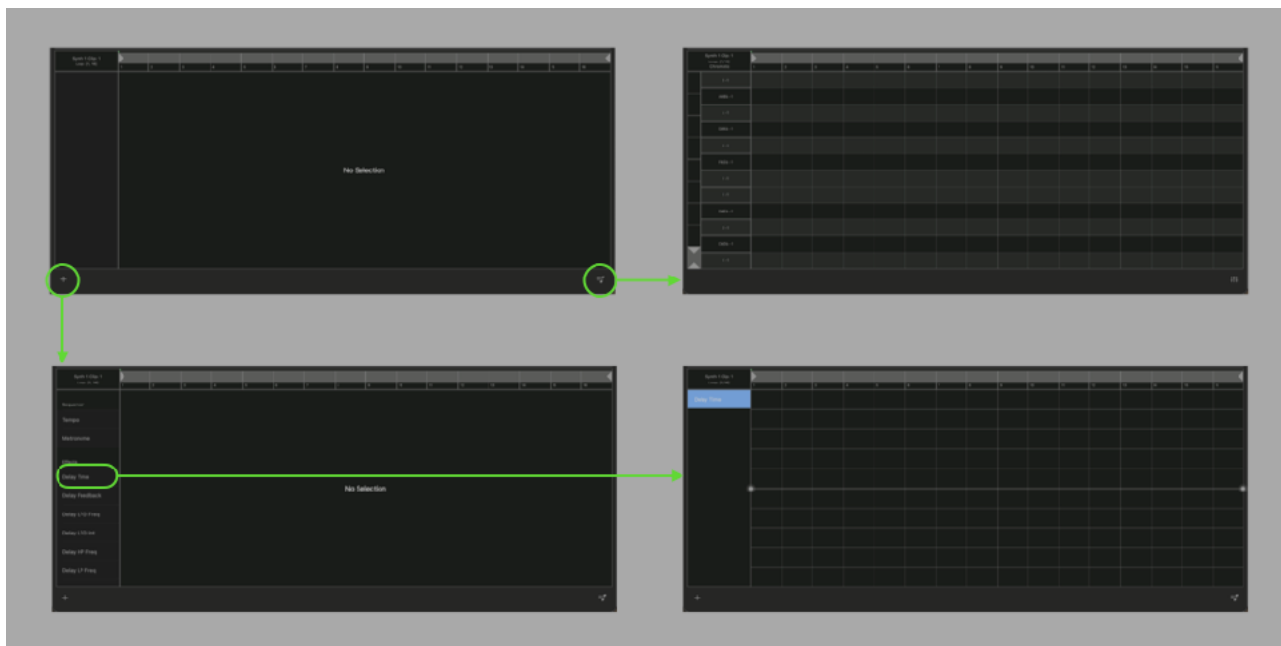

1. Loop Menu

Press and hold (right click on macOS) Time Range Selector to show this menu. Tap on "Set Loop Length" to set loop length to current length selected by the Time Range Selector.

2. List Menu

Press and hold (right click on macOS) item in parameter list to show this menu.

3. Editing Menu

Press and hold (right click on macOS) editor to show this menu.

4. Time Range Selector

Select time range for editing and for loop length.

5. Add Button

Tap this button to select parameter to edit.



6. Piano Roll Button

Tap this button to show piano roll editor.


Synthesizer

Output of the synthesizer is routed to effects, mixer, EQ, compressor and main output amplifier. Each voice of the synthesizer contains a VCO, a stereo VCF, a stereo VCA and three envelope generators.

Block diagram

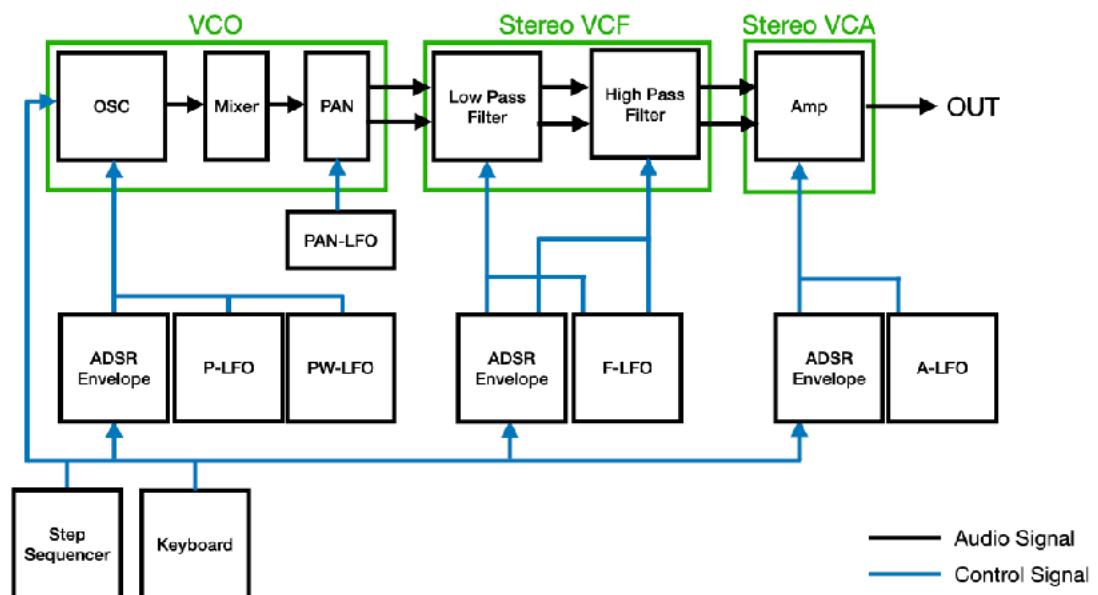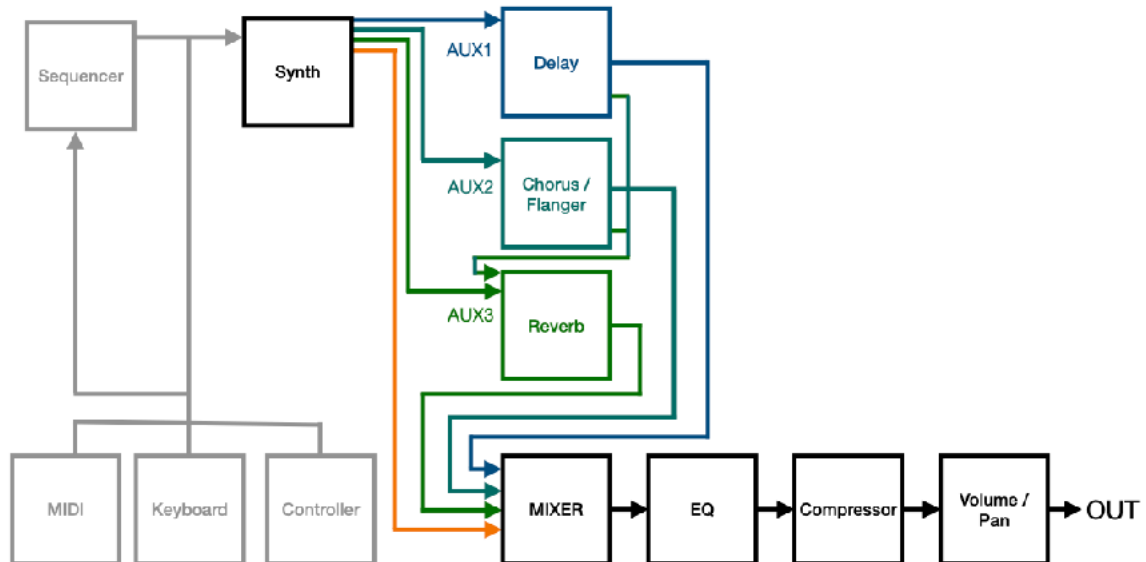

Control Signal & MIDI Flow

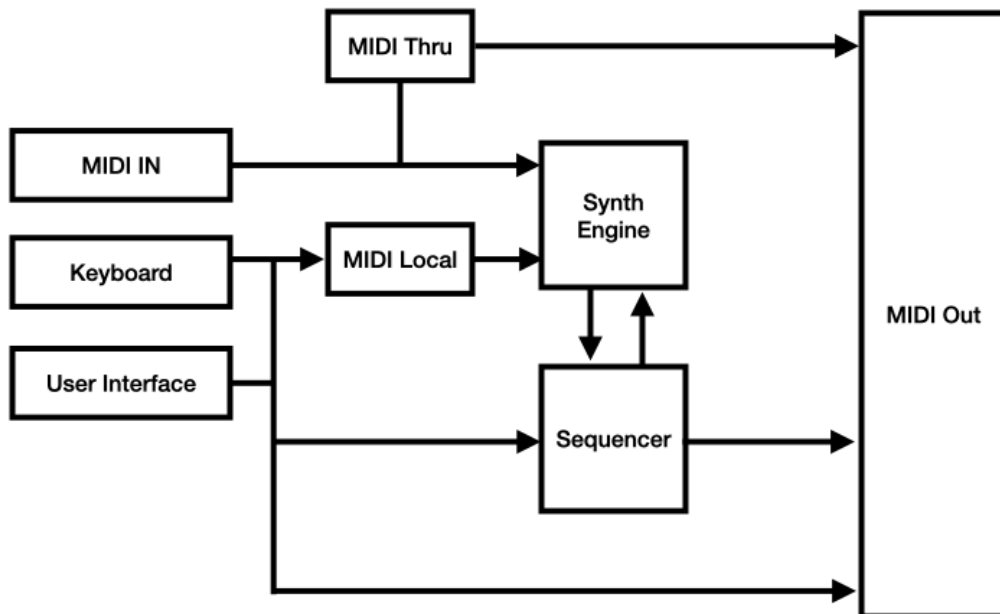

VCO

VCO contains a unison oscillator that generates seven continuously variable waveforms. Pitch envelope can be used to modulate pitch of the oscillator.



Tune

Adjust pitch of the oscillator. (maximum +/- 24 semitones)

Fine

Adjust pitch of the oscillator. (+/- 50 cents)
Use Fine Tune to detuning the oscillator relative to the other oscillators.

PW (Pulse Width)

Adjust pulse width of the pulse wave.
When Square wave is selected, pulse width of 0% and 100% produce DC signal³ resulting no audible output.

FM Env

Adjust amount of envelope to modulate pitch.
(maximum +/- 24 semitones)

FM LFO

Adjust amount of LFO to modulate pitch.
(maximum +/- 24 semitones)

PW LFO

Adjust amount of LFO to modulate pulse width.

Shape

Adjust shape of the waveform. Fully counter clockwise position is Triangle, center is Saw, and fully clockwise position is Square.

Level

Adjust output level of oscillator in dB scale from -60 dB to 0 dB.

Detune

Adjust amount of detune for seven oscillators.

Mix

Adjust balance of seven oscillator levels.

HP

Adjust balance of high pass output signal and dry signal.

Attack

Adjust the attack time of the ADSR envelope
(from 1 ms to 6 sec)

Decay

Adjust the decay time of the ADSR envelope
(from 1 ms to 10 sec)

³ DC Signal is always positive or always negative and produce no sound.

Sustain

Adjust sustain amount of the ADSR envelope (maximum +/- 24 semitones)

Release


Adjust release time of the ADSR envelope (from 1 ms to 10 sec)

Velocity

Adjust amount that Keyboard velocity affect level of envelope.

Key Follow

Adjust amount that CV affect length of envelope.

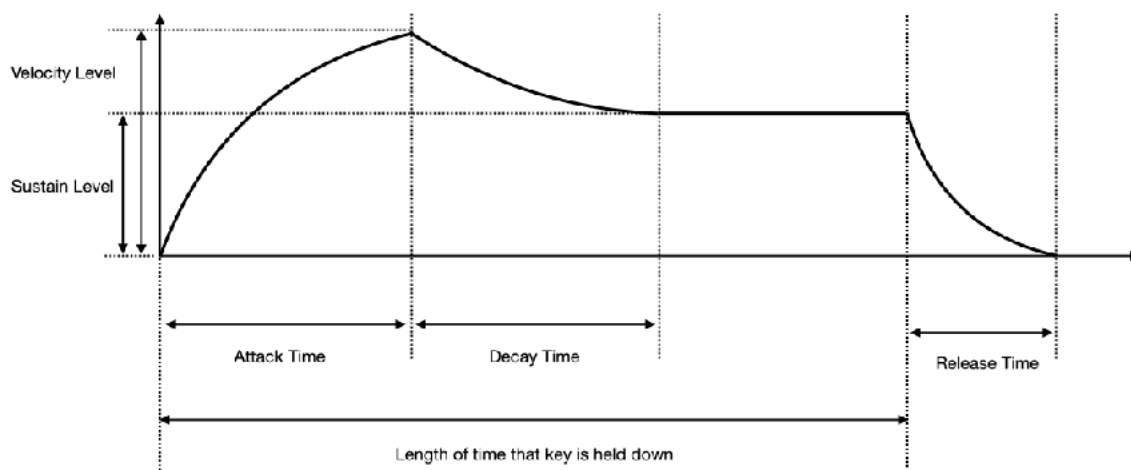

PAN

The seven waveform outputs of unison oscillator are routed to PAN for stereo output.



Spread

Adjust amount of stereo width.

Pan LFO

Adjust amount of LFO signal to modulate position of stereo signals.

High Pass Filter

This high pass filter is modeled on the Sallen-Key -12dB per octave high pass filter circuit. The filter is capable of self oscillation when resonance is at the maximum position. Cutoff frequency of the high pass filter can be modulated by an ADSR envelope and a LFO. Also the cutoff frequency can be controlled by keyboard with the amount adjusted by key follow parameter.



Cutoff

Adjusts the cutoff frequency of the filter.

adjust modulation in mono mode, turn the dial counter-clockwise from center adjust modulation in stereo mode.

Resonance

Adjusts resonance of the filter.

Key Follow

Adjust amount of key follow. When it is 100%, cutoff frequency is equals to keyboard note frequency.

Mod Env

Adjust amount of envelope signal to modulate cutoff.

Gain

Adjust amount of reduction gain for VCF output. Range is from -3dB to 0dB.

Mod LFO

Adjust amount of LFO signal to modulate cutoff. Turn the dial clockwise from center

VCA (Amplifier)

The output signal of the filter is routed to the amplifier. The signal is shaped by ADSR envelope. The audio signal can be modulated by LFO. The output level can be adjusted by volume parameter.



Volume

Adjust volume of Output Signal.

AM LFO

Adjust amount of LFO signal to modulate amplitude. Turn the dial clockwise from center adjust modulation in mono mode, turn the dial counter-clockwise from center adjust modulation in stereo mode.

Key Follow

Adjust amount of key follow to reduce level of the output when higher note is played.

ADSR (Envelope Generator)

ADSR is an analog style non-linear envelope generator.



Attack

Adjust the attack time of the ADSR envelope (from 1 ms to 6 sec)

Release

Adjust release time of the ADSR envelope (from 1 ms to 10 sec)

Decay

Adjust the decay time of the ADSR envelope (from 1 ms to 10 sec)

Velocity


Adjust amount that Keyboard velocity affect level of envelope.

Sustain

Adjust sustain amount of the ADSR envelope (from 0% to 100%)

Key Follow

Adjust amount that CV affect length of envelope.

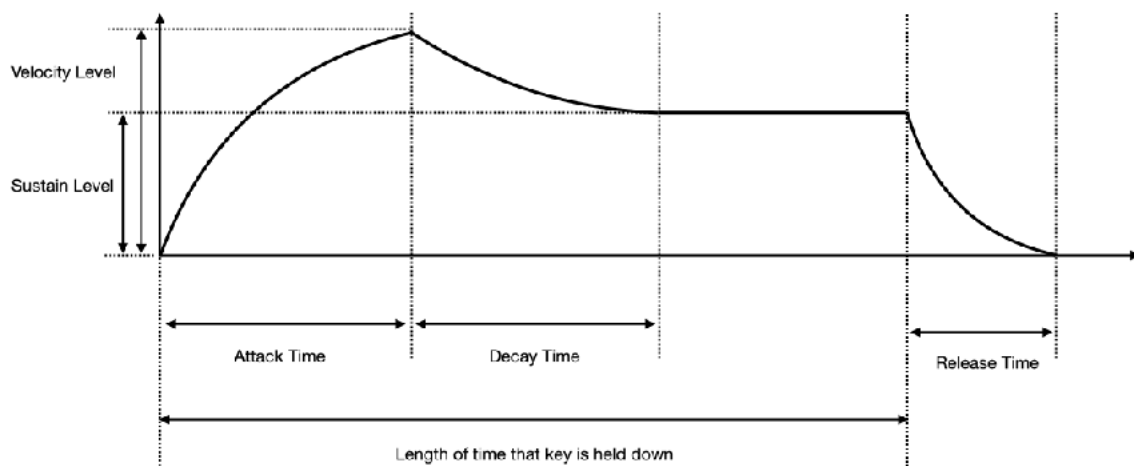

LFO

LFO (Low Frequency Oscillator) can generate 6 wave shapes and the frequency of the LFO can be set by Hz or note value when LFO is synchronized to tempo.



Tune

Adjust frequency of the LFO. When sync is off, range of the frequency is from 0.04Hz to 42.2Hz. When sync is on, range of the rate is from 1/64 to 8 bars.

Shape

Select shape of the LFO waveform. Wave shapes are sine, saw, down saw, square, triangle and random.

Delay

Adjust delay time to start the LFO signal.

Tempo Sync

Turn this switch on to sync the rate of the LFO with tempo.

Key Sync (Key Re-Trigger)

Turn this switch on to restart the LFO cycle every time a new note is played.

Level

Adjust level of LFO output in dB scale.

ARP



Arp Pattern

Select a pattern of the arpeggio. Options are up, down, up & down and random.

Arp Rate

Adjust frequency of the clock for arpeggio. When tempo sync is off, range of the frequency is from 1 Hz to 20 Hz. When tempo sync is on, range of the rate is from 1/32 to 1 bars.

Gate

Adjust pulse width of gate signal.

Arp Switch

Turn this switch on to enable arpeggio.

Arp Tempo Sync

Turn this switch on to sync the rate of the clock with tempo.

Global



Voice

Select number of voices.

Unison

Turn this switch on to enable unison mode. When Unison mode is enabled, specified number of voices are stacked to generate monophonic sound.

OSC Sync

Adjust amount of phase offset. When dial is turned fully clockwise position, phase offset is zero.

Portamento Mode

Select a pitch modulation mode. Options are Portamento and Glissando.

Portamento Time

Adjust time of portamento from 10 ms to 10 second. Portamento is applied in polyphonic and unison when notes are played in legato.

Pitch Bend Range

Adjust range of pitch bend from 0 to 24 semitones.

Mod Wheel & Aftertouch



Vibrato

Adjust amount of mod wheel and aftertouch to control vibrato.

Tremolo

Adjust amount of mod wheel and aftertouch to control tremolo.


CF Offset

Adjust amount of offset that mod wheel to control VCF cutoff. (negative or positive)

RE Offset

Adjust amount of offset that mod wheel to control VCF resonance. (negative or positive)

EFX Send

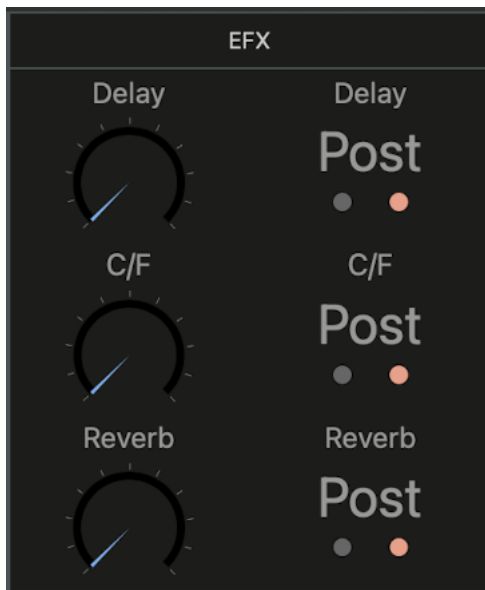

Delay Send

Adjust level of the signal send to delay effect.

C/F Send

Adjust level of the signal send to chorus / flanger effect.

Reverb Send

Adjust level of the signal send to reverb effect.

Delay Pre/Post

Select Pre (pre fader) or post (post fader) to specify source of the signal for delay.

C/F Pre/Post

Select Pre (pre fader) or post (post fader) to specify source of the signal for chorus/flanger.

Reverb Pre/Post

Select Pre (pre fader) or post (post fader) to specify source of the signal for reverb.

“Pre” means pre fader. Signal is taken before volume level is applied to the signal.
“Post” means post fader. Signal is taken after volume level is applied to the signal.

Output Mixer

Output Signals from the effects can be adjusted by output mixer.



Delay Level

Adjust level of delay signal to EQ.

C/F Level

Adjust level of Chorus / Flanger signal to EQ.

Reverb Level

Adjust level of Reverb Signal to EQ.

Master Output

Level and Pan of the master output can be adjusted in master section.



Volume

Adjust level of the master output.

Pan

Adjust pan of the master output.

Mute


Turn on to mute master output.

Step Sequencer


3 channel Analog Style 8 Step Sequencer to play notes and modulate parameters.



Step

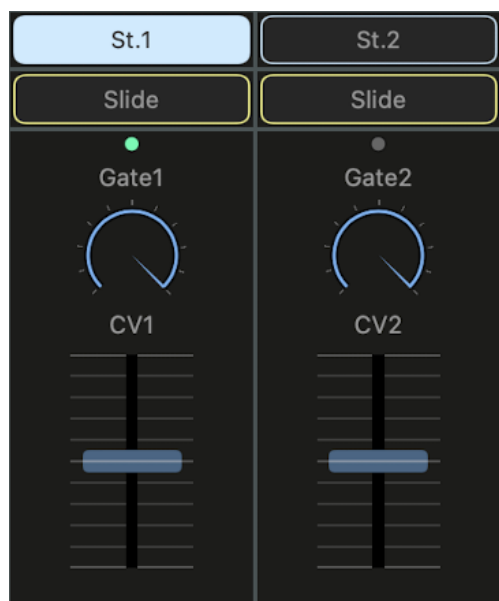

Slide is off

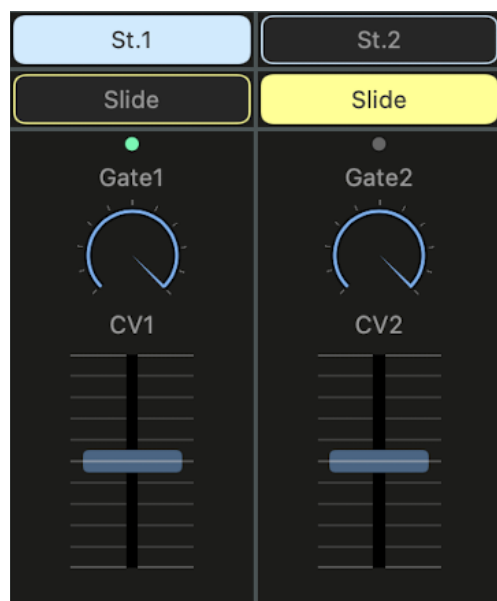

Slide is on

Step Switch

Enable / Disable trigger to the step.

Slide Switch

Enable / Disable slide (when trigger is off).

Gate

Adjust amount of Gate signal (Velocity) for the step. Range is from 0% to 100%.

CV

Adjust Amount of CV signal (Pitch) for the step. Range is one octave. Note value varies by setting of Root Key and Octave Range.

Sequencer Options



Play

Turn it on to enable sequencer for playing. Tap any key on keyboard to start the sequencer.

Mode

Select an operation mode. Options are Mono, Chord, Unison and Off. When chord is selected, use Quantize option to select Minor or Major.

Rate

Adjust frequency of clock to drive the sequencer.

Tempo Sync

Turn it on to enable Tempo Sync.

Quantize

Select a quantize option for CV signal. Options are Minor, Major and Off.

Steps

Select number of steps for the loop.

Gate

Adjust pulse width of gate signal.

KBD Root

Enable / Disable pressed note on keyboard to set root key.

Root Key

Select a Root Key of CV signal. Range is from C-2 to C8 (MIDI 0 ... 127).

Octave Range

Select an Octave Range of CV slider. Range is from 1 octave to 10 octaves.

Modulation



Clock Division

Adjust speed of sequencer for modulation signal. Options are 1, 1/2, 1/4 and 1/8.

Mod Amount

Adjust amount of modulation.

Target

Select a target of modulation. Options are Off, LPF, HPF, VCA and Delay.

Mod Attack

Adjust attack time of envelope for modulation signal.


Mod Release

Adjust release time of envelope for modulation signal.

Sync

Enable this option to sync phase of note sequencer and modulation sequencers.

S&H

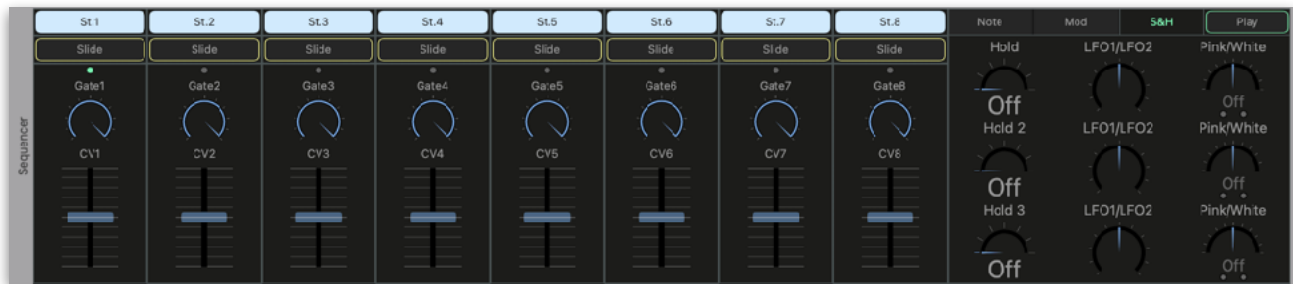

Hold

Select number of steps to hold the sampled CV sequences. Options are 8, 16, 32, 64, 128, 256 and off. When the value is 256, 8 steps are repeated 32 times. Length of the loop is depended on the Clock Rate.

LFO1/LFO2

Adjust balance of LFO1/LFO2 signal to be sampled on active step.


Pink/White

Adjust amount of pink noise / white noise signal to be mixed with LFO signal to be sampled on the active step.


Sync with Transport Control

Play/Stop button of build-in piano roll sequencer or host application can start and stop step sequencer.


Enable CVSEQ PLAY OVERRIDE in setting panel.

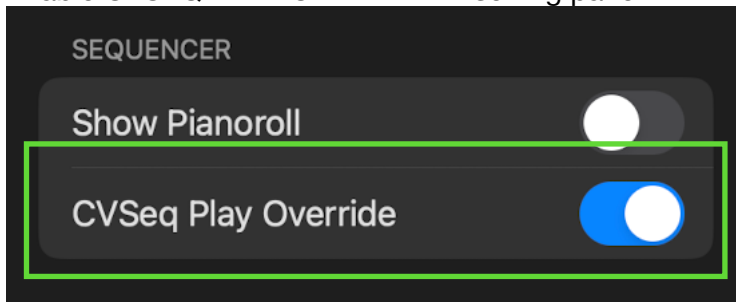

 Enable Host Sync to be control by the host application.



 Press Play Button of build-in piano roll sequencer or host application starts step sequencer and it is indicated by the play button of the step sequencer.



Assignable Controllers



Tap “Assign” button and tap on a control to assign the parameter to the control.


Macro Factory Presets

Five factory presets, Mixer_VCF, VCA&EFX, F-EG&A-EG, ChannelStrip and Effects can be used to set parameters to Assignable Controllers.

Effects

Delay

Signal Flow

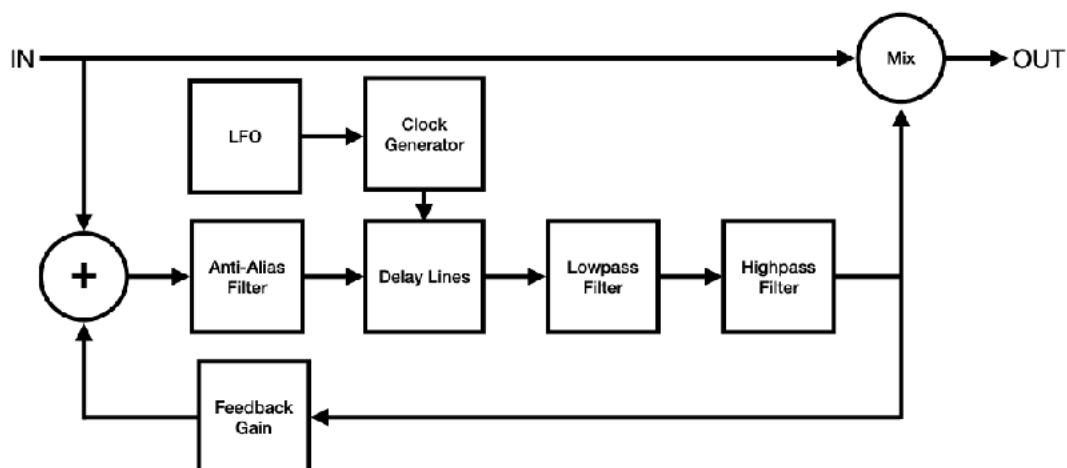

Delay Time

Adjust delay time from 20 ms to 1200 ms. When sync switch is turned on, delay time can be set as note value which is synchronized to the tempo. Valid range of the note value is automatically adjusted base on the current tempo.

Regeneration

Adjust feedback from 0 % to 100 %. You can change sound of the feedback by adjusting frequency of the high-pass filter and the low-pass filter.

Modulation


Modulation can be applied to the delayed signal. LFO (Low Frequency Oscillator) generates sine wave for the modulation.

Adjust LFO frequency from 0.01 Hz to 10 Hz.

Adjust LFO Intensity from 0 to 1.0, which adjust modulation width from 0 ms to +/- 10 ms.

Chorus / Flanger

Signal Flow

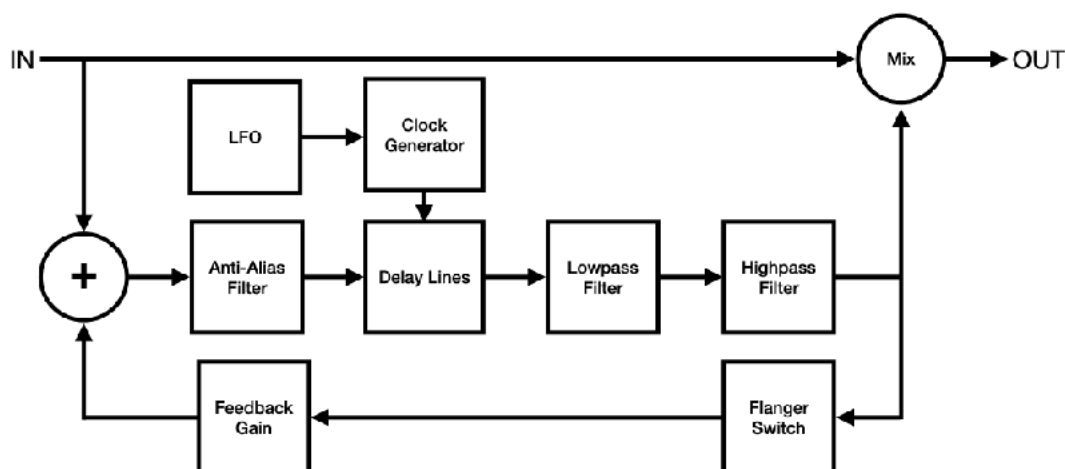

Input Signal Level

Level of input signal should be about -6dB or less. If the input signal is too hot, it will cause distortion in output signal.

Effect Type

Select effect type from chorus or flanger. Ranges of the delay time and the LFO Intensity change based on the selected effect type.

Modulation Speed

LFO Frequency dial controls speed of the modulation. When sync switch is turned on, LFO Frequency can be set as note value which is synchronized to the tempo. Valid range of the note value is automatically adjusted base on the current tempo.

Modulation Width

LFO Intensity dial controls width of the modulation and delay time dial controls center position of the modulation.

When chorus effect is selected, range of the LFO intensity is from 0 ms to 1 ms and range of the delay time is from 1 ms to 40 ms.

When flanger effect is selected, range of the LFO intensity is from 0 ms to 12 ms and range of the delay time is from 1 ms to 13 ms.

Rotate delay time dial counterclockwise to emphasize higher frequency or clockwise to emphasize lower frequency.⁴

LFO Shape

LFO shape dial controls shape of the LFO waveform. When the dial is rotated fully counterclockwise, shape of the waveform is sine wave. When the dial is rotated fully clockwise, shape of the waveform is triangle wave.

Stereo Width

Stereo Width dial controls phase offset of the LFO. When the dial is rotated fully counterclockwise, stereo width is 0%. (phase offset is 0 degree) When the dial is rotated fully clockwise, stereo width is 100%. (phase offset is 180 degree)

Regeneration

Feedback dial controls amount of regeneration from 0 % to 100 %. Turning the feedback dial clockwise enhances amount of the feedback effect.


⁴ If compared with manual knob of the analog flanger guitar pedal, emphasized frequency moves reverse direction.

Filters

Delayed signal is routed to high-pass filter and low-pass filter before mixed with dry signal. HP frequency controls frequency of the high-pass filter. LP frequency controls frequency of the low-pass filter.

Reverb

Signal Flow

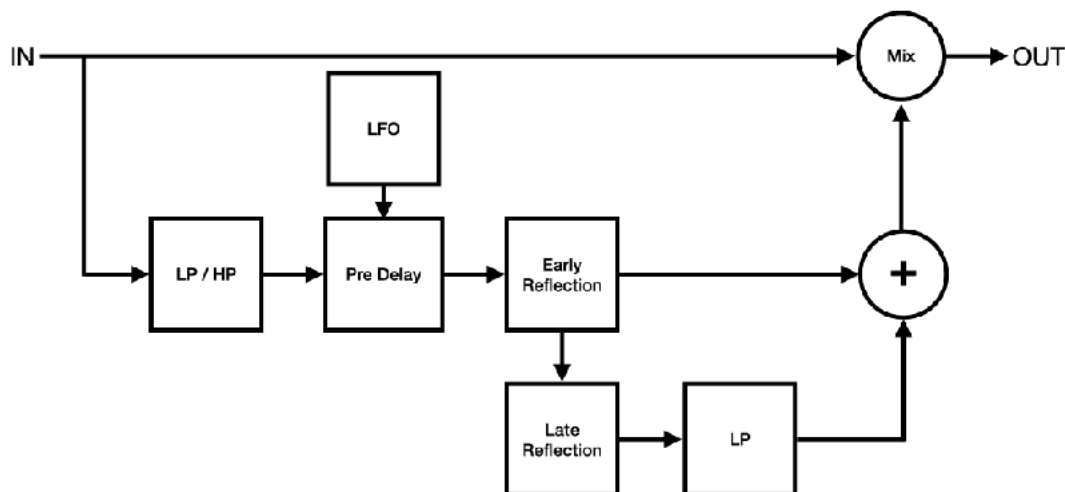

Input Filter

Use Lowpass filter and high-pass filter to attenuate high frequency and low frequency of the input signal.

Pre Delay

Use pre delay to adjust amount of the time between the direct signal and beginning of the early reflection signal. This parameter can be used to express size of the space. Reflection takes short time to bounce back in small room and it takes long time in large room. Also this parameter can be used to separate dry signal and reverb signal in the mix.

Modulation Speed

LFO Frequency dial controls speed of the modulation. When sync switch is turned on, LFO Frequency can be set as note value which is synchronized to the tempo. Valid range of the note value is automatically adjusted base on the current tempo.

Modulation Width

LFO Intensity dial controls width of the modulation and pre delay time dial controls center position of the modulation. Range of the LFO intensity is from 0 ms to +/- 10 ms.

Size and Decay

Size dial controls reverb time of late reflection and decay dial controls length of the reverb tail. Decay time can be used to express size of the space and material of the surface. Reflective materials, such as concrete or hardwood, gives longer decay time.

When auto size switch is turned on, size dial controls value of the parameters including size, pre delay, decay, damp, output LP frequency and early/late mix.

When sync switch is turned on in auto size mode, total reverb length, which can be controlled by pre delay, size and decay, is adjusted by note value which is synchronized to the tempo.

Damping

Damp dial controls amount of high frequency absorption for the late reflection signal. Low damping values produce brighter reverb sound and high damping values produces darker reverb sound.

Output Filter


Use lowpass filter to cut high frequency of the reverb signal.

Early / Late Mix

Adjust balance of the early reflection signal and late reflection signal from 0% (early reflection) to 100% (late reflection).


Equalizer

Low Shelving

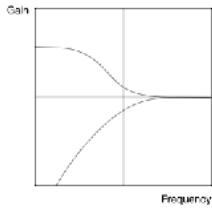


Adjust frequency of the filter from 21 Hz to 1092 Hz.
Adjust gain from minus infinity to +12 dB
When gain is turned fully anti clock wise, the filer becomes high pass filter.

Mid Peak / Notch

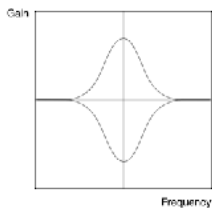

Adjust frequency of the filter from 151 Hz to 2389 Hz.
Adjust gain from -14 dB to +14 dB
Bandwidth is fixed to one octave.

High Shelving

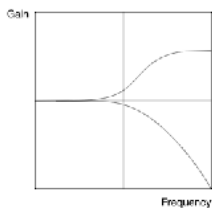


Adjust frequency of the filter from 296 Hz to 21096 Hz.
Adjust gain from minus infinity to +12 dB
When gain is turned fully anti clock wise, the filer becomes low pass filter.

Compressor

Overview

The compressor reduces dynamic range of audio signal. This is achieved by feedback topology as shown in the diagram below.

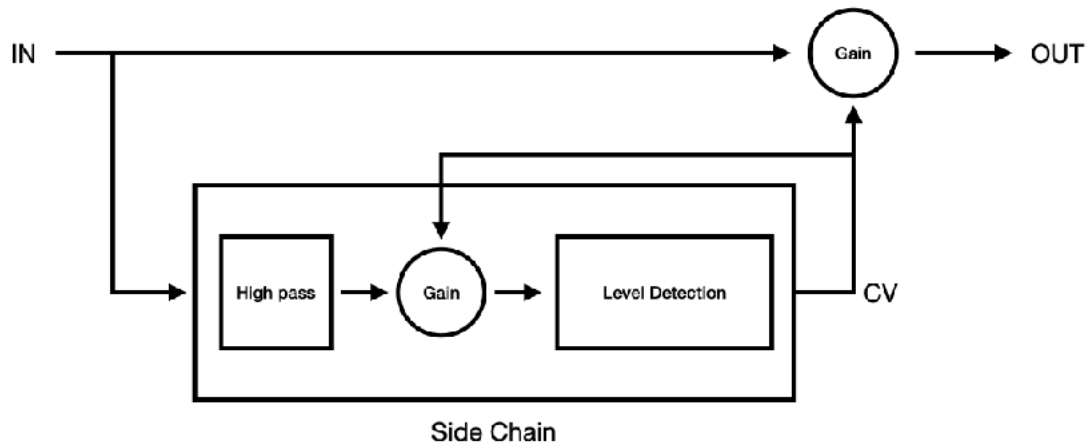


High pass filter is applied to the input of the side chain and the signal is routed to the gain stage in the side chain. The output of the gain stage is routed to the level detection. The level detector detects level of the input signal and generates control signal based on the level of the gain reduction required. The control signal is routed to the amplifier in the gain stage in the side chain to adjust level of the input signal from the high pass filter. The same control signal is also routed to the amplifier of the main gain stage to adjust level of the input signal.

The feedback topology is common in early analog compressors. Although there are several disadvantages to this topology, it is considered more musical than feed-forward design used in modern compressors. The feedback loop is implemented without unit delay to emulate behavior of the analog circuit.


Threshold and Ratio

When level of the input signal passes above the threshold, the input signal is compressed by the ratio.

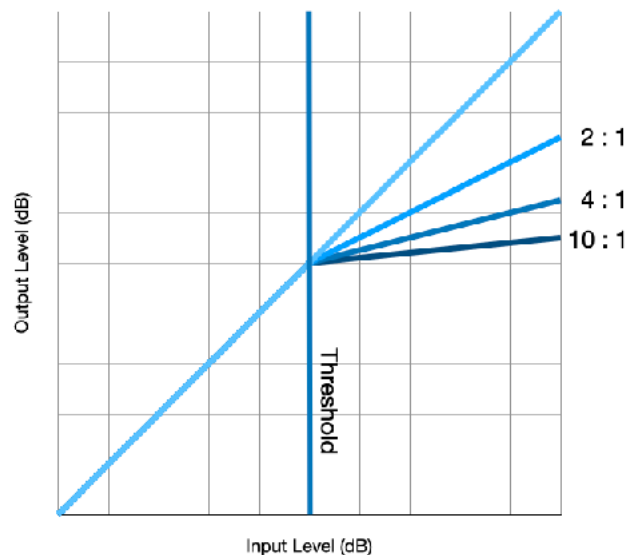


Attack and Release

Attack is the time it takes for the signal to be compressed by the given ratio. Release is the time it takes the gain reduction to return to zero.

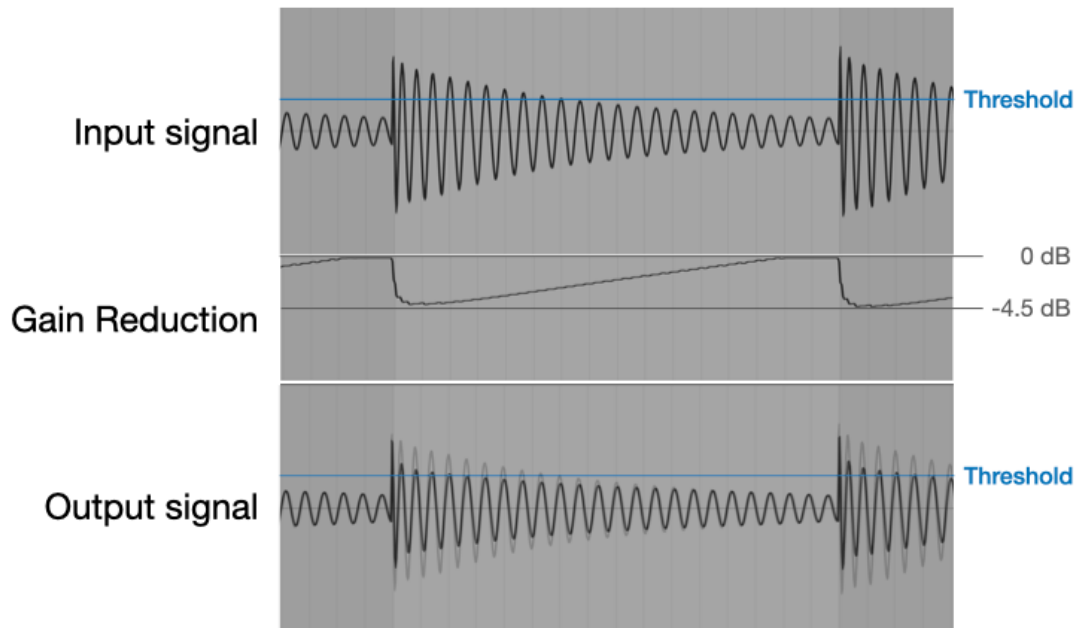


In this example, attack is 1 ms and release is 0.6 s. The initial transient pass through the compressor without gain reduction. It takes a while for the gain reduction to return to 0 dB after the input signal goes below the threshold.

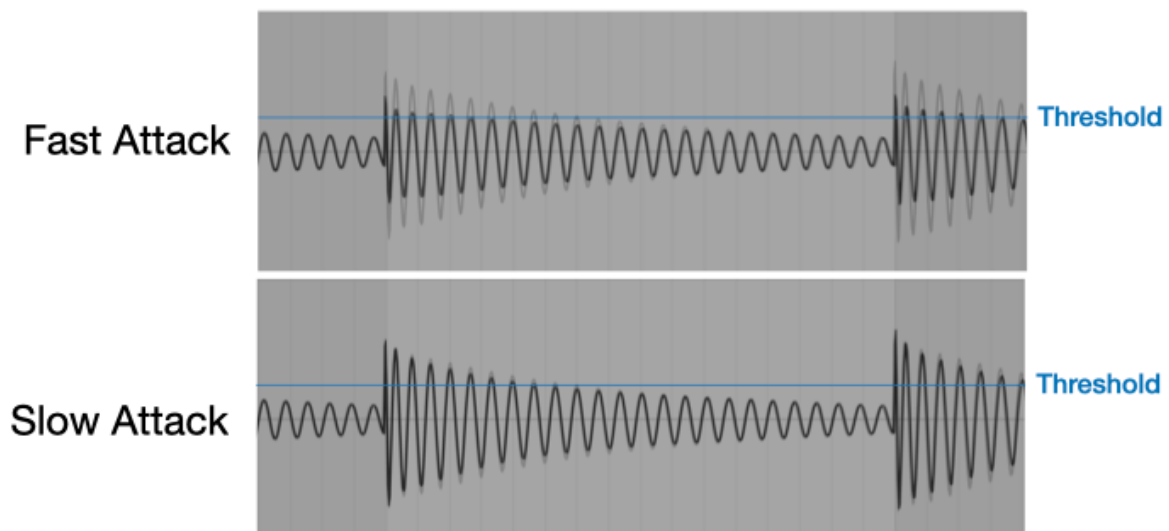

Fast attack makes compressor to start gain reduction immediately after the input signal passes above the threshold. Slow attack, on the other hand, allows many of the transients to pass through compressor without gain reduction.

The figures below illustrate characteristic of the attack and the release. 1KHz Sine wave is used as an input signal (shown as transparent background images). It shows how compressor reacts with various combination of the attack and release settings.

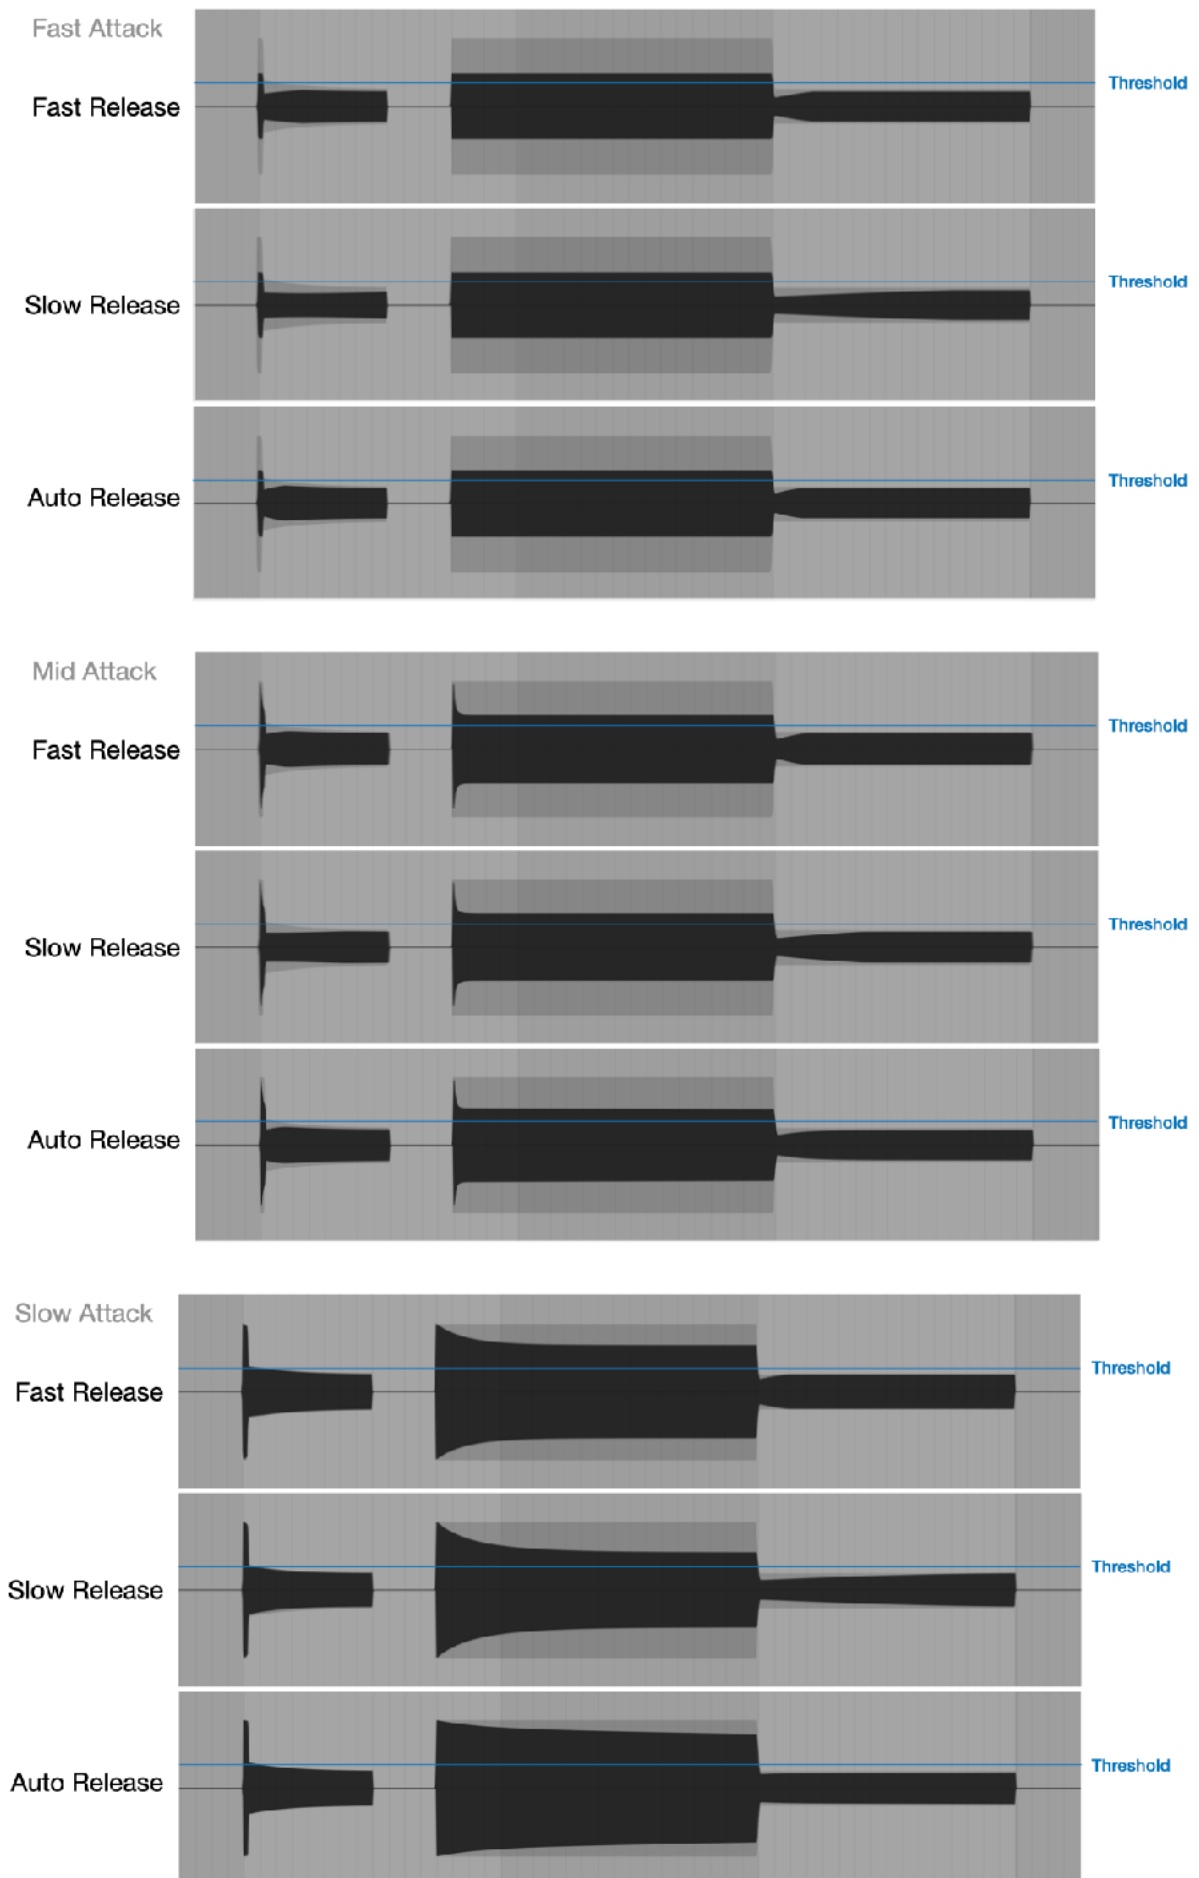

Auto Release uses two time constants for the peak detector. It will react differently for the short transients and the long sustained sound.

Fast attack reduces the level of the transients and make sound soft, slow attack allows transients to pass through and gives a punch to the sound.

Fast release causes pumping and breathing effects. Slow release continues to reduce level for a long period of time after compressing louder part of the sound.


Side Chain High Pass Filter

-6 dB / octave high pass filter is applied to the input signal of the side chain. Frequency range is from 20 Hz to 185 Hz. This filter removes low frequency information from the input signal for the level detector to control excessive gain reduction and pumping effect.

Makeup Gain


Use Makeup to compensate the gain reduced by the compressor. The range is from 0 dB to 20 dB. Gain reduction meters show the amount of the gain reduction. You can use the information to adjust level of the makeup gain.

Gain Reduction Meter

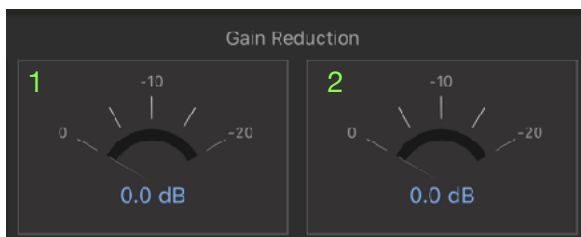

Gain reduction meters show peak level of the gain reductions in dB.

1. Gain reduction for the left channel
2. Gain reduction for the right channel

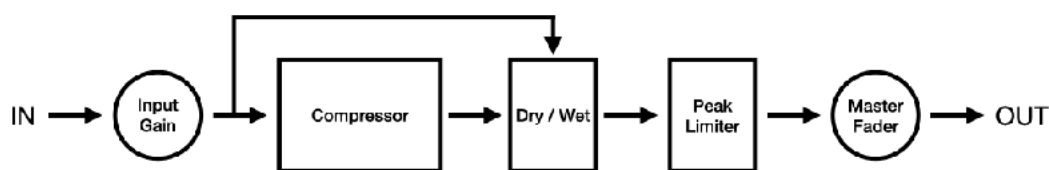

Input Gain

Adjust gain of the input signal routed to the compressor. The range is from -20 dB to 20 dB. When level of input signal is increased, GR meters show gain reductions even if threshold is set to 0 dB.


Dry / Wet

Use Dry / Wet to mix uncompressed signal (dry) and compressed signal (wet). Parallel compression technique, also known as New York compression can be achieved by adjusting amount of the wet signal mixed with the dry signal. When set to 0%, output is the dry signal. When set to 100%, output is the wet signal. When set to 50%, equal amount of the dry and the wet signal are mixed for the output.

Peak Limiter

Peak Limiter is an analog style limiter and provides clean sounding output signal. This limiter is not a lookahead brick wall limiter, so that it can't offer brick wall limiting. However it does not introduced any latency to the output signal.

Frequency response of the peak limiter is illustrated in the figure below. Output signal shows the result of 1 dB gain reduction.

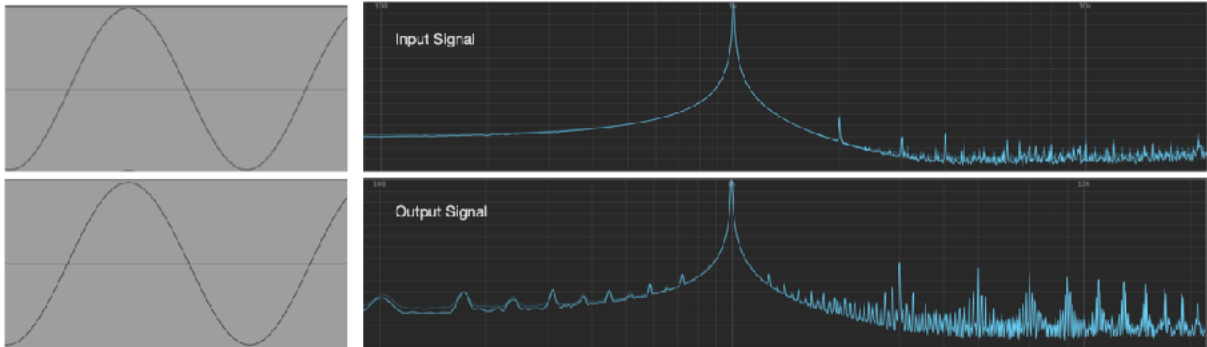

Key Pad




Select Key Pad

Turn Keyboard Button off to show key pad.




Select Octave

Use plus / minus buttons to adjust octave range of the key pad. Indicator shows octave of the lowest note of the key pad.

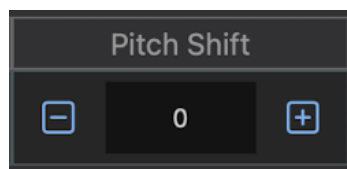

Select Pitch Shift

Use plus / minus buttons to adjust pitch range of the key pad.

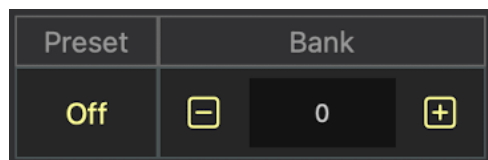

Select Preset Type and Bank


Select a preset type. Options are Off, Factory and User. When factory or user is selected, tap on key pad to select a preset.

Use plus / minus buttons to select a preset bank. Preset number is sum of the key pad number and bank number * 16. When triggered from external keyboard or sequencer, pitch also changes. This feature is ignored when exporting audio.




Select Top and Mid Panel

Select a module for the top panel and mid panel.

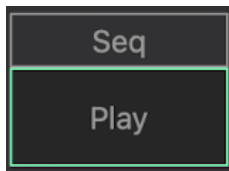


Play Switch for Step Sequencer

Turn it on to enable sequencer for playing. Tap any key on key pad to start the sequencer.

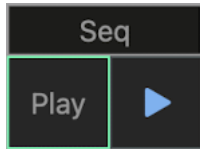


Override Switch for Step Sequencer

Tap on play icon to override play setting of presets.

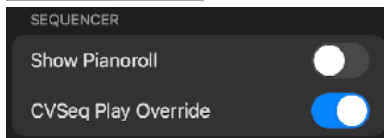


Ribbon Controller

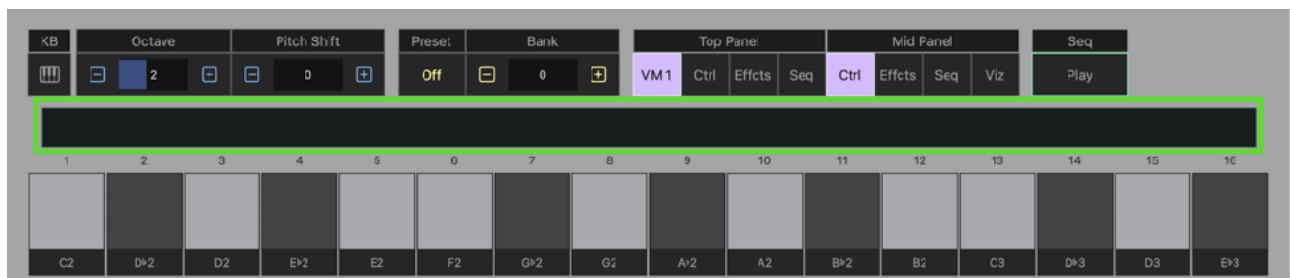

Dragging the Ribbon Controller applies linear pitch bend.

Keyboard

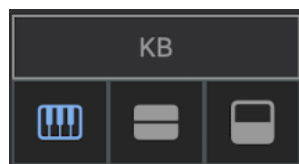

Select Keyboard

Turn Keyboard Button on to show keyboard.



Select Key Range

Use plus / minus buttons to adjust range of the keyboard. Indicator shows octave of lowest note of the keyboard. Tap on arrow button to enable keyboard scrolling.

Use Modulation Wheel




Adjust amount of the modulation when Mod Wheel is selected in modulation source.

Use Pitch Wheel




Adjust pitch of the oscillators. Range is +/- 1, 2, or 4 octave can be adjusted by FM range option.

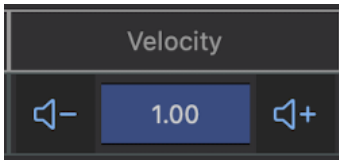

Set Velocity

 Use plus / minus buttons to adjust velocity.




Use Key Hold

Tap to Enable/Disable Key Hold.




Top & Mid Panel

Select a content of top panel and mid panel.

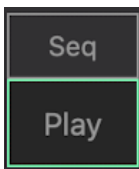


Play Switch for Step Sequencer

Turn it on to enable sequencer for playing.
Tap any key on keyboard to start sequencer.

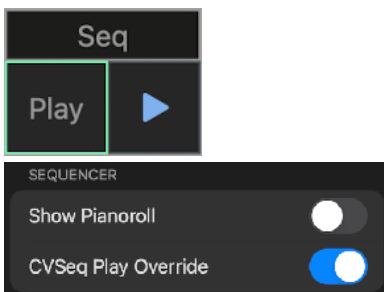



Override Switch for Step Sequencer

Tap on play icon to override play setting of presets.

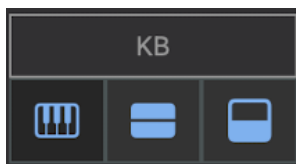


Show Double Keyboard

Tap a button on left to show Double Keyboard. Tap a button on right to select a keyboard to control.

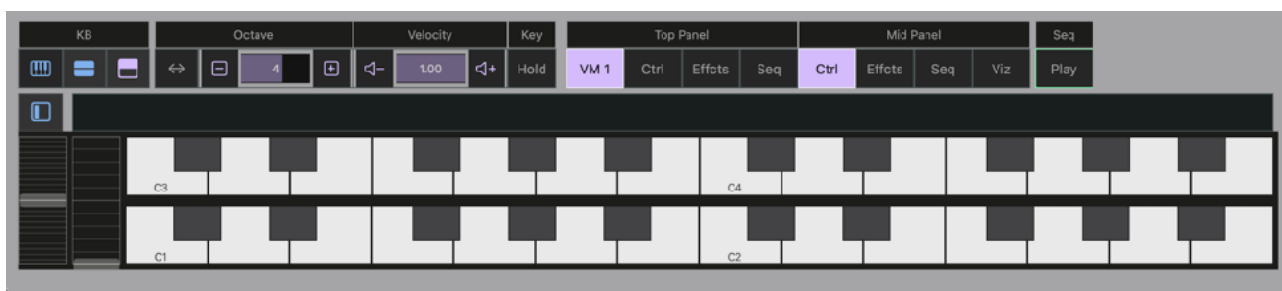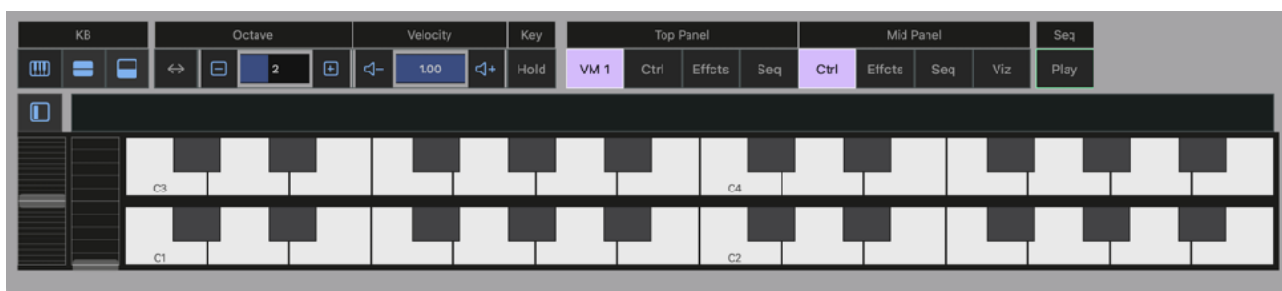



Ribbon Controller

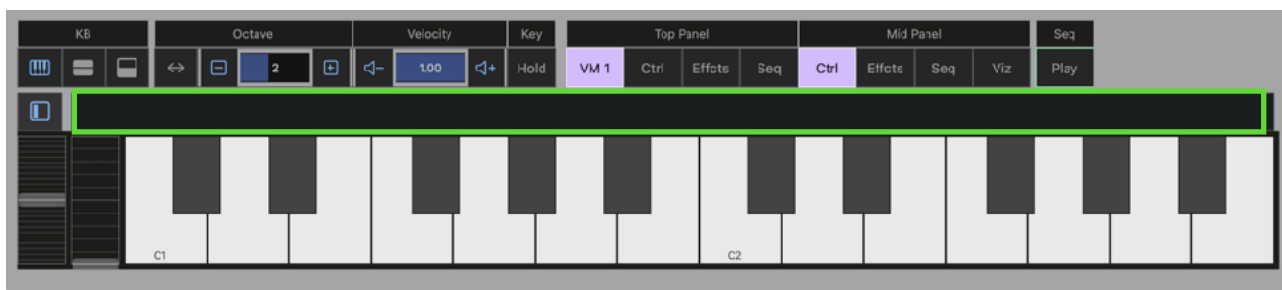


Dragging the Ribbon Controller applies linear pitch bend.

Sequencer (Piano Roll)


Enable Piano Roll Sequencer in setting panel to show piano roll sequencer.

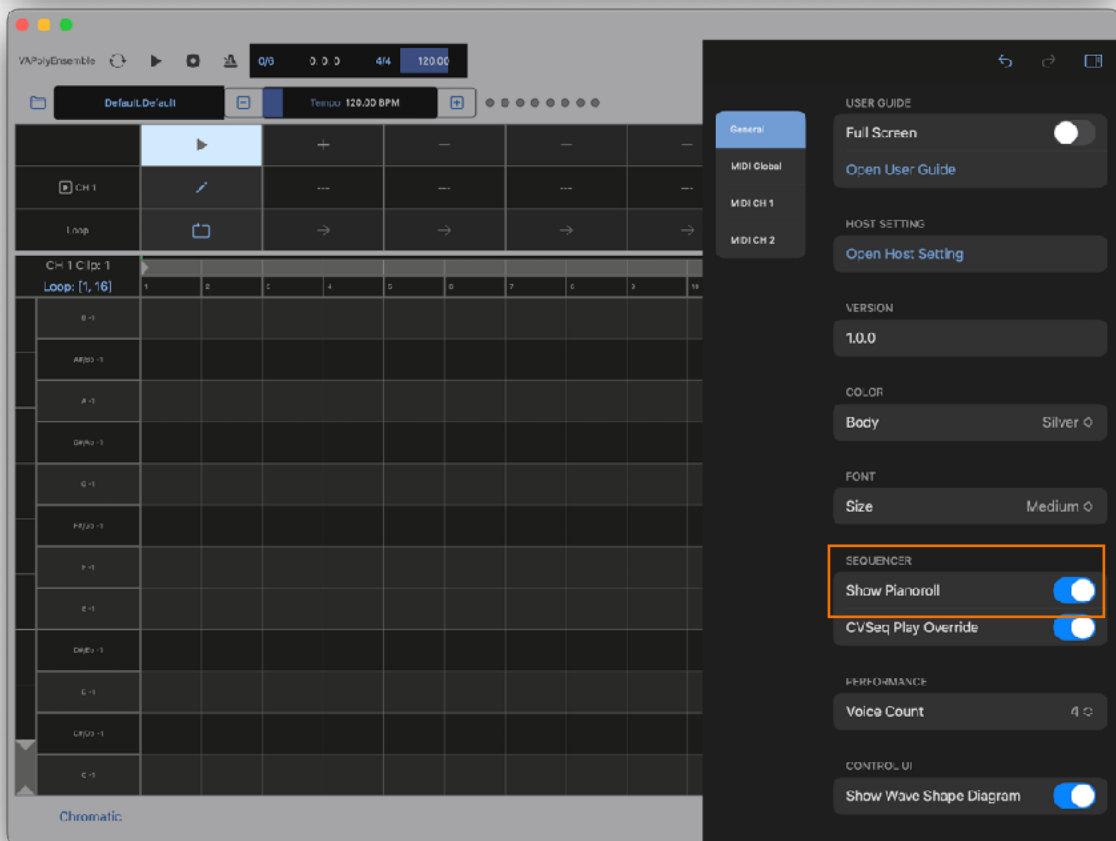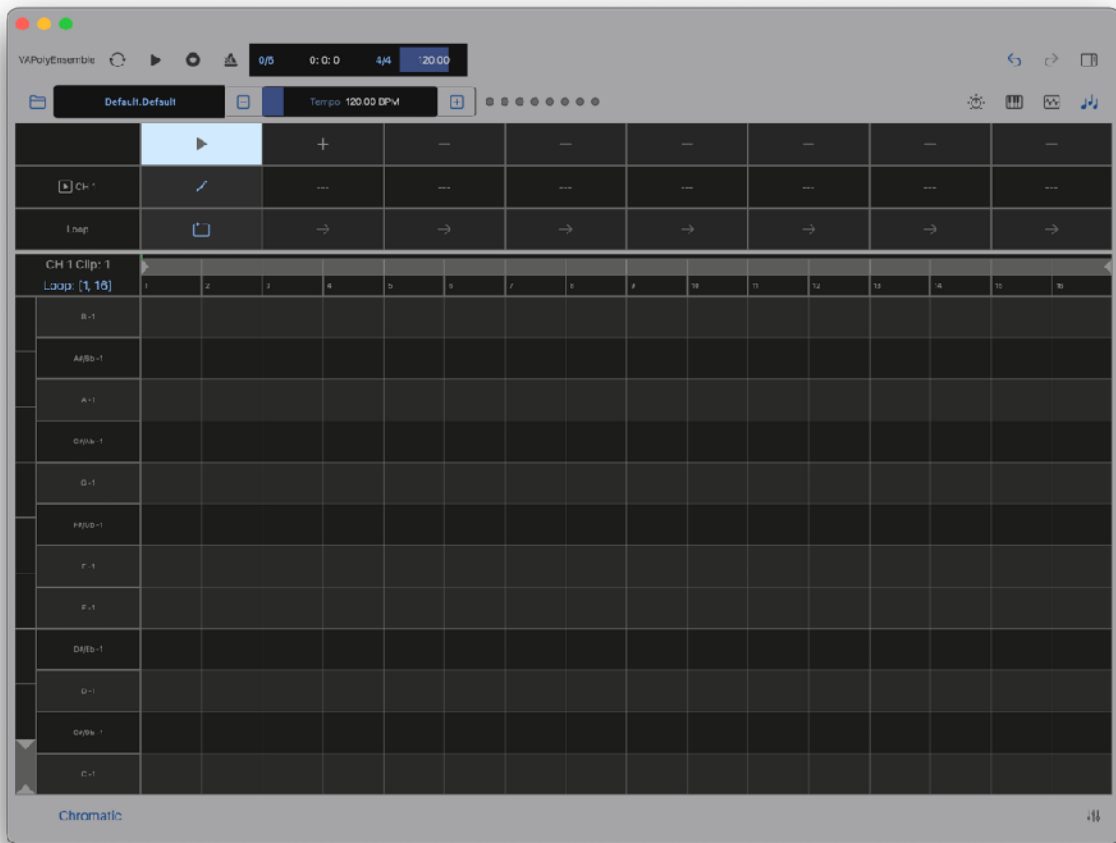

Clip Editor

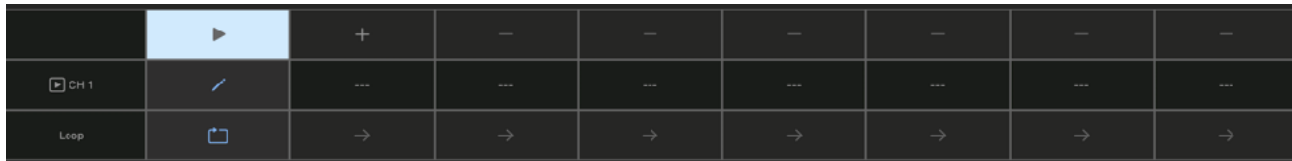

Each clip contains note event and parameter automation events for length of 16 bars. Maximum number of clips are 8.

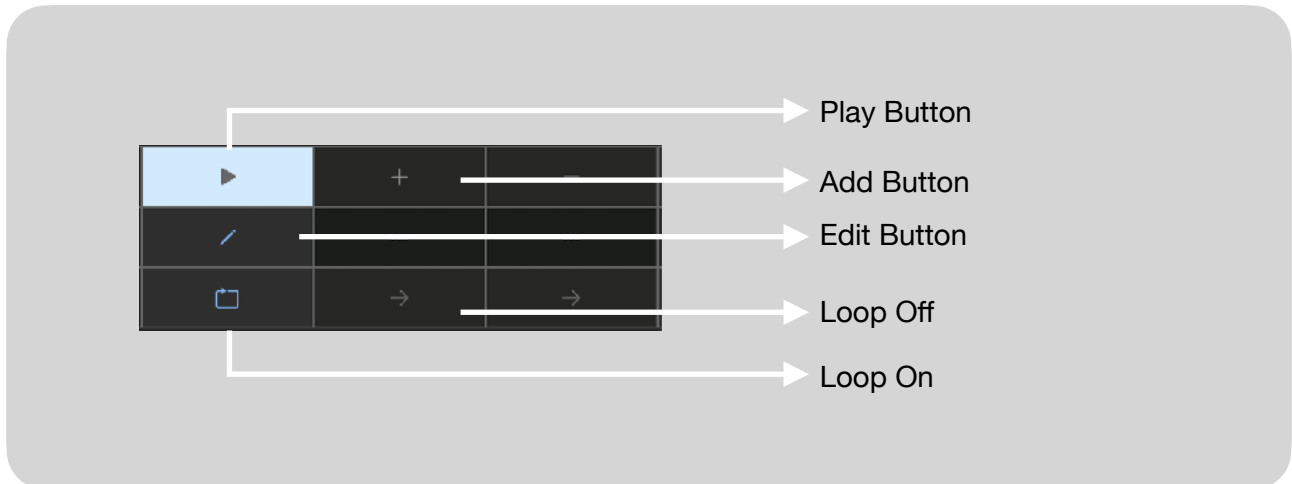

Load Clip

Tap load button to load clip to make it active.

Play/Stop Clip

Tap play button to play/stop clip.

Edit Piano Roll

Tap edit button to open piano roll editor.

Add edit button

Tap plus button to add edit button.


Set Loop Mode

Tap this button to enable/disable loop mode. When loop is off, tap square icon to select a clip to play next.

Auto Select Editor

Tap Synth Row Label to toggle Auto Select Editor Switch. When Auto Select is enabled, editor changes while playing sequence.

Piano Roll Editor

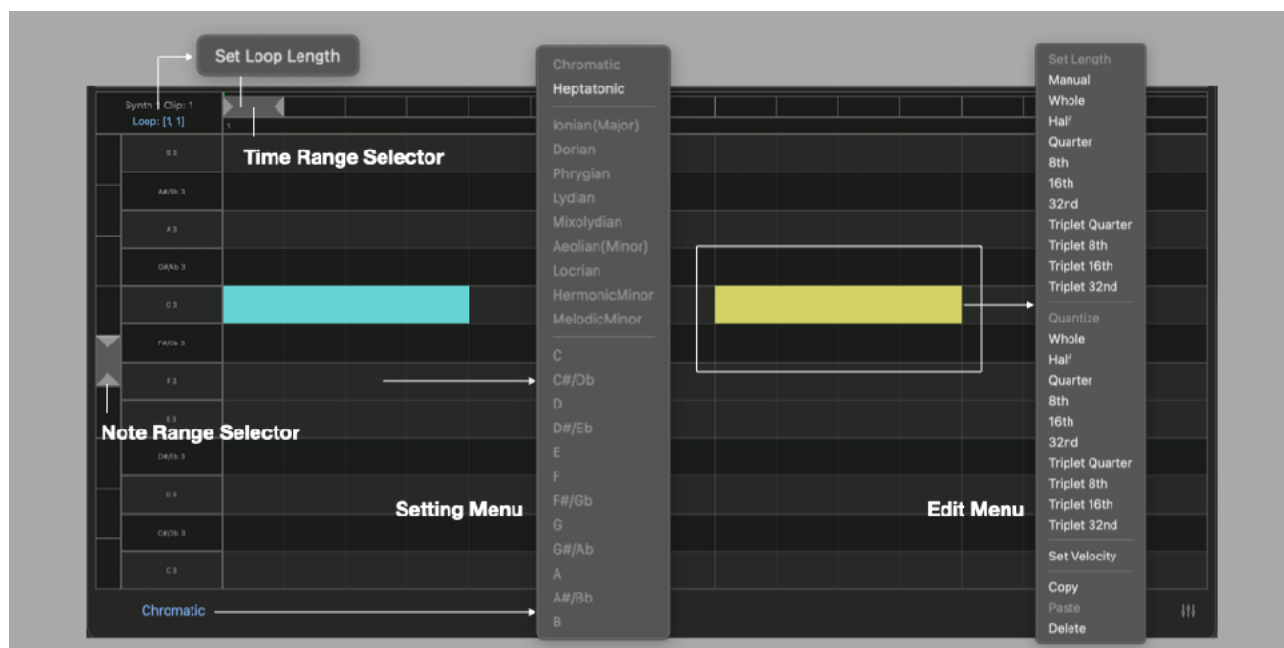

Select Time Range and Loop Length

Use “Time Range Selector” to select Time Range for editing and Loop Length. On iOS, pinch gesture control zooming and drag gesture control scroll position.

To set Loop Length, tap on Loop Length button to show menu and select “Set Loop Length”. Right click on selector on Mac also show the menu.

Select Note Range

Use “Note Range Selector” to select note range for editing. On iOS, pinch gesture control zooming and drag gesture control scroll position.

Add Note

Double tap to add a note.

Delete Note

Select note and select Delete from context menu.

Scale Menu

Press and hold (right click on macOS) editor to show scale menu. Tap on scale button also shows the menu.

Edit Menu

Press and hold (right click on macOS) selected note to show edit menu.

Chromatic

Heptatonic

Ionian(Major)

Dorian

Phrygian

Lydian

Mixolydian

Aeolian(Minor)

Locrian

HermonicMinor

MelodicMinor

C

C#/Db

D

D#/Eb

E

F

F#/Gb

G

G#/Ab

A

A#/Bb

B

Chromatic Scale

Select Chromatic to edit notes in Chromatic Scale (12 tones).

Heptatonic Scale

Select Heptatonic to edit notes in Diatonic Scale, Harmonic Minor Scale or Melodic Minor Scale (7 degrees).

Root Key

Select a root key, when editing note in Diatonic Scale, Harmonica Minor or Melodic Minor Scale.



Set Length

Select an option to set note length.

Quantize

Select an option to quantize note.

Set Velocity

Open velocity editor to edit note velocity.

Copy

Copy selected notes.


Paste

Paste notes.

Delete


Delete selected notes.

Velocity Editor

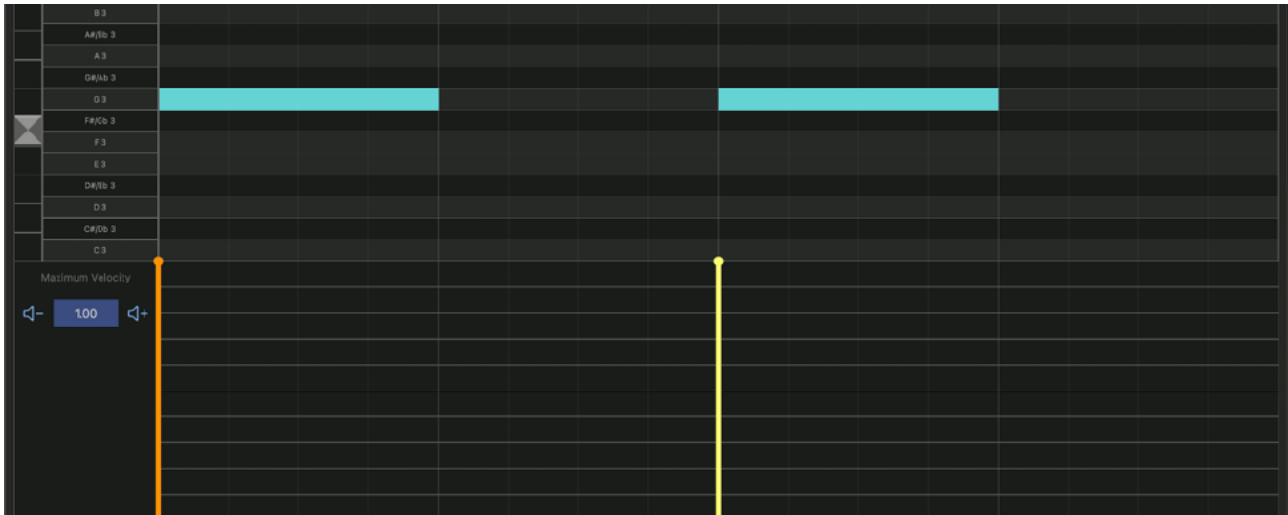


1. Select a note and open context menu.
2. Select "Set Velocity" in context menu
3. Select velocity sliders and adjust the velocity. Indicator in side bar shows maximum velocity in the selection. Maximum velocity value can be adjusted by plus and minus button and slider of the indicator.

Parameter Automation Editor

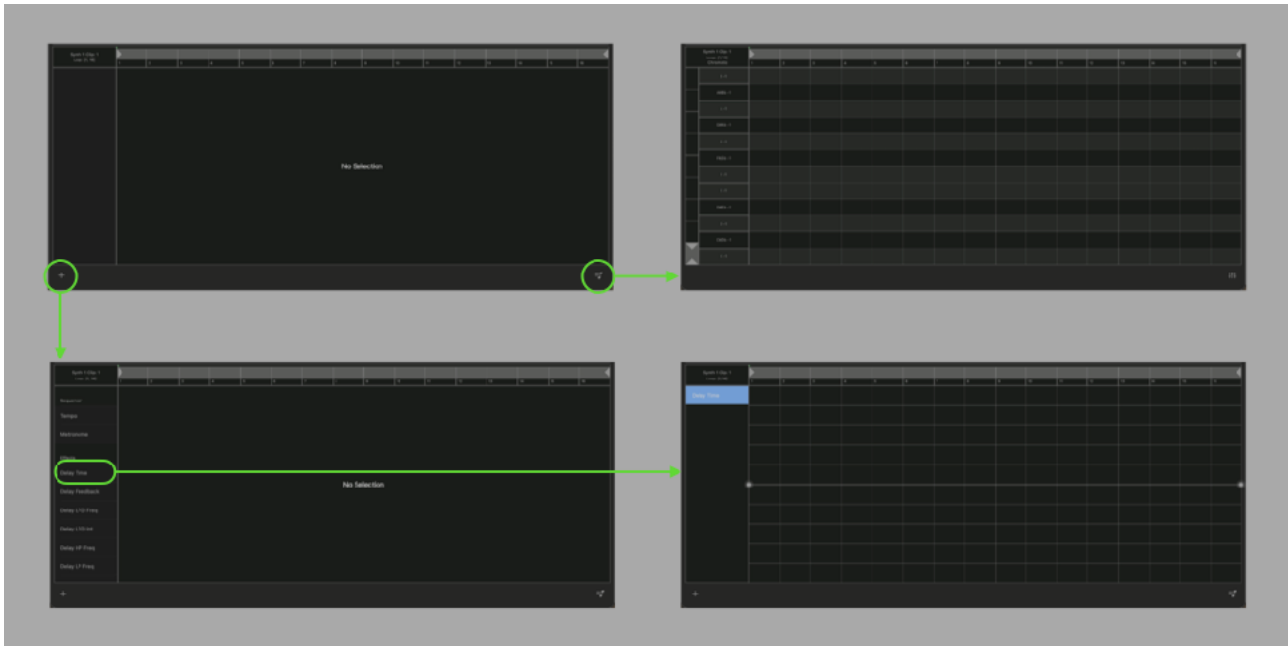

1. Tap plus button to show parameter list.
2. Select a parameter to edit.
3. Press and hold (right click on macOS) on parameter name to show context menu. Tap Delete to delete the parameter form editor.

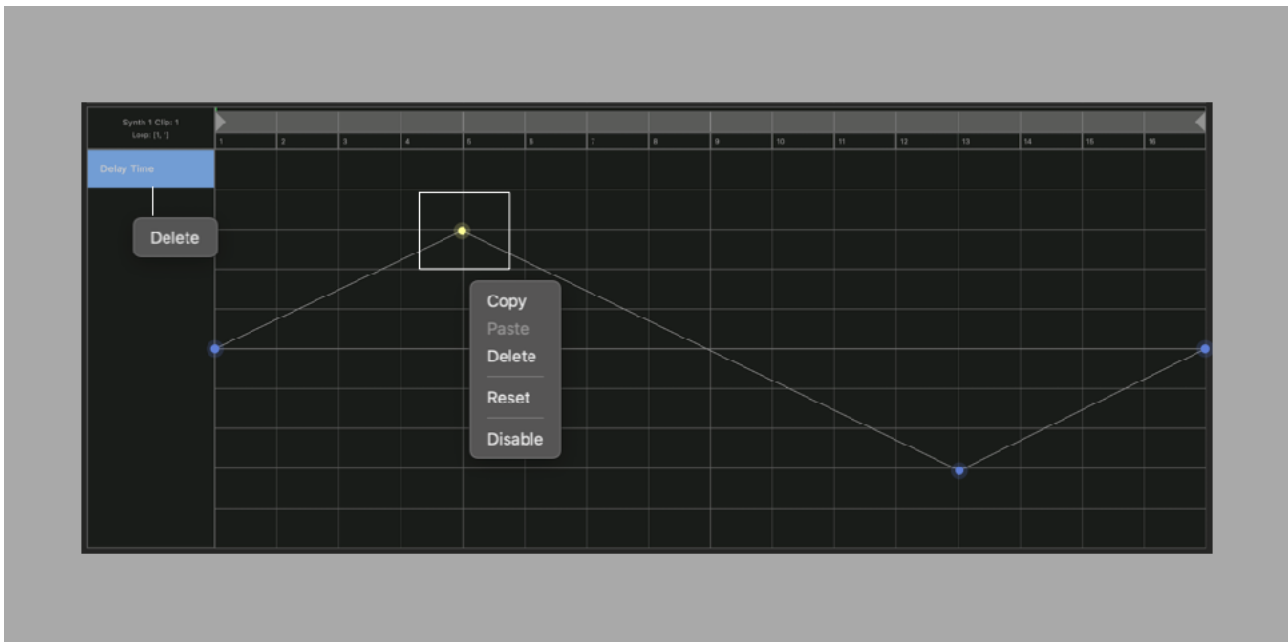

4. Double tap to add an edit point.
5. Select edit points and press and hold (right click on macOS) on editor to show context menu.
6. Select Reset from context menu to reset the parameter.
7. Select Disable to inactivate automation.

Play Sequence

1. Set host sync

Tap sync button in transport bar to enable / disable sync mode.

When sync mode is enabled,

Stand Alone

Sequencer is synced to the clock provided by container application. The container application can use Ableton Link to synchronized with the Link enabled devices. Use buttons in transport bar to play / stop sequence and change tempo.

Plugin

Sequencer is synced to the clock provided by the host application. Use transport switches of the host application to play / stop the sequence and change tempo.

When sync mode is disabled,

Sequencer is driven by internal clock. Use buttons in transport bar to play / stop the sequence and change tempo.

2. Set tempo

Tap plus / minus button at the tempo section in the transport bar to open tempo slider. Tempo can be adjusted by the plus / minus buttons and the tempo slider. Tempo slider can adjust tempo by range of plus/minus 20 BPM. Double tap on the slider set center position to the current tempo value. Alternatively tapping on tempo indicator allows you to type in tempo value by computer keyboard.

3. Set loop

Use Time Range Selector to set loop length.

4. Set swing

Tap swing button in transport bar to show swing menu. Select an option from the menu to apply the swing.

Swing Type	Delay time	Duration (Ratio)	Note
Swing 0/6	0 (no swing)	50%	Straight
Swing 1/6	1/6 of 16th note	54%	Soft swing
Swing 2/6	2/6 of 16th note	58%	Soft swing
Swing 3/6	3/6 of 16th note	62%	Soft swing
Swing 4/6	4/6 of 16th note	66%	Triplet swing
Swing 5/6	5/6 of 16th note	70%	Hard swing
Swing 6/6	16th note	75%	Dotted hard swing

Delay time is an amount of delay applied to the third 16th note when a beat is divided by four 16th notes.

Duration (ratio) is a ratio of duration from the first 16th note to the third 16th note when a beat is divided by four 16th notes.

Amount of delay for the notes in a beat changes proportionally.

5. Set metronome switch

Tap metronome button in transport bar to enable / disable metronome.

6. Play

Tap play / stop button in transport bar or transport switches of the host application to play / stop the sequence.

Record Sequence

1. Set recording mode

Tap record button in transport bar to enable recording mode.

2. Play sequence

Play the sequence by following the steps described above. Recording will start after count-in. When tap recording button while playing, recording start without count-in. To start recording without count-in, play sequence first then tap record button.

3. Record notes

Play keypads or MIDI keyboard to record notes. Notes are automatically quantized at 16 step position.

4. Record parameters automation

Before recording parameter values, use edit command “Reset to Dial Value” to reset values of the parameter to the rest position.

Turn a dial or switch to record the parameter values. The color of the control changes to green to indicate the parameter is recorded. The control won't move automatically until disabling the recording mode in order to move the control freely during the recording.

If the synth or the effects is not producing sound, parameter value will not be recorded.

5. Stop recording

Tap record button in transport bar to disable recording mode or tap play button to stop playback.

Preset

User Preset contains values of the synth parameters and the sequence data. When loading a user preset, value of the synth parameters and the sequence data are both changed. User Presets can be saved in iCloud Drive or in AUv3 plug-in on the device.


To save user preset in iCloud drive, select Save in File Menu. User Presets in iCloud Drive can be accessed from iPhone, iPad or Mac.

To save user preset in plug-in, tap Add button in Preset Browser. Plug-In Preset is stored on the device and can be accessed from any host application which support AUv3 User Preset.

Factory presets contains only values of parameters of the synth and the effects. It doesn't contain any sequence data. When loading the preset, it will change the value of the parameters but sequence data remains the same.

To load factory presets, select a preset in Preset Browser.

File Menu

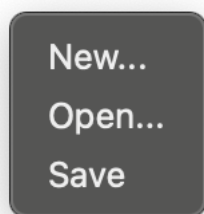

New...

Reset parameters and sequence data.


Open...

Open a preset from iCloud drive.

Save

Save a preset in iCloud drive.

Preset Browser

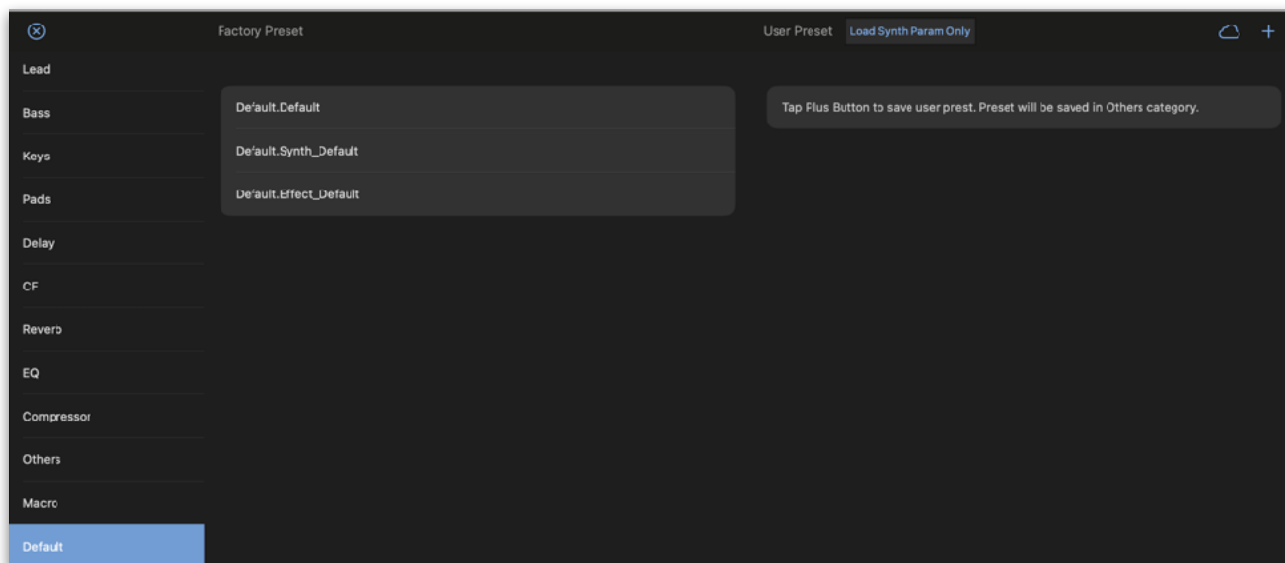

Load Factory Preset

Select a category from a list in the side bar. Tap on the name of the preset in Factory Preset Section to load.

Load User Preset

Select a category from a list in the side bar. Tap on the name of the preset in User Preset Section to load. If “Load Synth Param Only” is on, only synth parameters will be loaded. If the option is off, synth param and sequencer data will be loaded.

Delete User Preset

Tap and hold (right click on macOS) on the name of the preset in User Preset Section to show context menu and select Delete.

Save User Preset




Select a category from a list in the side bar. Tap on plus button to add a user preset.

Backup/Restore User Presets stored in the device




To back up or restore all user presets, tap on the iCloud icon to show export menu.

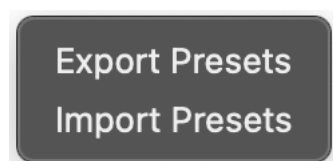

Select Export Presets to back up all of the user presets to iCloud.

Select Import Presets to import saved presets from iCloud.

 
Close File Browser



Tap on X icon to close the browser.

Setting Panel

General

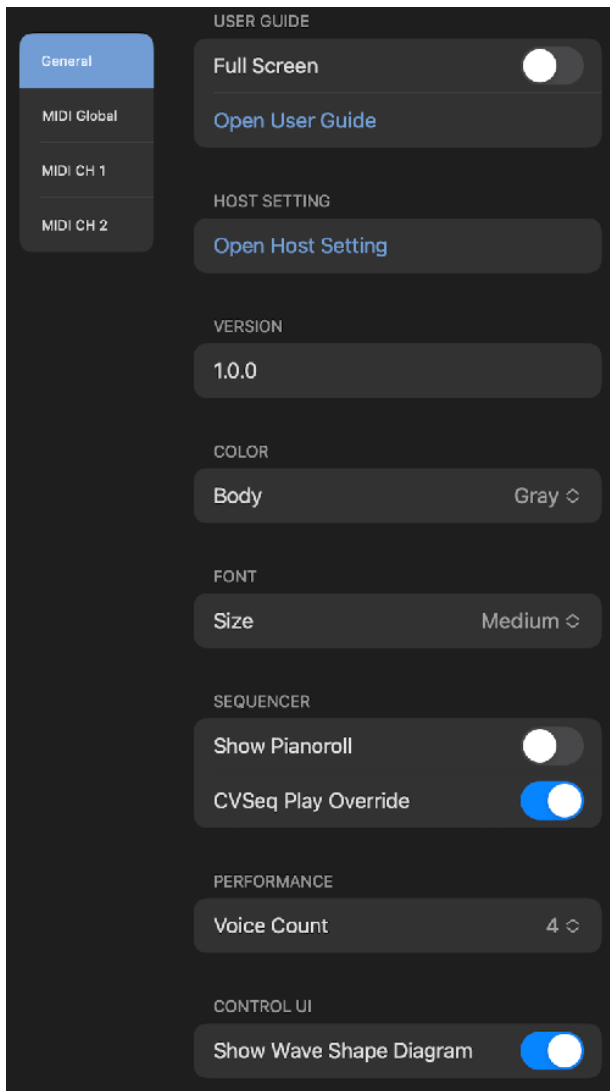

Full Screen

Enable this option to open User Guide in full screen (full window size on macOS).

Open User Guide

Tap this button to open User Guide

Open Host Setting

Tap this button to open Stand Alone Settings

Version

Indicate version number of the installed app.

Color

Select color. Options are black, navy and gray.

Font Size

Select text size of control title. Options are Small, Medium and Large.

Show Piano Roll

Enable to show piano roll sequencer.

CVSEQ Play Override

Enable CVSEQ Play override option.


Voice Count

Set voice count.

Show Wave Shape Diagram

Enable to show wave shape diagram control.

MIDI Global

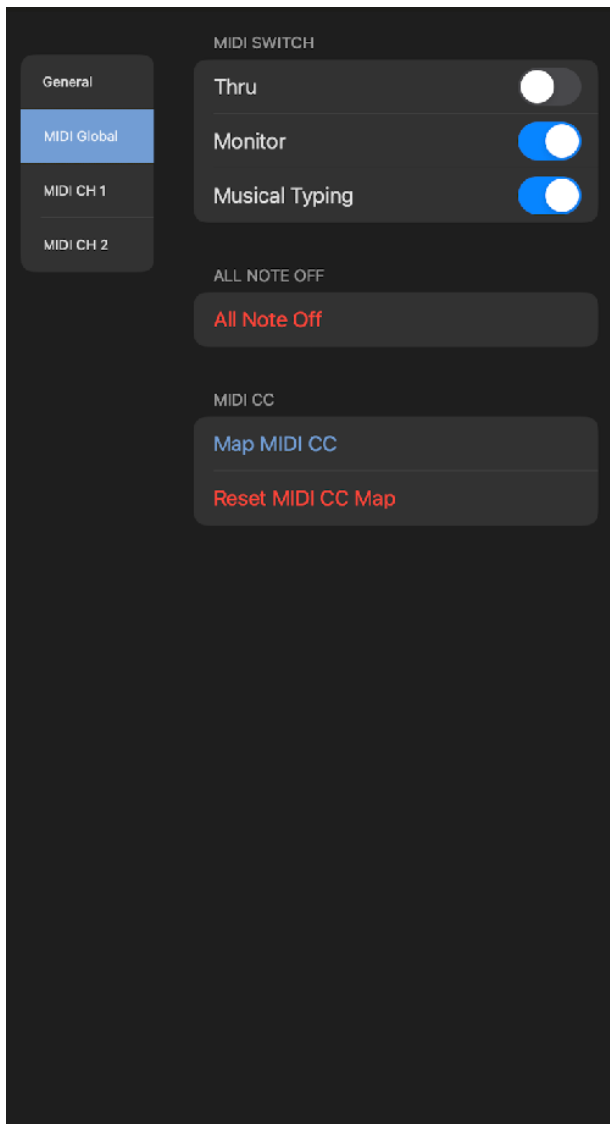

MIDI Thru

When MIDI thru is turned on, MIDI messages received in MIDI input will be send out from MIDI output. This setting is required when connected device's local switch is turned off.

MIDI Monitor

Enable / disable MIDI key input monitoring. Key Range of keyboard and sequencer is automatically adjusted based on the input note.

Musical Typing

Enable / disable computer keyboard to play MIDI notes.

All Notes Off

Send note off message to all notes.


Map MIDI CC

Open or Close Map MIDI CC view.

Reset MIDI CC Map

Remove all MIDI CC Map assignments.

MIDI Synth

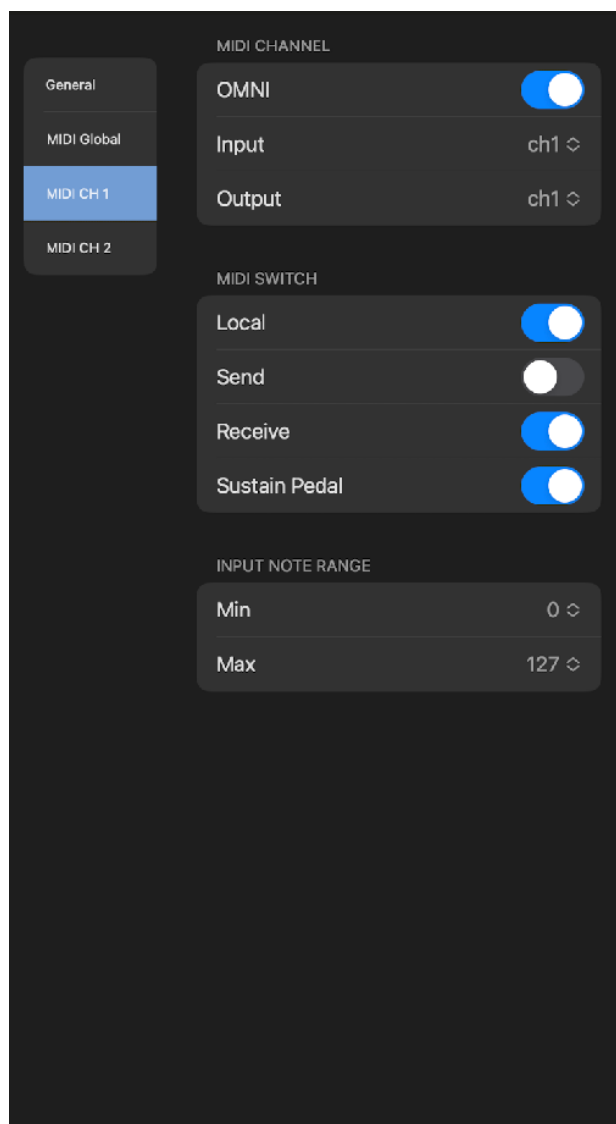

OMNI

Turn this on to connect all channel.

Input

Select input channel

Output

Select output channel

MIDI Local

When sending and receiving MIDI, connected device may send back the MIDI. This causes each notes to play twice. If this problem occurs, turn MIDI Local Switch OFF to disconnect User Interface from the audio engine.

MIDI Send

Enable / disable MIDI output.

MIDI Receive

Enable / disable MIDI input.

Sustain Pedal

Enable / disable to receive Damper Pedal message (MIDI CC #64).

Min


Set min value of MIDI note input.

Max

Set max value of MIDI note input.

Stand Alone Setting

AbletonLink

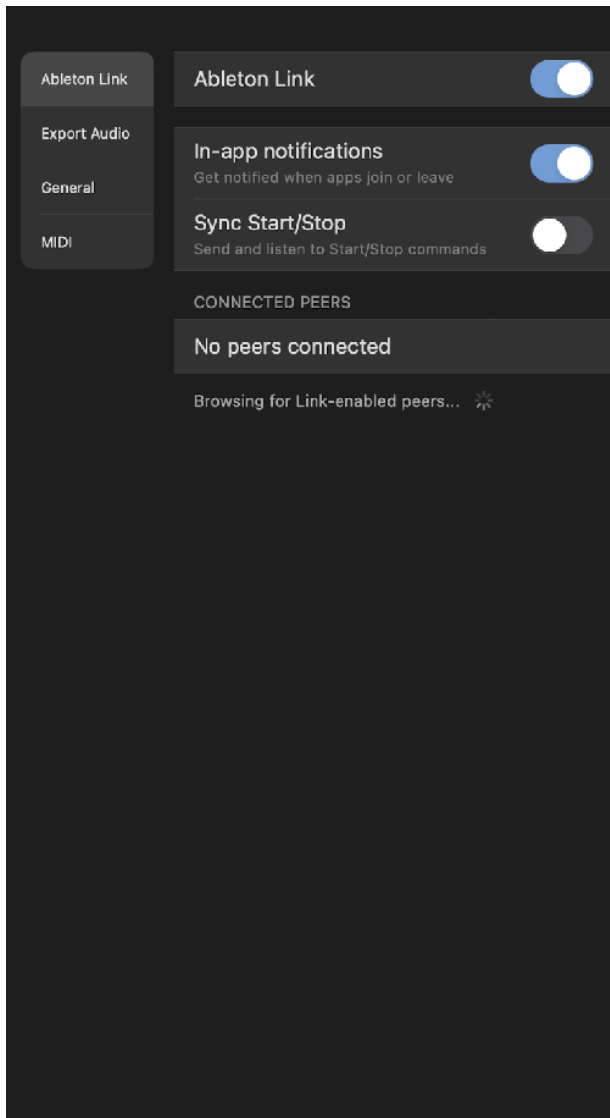

Ableton Link is a new technology that synchronizes beat, phase and tempo of Ableton Live and Link-enabled iOS apps over a wireless network. It lets you play devices together with the freedom of a live band. Anyone can start and stop their part while others keep playing, and anyone can adjust the tempo and the rest will follow. You can use Link to play with several instances of Ableton Live, with Live and iOS apps, or even without Live in your setup: using Link-enabled apps on multiple devices, or multiple apps on the same device.

Ableton Link

Switch on to enable Ableton Link.

In-app notification

Switch on to displays a message when an Ableton Link enabled app is connected.

Sync Start/Stop

Switch on to synchronize start and stop with connected apps.

Connected Apps

Indicate number of currently connected apps.

Ableton Link requires Wireless Local Network Connections. Your device and other Link-enabled devices must be connected to the same local network.

Export Audio

FILE

export-2026-06-11-16-59-36

Location local ↕

Documents/VAPolyMod/Export/

LENGTH

Bar Length: 16 bars — +

AUDIO SETTING

File Type AIFF ↕

Sample Rate 44100 Hz ↕

Bit Depth 24 Bit ↕

Cancel Export

Save As

Specify name of the audio file to export.

Location

Select location for the audio file to be stored. Options are Local or iCloud.

Length (Bars)

Length of the audio to be recorded. Specify the length by number of bars.

File Type

Select file type of the audio file. Options are AIFF, WAV, CAF and ACC.

Sample Rate

Select a sample rate of the audio file. Options are 44.1KHz, 48KHz, 88.2KHz and 96KHz.

Bit Depth

Specify bit depth of the audio file. Options are 16 bit, 24 bit and 32 bit.


Export

Tap export to export audio file.

Cancel

Tap cancel to return to the home page of the setting panel.

General

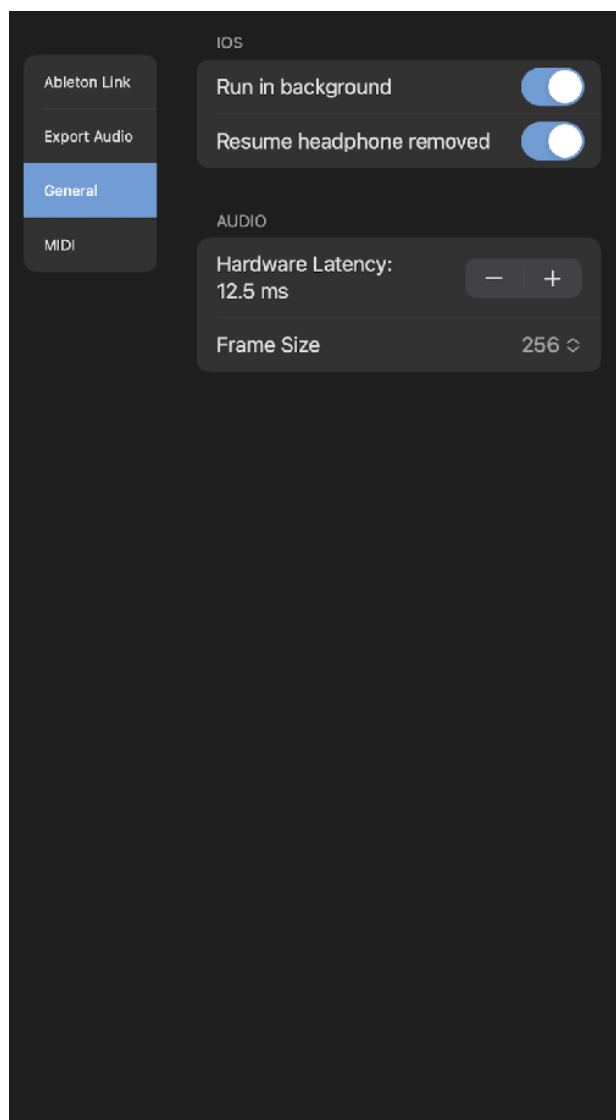

Run in Background

Turn this switch on to allow app to play continuously when the app enters in the background.

Resume Headphone Removed

Turn this switch on to allow app to play continuously when headphone is disconnected.

Hardware Latency

When Ableton Link is enabled, playback is synchronized to the Link-enabled devices. If there is a latency, output signal may not be aligned with the beginning of the each step.


In order to adjust the latency, set time in milliseconds in Hardware Latency. This value is used to compensate the latency of the output signal.

The latency varies on audio Interface and sample rate. Default value is 12.5 millisecond (sample rate is 44.1KHz)

Frame Size

Frame Size (Buffer Size) is a number of samples contained in an audio buffer. Higher frame size increases system performance but increases latency. Lower frame size decrease latency but decreases system performance. If you experience a problem with system performance, set higher frame size to improve the performance. Default setting is 256.

MIDI

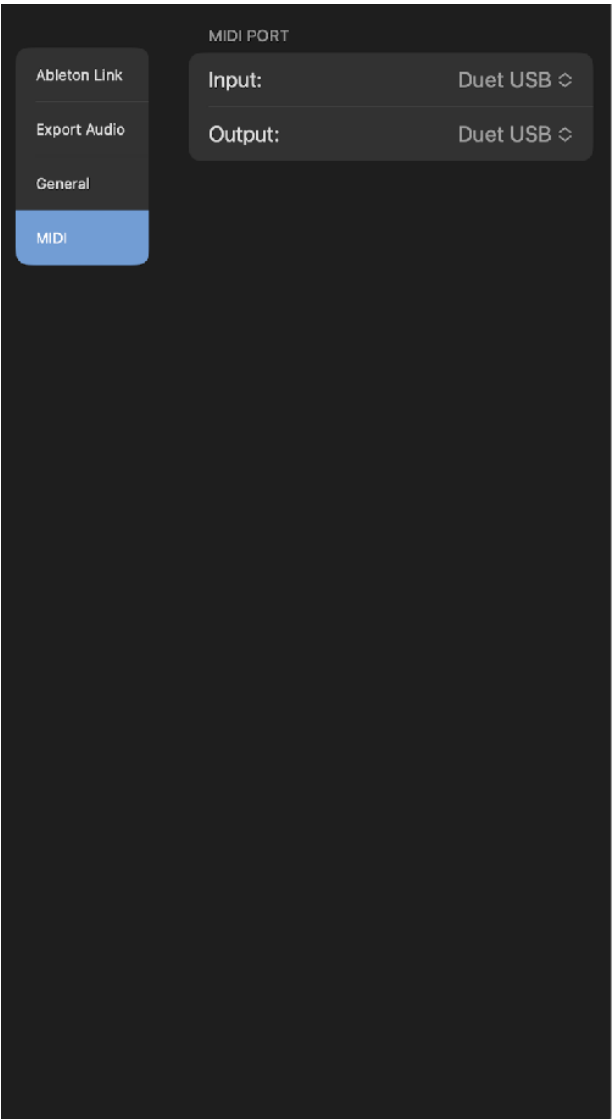

Input


Select MIDI input port

Output

Select MIDI output port


Bluetooth (BLE) MIDI

Central

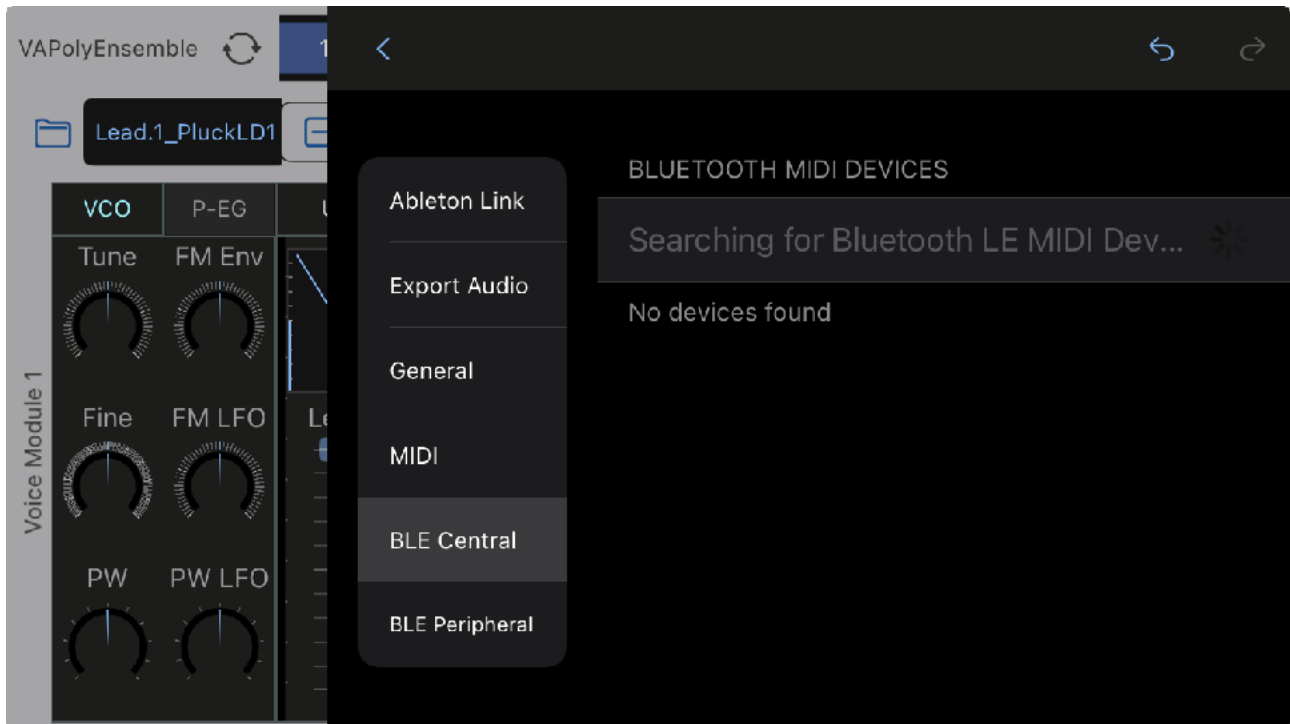

Open Bluetooth MIDI Central, which list available bluetooth devices. Select a name to connect to the device.

Peripheral

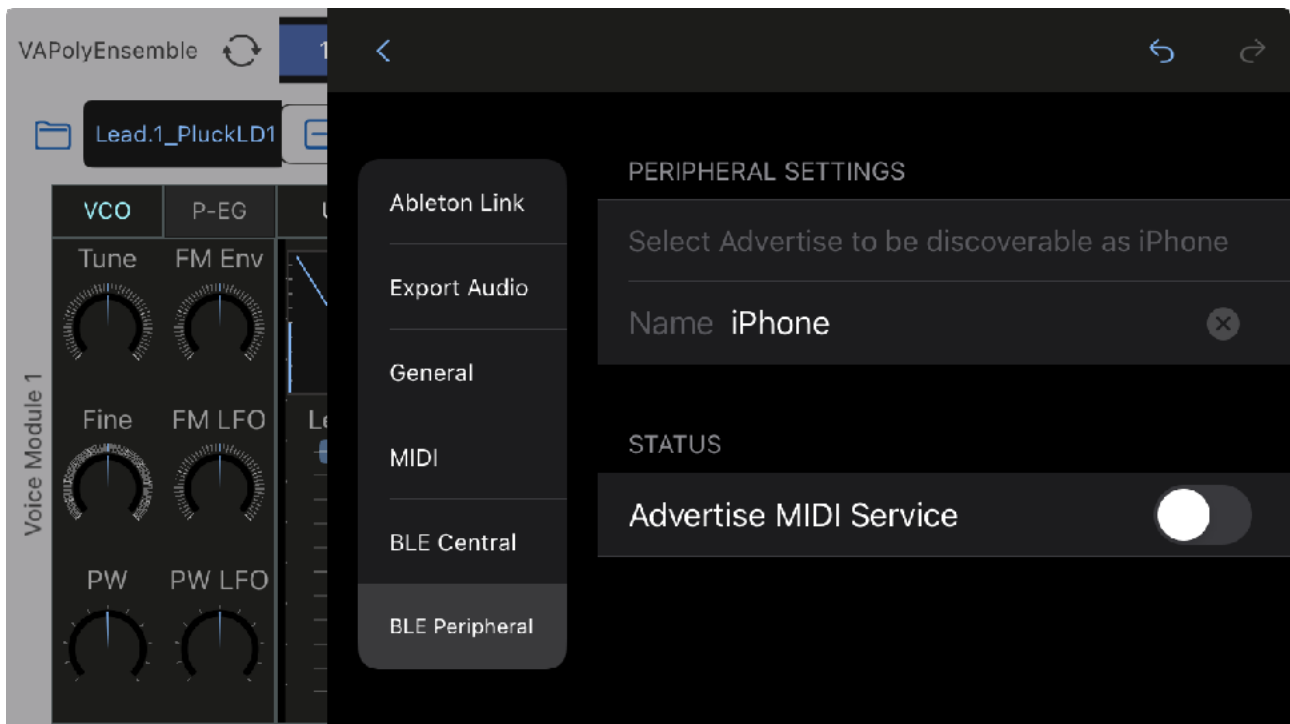

Open Bluetooth MIDI Peripheral. Turn Advertise MIDI Service switch on to makes the device to be discoverable from the other Bluetooth MIDI devices.

Export Audio

Prepare for exporting audio

1. Stop playback

Make sure the playback is stopped.

2. Select the first clip to play

Open clip editor and select a clip which should be played at first.

3. Turn off metronome

Make sure that metronome is turned off.

Adjust export settings

1. Save As

Type in file name if necessary.

2. Length

Set total length of the recordings by number of bars. This length should include the length of the delay or reverb tail.

3. Location

Select location to save the file. Options are local and iCloud.

4. File Type

Select a file type. Options for linear PCM format are AIFF, WAV or CAF. For compressed audio file, choose AAC. If the exported audio file is going to be edited in a different application, it is recommended to choose linear PCM format.

5. Sample Rate

Select sample rate. Options are 44.1KHz, 48KHz, 88.2KHz and 96KHz.

6. Bit Depth


Select bit depth. Options are 16 bit, 24 bit and 32 bit. Higher number results in better quality. If the exported file is going to be used in a different application, make sure that the which bit depth of the selected file type is supported by the application. (* 32 bit may not be supported in some applications).

Export Audio File

Tap export button to generate audio file and save the file in the specified location. When exporting the file is completed, browser can be open to audition the exported file.

Map MIDI CC

Tap “Map MIDI CC” in “MIDI Global” of the setting panel to show MIDI CC Map View. Use “Synth” button in tool bar to select a synth section or effects to map MIDI CC. Tap “Hide MIDI CC” in “MIDI Global” of setting panel to close MIDI CC Map View.

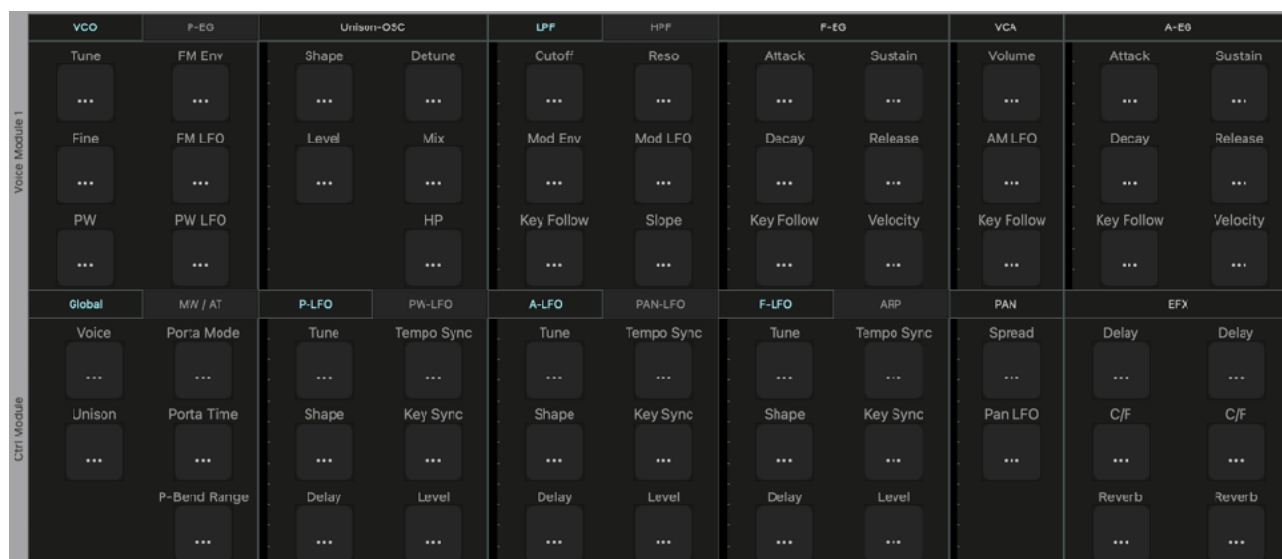

To make a MIDI CC (Continuous Controller) assignment, Tap a button then turn a knob on MIDI controller. The first MIDI CC number detected will be assigned to the parameter.

When CC is assigned, the button shows the CC number.

To cancel the assignment or to remove the mapping, tap the button.

To remove all assignments, select “Rest MIDI CC Map” in MIDI Global of the setting panel.

All the MIDI CC assignments are restored when app is launched in the next time.

Override Automation

When a parameter is controlled by MIDI controller, it is not possible to automatically override automation. To override, turn off automation switch of the parameter or turn the dial of the parameter on screen that will stop the automation and the parameter can be controlled freely by MIDI controller.

MIDI Program Change

Program Change is received as following.

Factory: Bank (CC#0) = 0, Sub (CC#32) , Preset Number = Sub * 128 + Program
 Plugin: Bank (CC#0) = 1, Sub (CC#32) , Preset Number = Sub * 128 + Program

Presets stored in iCloud Drive can't be selected by the MIDI program change.

Use External MIDI Keyboard with Stand Alone

1. Open host setting
2. Select MIDI from side bar menu. Set input MIDI port and output MIDI port.
3. Close host setting
4. Select MIDI Synth1 from side bar menu. Make sure “Receive” switch is turned on. Adjust channel and note range.
5. To stop hanging note, select MIDI Global from side bar menu, Tap on “All Note Off”.

Use MIDI Foot Pedal

CC#11 and CC#64 are supported for MIDI Foot Pedal. Targets of Expression can be selected in KBD Control Routing Panel. Sustain switch can be used to sustain currently played note.

Undo / Redo



1. Tap Undo / Redo button. Tap Undo to undo previous operation. Tap Redo to redo previous undo operation.

* Some operation such as play, stop or record are excluded from undo / redo operation.

* On macOS, turn on “Musical Typing” to enable keyboard shortcut, command + z for undo and shift + command + z for redo.

macOS


Stand Alone on macOS supports menu bar, keyboard shortcuts, context menu and touch bar.
AUv3 plug-in on macOS supports keyboard shortcuts and context menu.

Menu Bar



Application


Open a window to display version information.

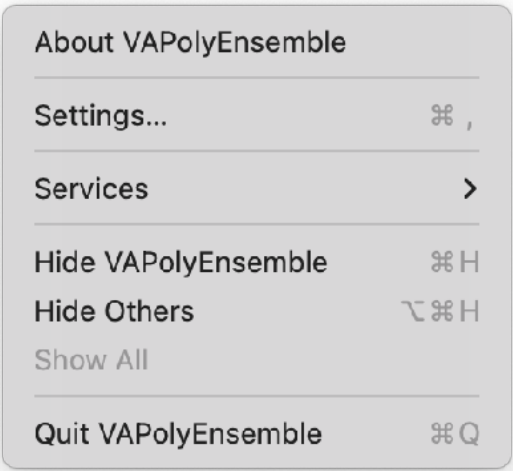

Open Preference window.

Quit this application.

File

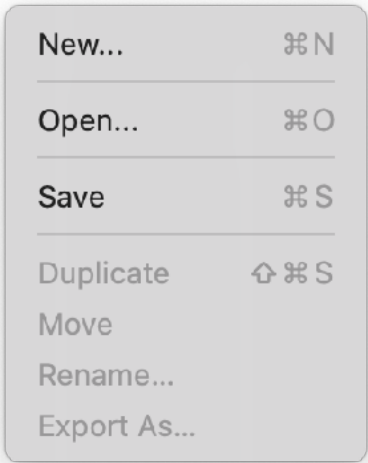


Reset all parameters and sequence data.

Open a preset from iCloud drive.


Save a preset to iCloud drive.

Edit

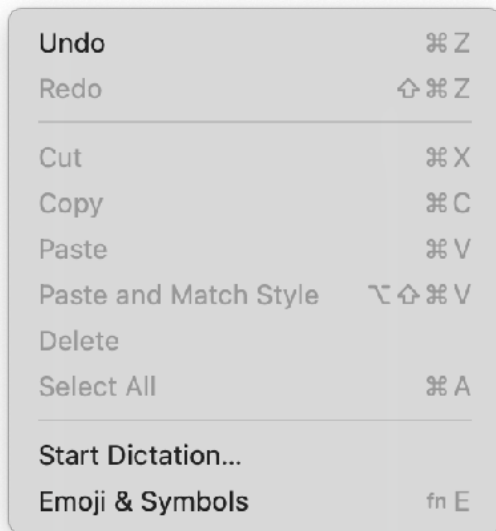


Edit Commands are enabled when typing text.

 View



Enable/disable full screen mode.

 Export




Open Export Audio Page in Setting Panel.


Window



 Help




Preference

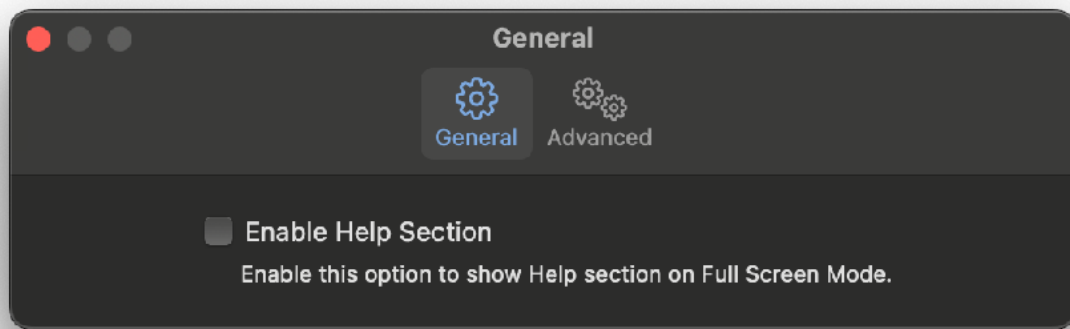

Enable Help Section


Enable this option to show Help Section on Full Screen Mode.

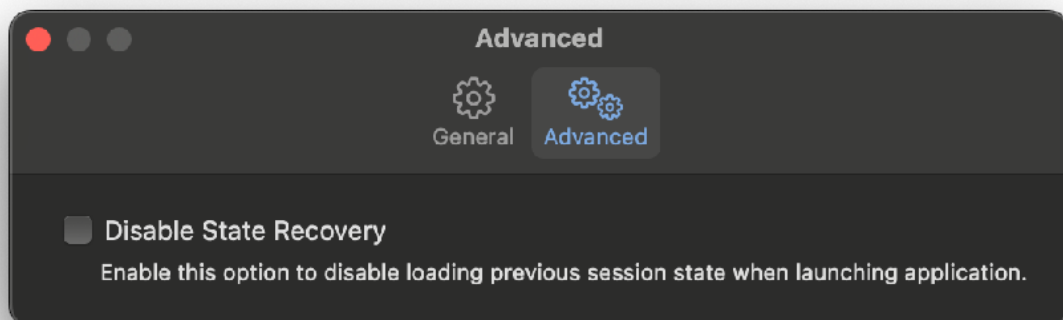

Disable State Recovery

When application is launched, state of the previous session is automatically loaded by default. Check this option to disable state recovery, so the application always start in default state.

Touch Bar (MacBook Pro)

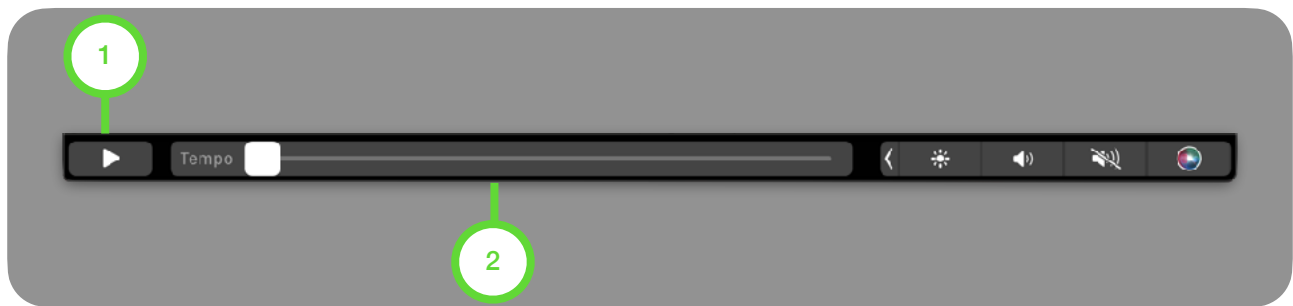

1. Play / Stop


Tap to play / stop sequencer

2. Tempo


Adjust tempo. Range of the slider is from 20 BPM to 240 BPM.

Use Computer Keyboard as MIDI Keyboard

Enable Musical Typing option in setting.

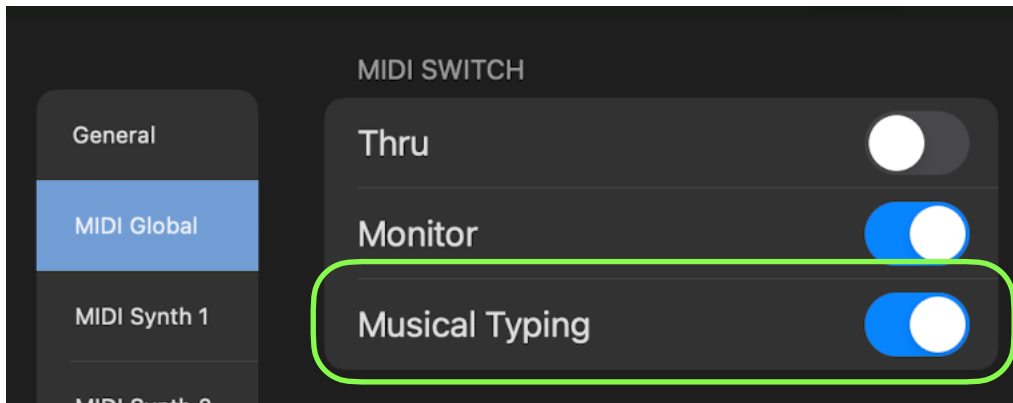

Keys are mapped as shown in the figure below.

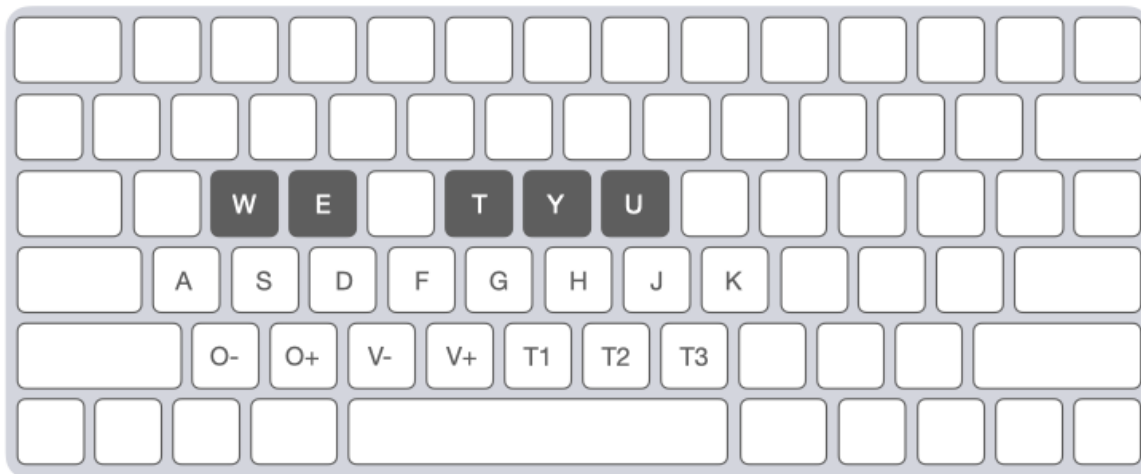

Change Octave

[O-] Press Z key to select one octave below.
[O+] Press X key to select one octave above.

Change Velocity

[V-] Press C key to decrease velocity.
[V+] Press V key to increase velocity.

Set Timbral

[T1] Press B key to select Layer.
[T2] Press N key to select Synth1.
[T3] Press M key to select Synth2.

Keyboard Shortcut

Command	Key	AUv3	Note
New	Command-N	N/A	
Open	Command-O	N/A	
Save	Command-S	N/A	
Undo	Command-Z	✓	
Redo	Shift-Command-Z	✓	
Cut	Command-X	✓	Available for Text Input
Copy	Command-C	?	
Paste	Command-V	?	
Delete	Command-Delete	?	
Select All	Command-A	?	
Enter/Exit Full Screen	fn-F	N/A	
Play/Stop	Space	?	
Change Focus	Tab	?	
List Up	Arrow-Up	?	
List Down	Arrow-Down	?	
List Select	Enter	?	


? : (AUv3) Availability is depends on the host application, which can disable these functions.

* Some of the keyboard shortcut will be available in the future version update.


AUv3 on Apple Garage Band (Mac)

Load Plug-in


1. Launch GarageBand.
2. Choose a project dialogue window appears. Select a project and click on Choose.

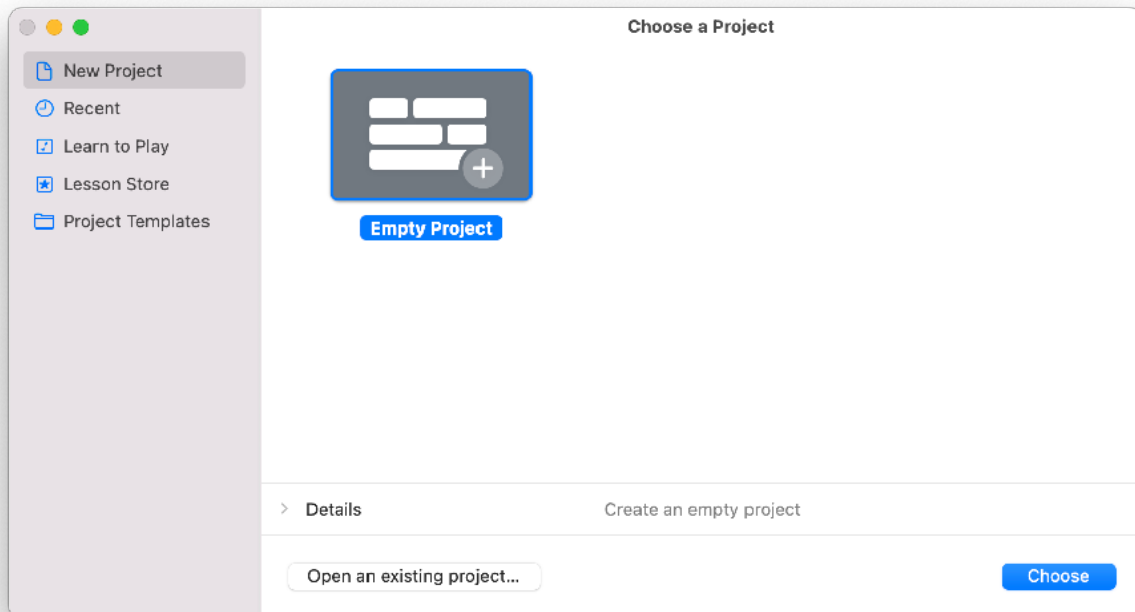


3. Choose a track type dialogue appears. Select Software Instrument and click Create.

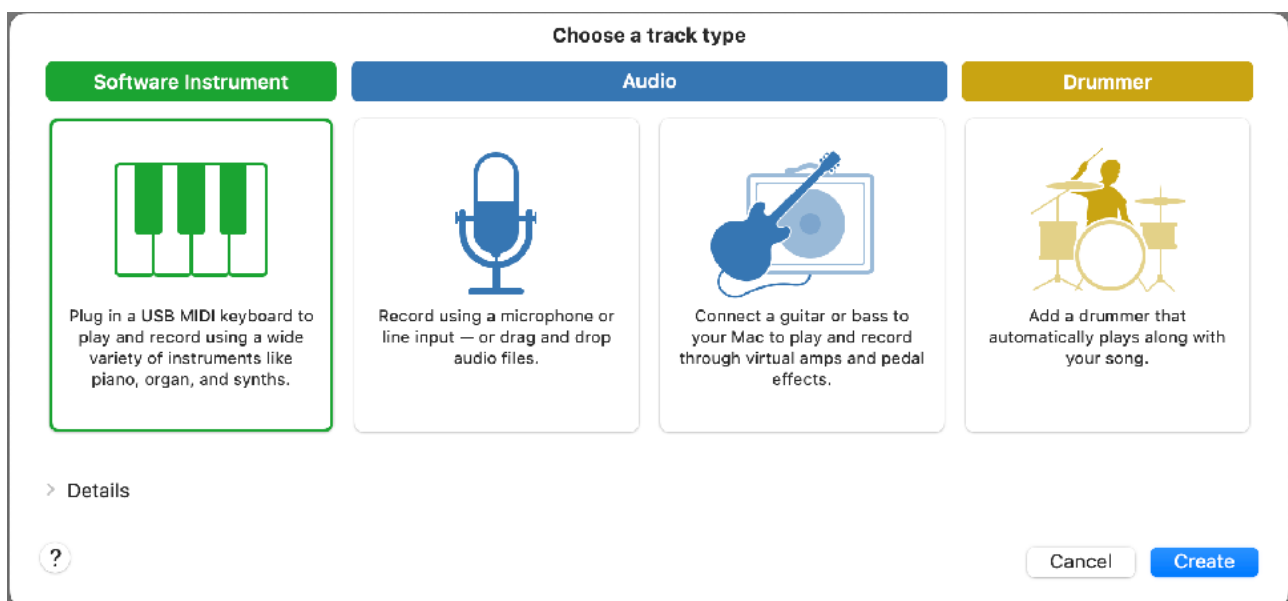


4. Click Plug-ins in Track Section.

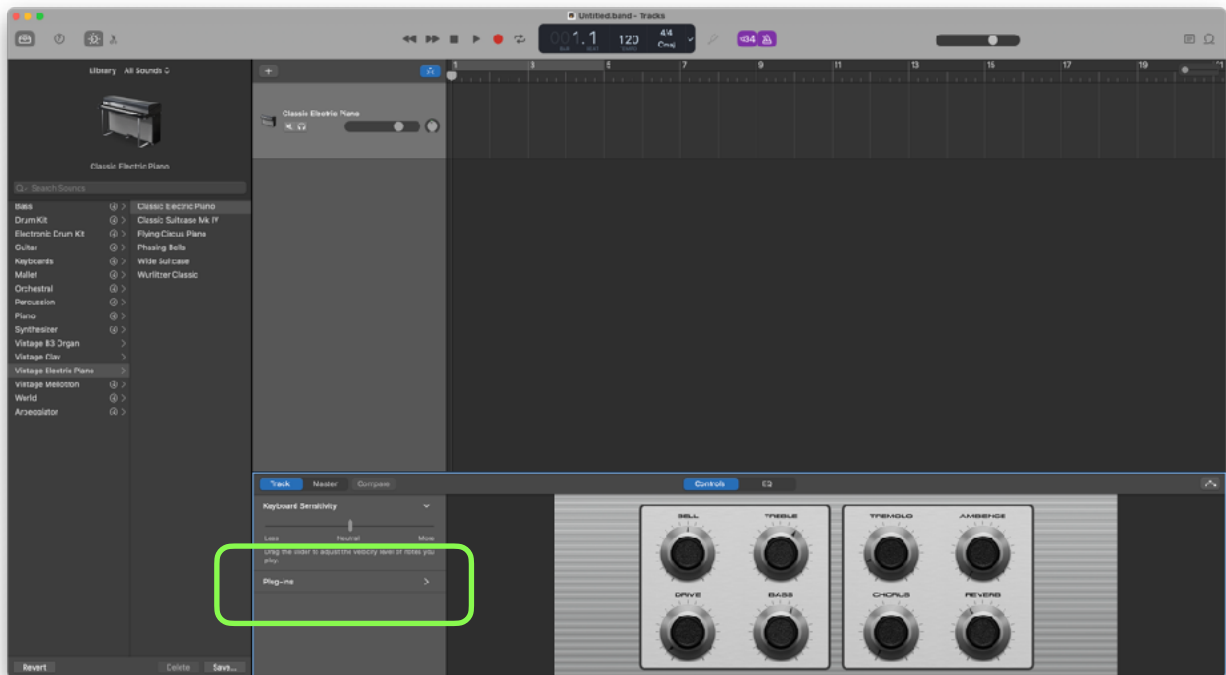


5. Click arrows at the right side of the blue button “E-Piano”.

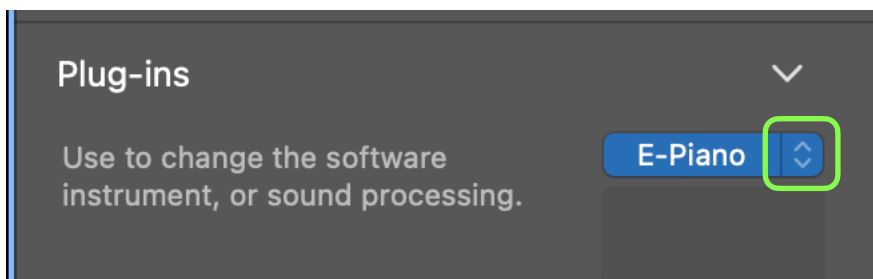

6. Select AU Instruments > RTMS > VAPolyEnsemble

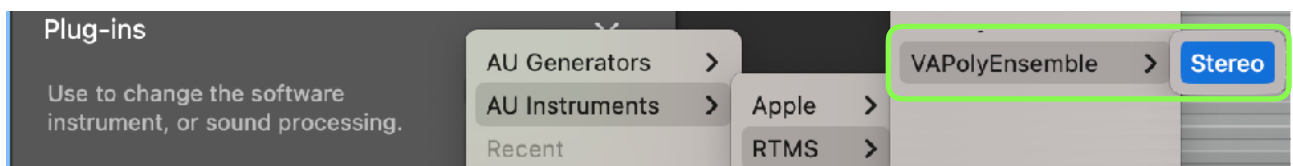

7. If plug-in window doesn't displayed. Tap blue button.

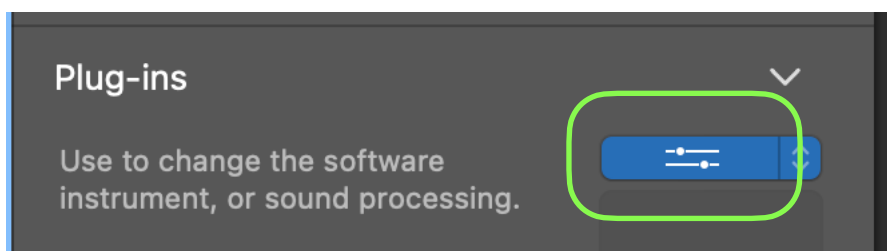

Activate Plug-In

After loading VAPolyEnsemble or opening a project file, DSP engine of VAPolyEnsemble may not be running.


In order to start the DSP engine, please do one of the followings.

- Press Play button on GarageBand.
- Play MIDI notes from GarageBand.

To play midi note by computer keyboard, select “Window > Show Musical Typing” from menu bar of the Garage Band. While the Musical Typing window is displayed, type A for note C.

Offline Renering

To start Offline Rendering on Apple Garage Band, select Cycle Range and select “Share > Export Song to Disk” from menu bar of the Garage Band. Selected Cycle Range will be rendered.

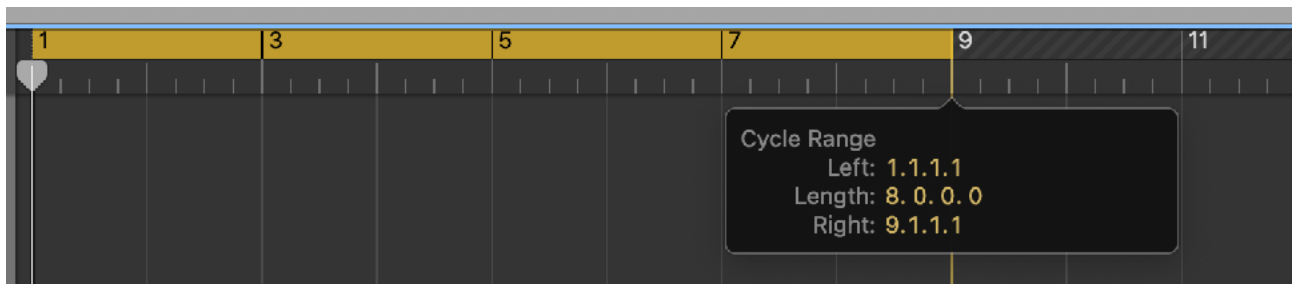

The followings are a few tips for offline rendering on Apple Garage Band.

- Make sure to save your project before performing offline rendering.
- Audition before initiating offline rendering. In order to perform offline rendering, DSP engine of VAPolyEnsemble needs to be running. Please press play on GarageBand and make sure that DSP engine is running.
- If you are using clips, add an empty clip at the end and set the length to INF. Garage Band will stop rendering when audio level is dropped to inaudible level. This helps to record tail of the delay or reverb effect.


Known Limitations

- DSP Engine doesn't start until a user presses play button or play MIDI notes on GarageBand.
- Touch Bar shows blanc screen when showing button menu or context menu.
- GarageBand doesn't record MIDI notes from keyboards or sequencer of the VAPolyEnsemble plugin.


AUv3 on Apple Garage Band (iOS)

Load Plug-in


1. Launch Garage Band
2. Create a new song

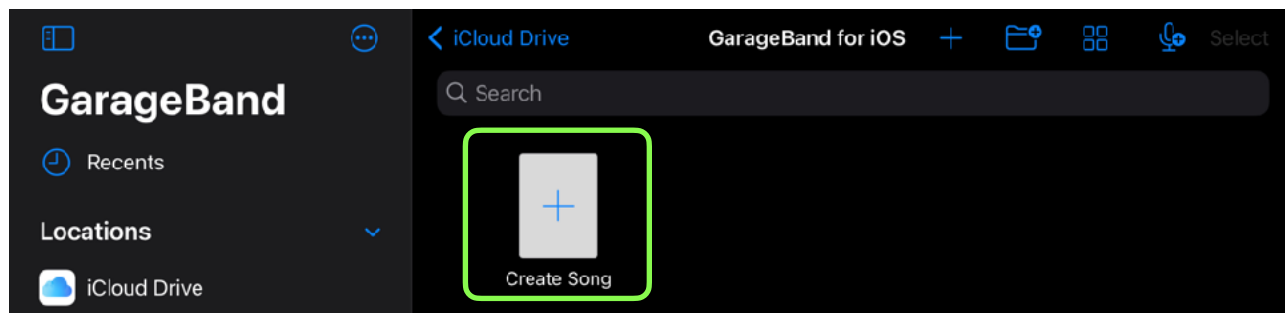

3. Select External > Audio Unit Extension

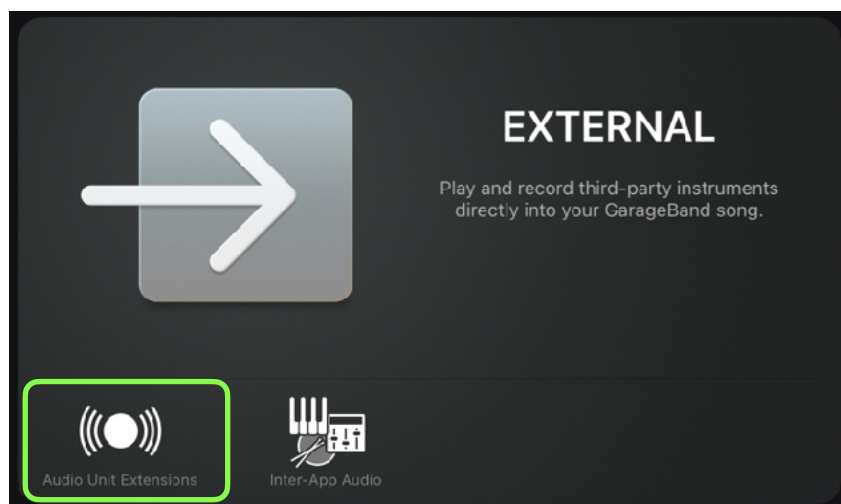

4. Select VAPolyEnsemble

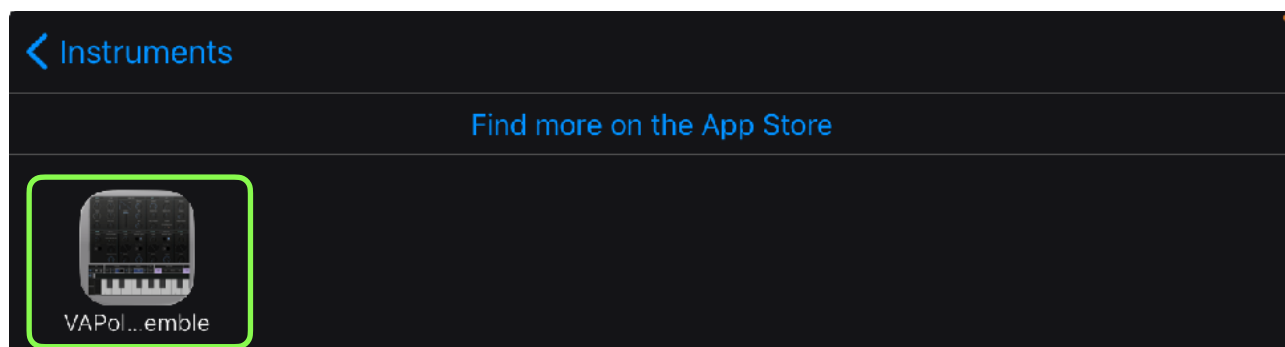

Change Plug-in Window Size

Tap arrow icon to resize the plug-in window.




Record Notes


Tap record button and play keyboard.



Edit Notes

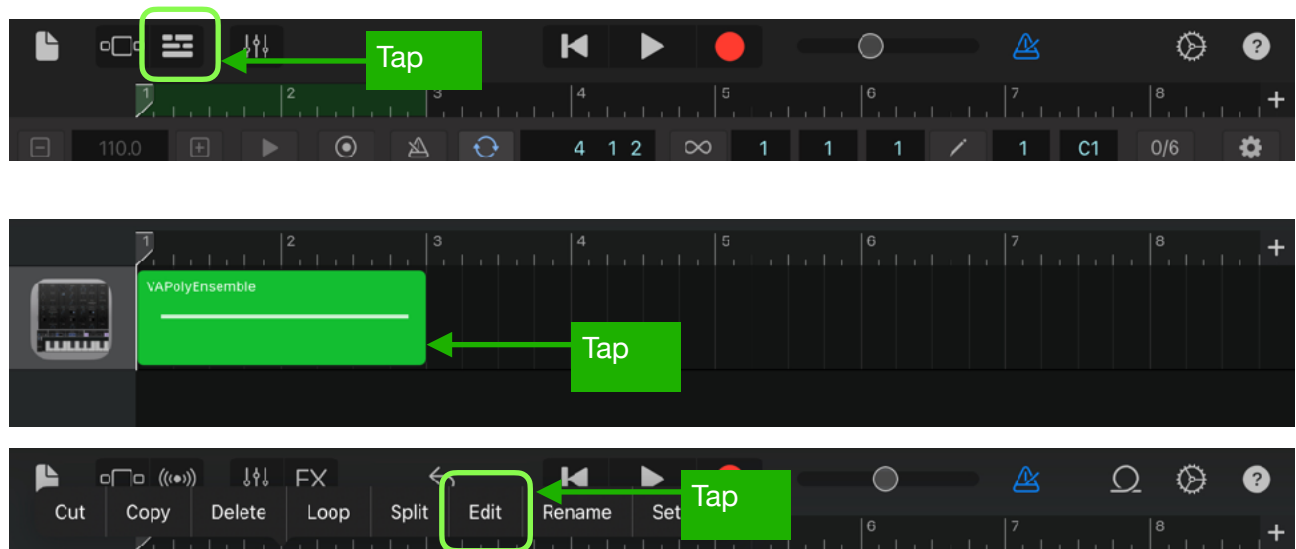


Select Edit from menu and edit notes. Tap “Done” to close the window.

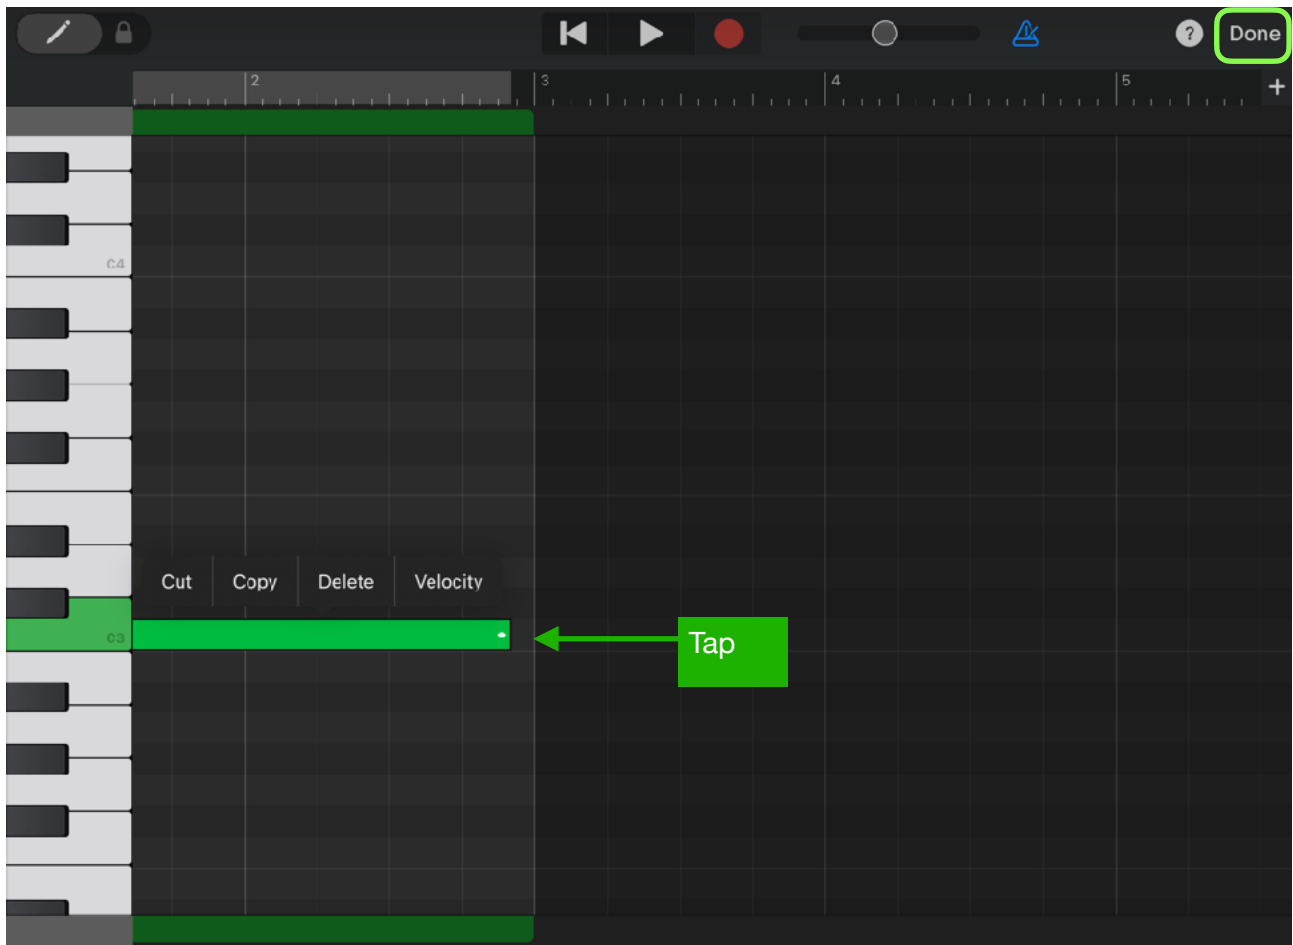


Save Project

Tap document icon to save the song.

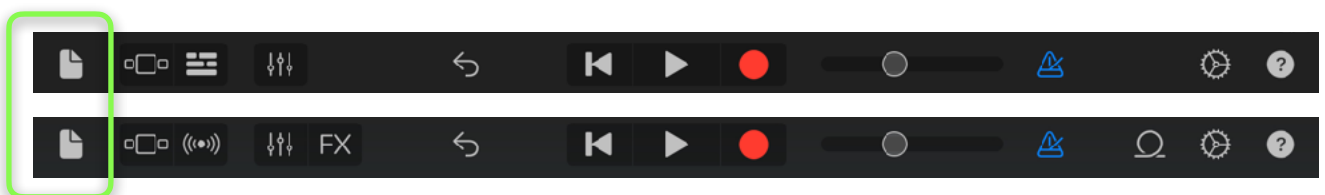


Host Sync

 Tap Host Sync button to sync transport and tempo to host application.



 To disable transport sync, tap and hold sync button and select “Disable Transport Sync” from menu.



System Interruptions (iOS)

It is important to aware that system may interrupt playback in the following situations. Please make sure to test and make a plan to handle the situations.

1. Incoming calls or activating Siri

When receiving an incoming call or when activating Siri, it interrupts playback and send App to background. In order to avoid it occurs, turn off the followings in the Setting App.

- Do Not Disturb > Do Not Disturb > turn on.
- Siri & Search > Listen for “Hey Siri” > turn off.
- Siri & Search > Press Home for “Siri” > turn off.

2. Connecting or disconnecting a headphone

Headphone output has own DAC⁵ and own sample rate. The sample rate may be different form the sample rate of the audio engine. What will happens when connecting or disconnecting a headphone depends on the sample rates.

If the sample rates are same, playback continues when headphone is connected. When headphone is unplugged, playback will stop. You can change this behavior by turn Resume when headphone is unplugged on in Settings.

If sample rates are different, when connecting headphone or when disconnecting headphone stops playback and system will re-configure audio engine for the new sample rate.

The sample rate of the audio engine is set by an application or an audio interface. For example, when connecting an iOS device to Mac using a cable that came with your device, Inter Device Audio and MIDI on macOS uses 44.1KHz but Quicktime player app on macOS uses 48KHz.

If you are planning to connecting or disconnecting headphone for monitoring during playback, please make sure to test and learn what will occurs.

3. Changing sample rate setting

As described above, if sample rate of the audio engine is changed for any reasons, playback stops.

4. Media Reset

Under rare circumstances, the system terminates and restarts its media services daemon. When it occurs playback stops.

5. Pressing the Home button or sending App to background

When app is sent to background by pressing home button, showing notification center or any other reasons, playback stops. You can change this behavior by turn Run in Background on in Settings.

Additional Settings

Followings are other settings in the Settings App which you may want to adjusted.

- Display & Brightness > Auto-Lock > set to Never
- Sounds > turn off all system sound
- Notifications > Show Previews > set to Never
- Home Screen & Dock > Multitasking > Gestures > turn off

If you have installed apps that may send you a notifications or may interrupt playback, make sure to adjust settings of the apps to disable the functions.

If you are using Ableton Link, make sure that Local Network in Privacy is turned on. If you are using Bluetooth MIDI, make sure that Bluetooth in Privacy is turned on.

⁵ Digital to Analog Converter

Specification

Synthesizer

- Polyphonic Synthesizer

Unison Oscillator

- Seven continuously variable wave shape (triangle, sawtooth, square)
- Pulse width for square
- Tuning +/- 24 semitones
- Fine tuning +/- 50 cents
- Frequency Modulation (Exponential) +/- 4 octaves
- Pulse Width Modulation
- Detune of seven oscillators
- Mix of seven oscillator outputs
- Mix of high pass output signal and dry signal.

PAN

- Pan modulation: LFO

Stereo Filter

- Low pass filter: -12 dB per octave, -24 dB per octave
- High pass filter: -12 dB per octave
- Frequency modulation: ADSR, LFO, Key Follow

Stereo Amplifier

- Envelope: ADSR
- Amplitude modulation: LFO

LFO

- Wave shape: sine, saw, down saw, square, triangle, random
- Frequency Range: From 0.04Hz to 42.2Hz

ADSR Envelope

- Attack time: From 1ms to 6 sec
- Decay time: From 1ms to 10 sec
- Sustain level: From 0 to 100%
- Release time: From 1ms to 10 sec
- Delay time: From 0ms to 10 sec
- Key Follow: From 100% to 25% (envelope length)

Portamento (Glide)

- Time: From 10 ms to 10 second

Step Sequencer (Analog Style)

- 8 Steps
- Sample & Hold
- Clock Frequency: From 1 Hz to 20 Hz

Controllers

- Modulation Wheel, Pitch Bend Wheel, Ribbon Control

Effects

- Delay, Chorus, Flanger, Reverb, EQ and Compressor

Sequencer (Piano Roll)

- Steps: 16 steps per bar
- Loop Length: from 1 bar to 16 bars
- Clip: 8 clips

- Tempo: from 20 BPM to 999 BPM
- Host Sync: On and Off

Delay

Delay Time	Range from 20ms to 1200ms
Feedback	Range from 0% to 100%
Highpass Filter	Range from 20Hz to 500Hz
Lowpass Filter	Range from 1000Hz to 20000Hz
LFO Frequency	Range from 0.01Hz to 10Hz
LFO Intensity	Range from 0.0 to 1.0 (from 0ms to +/- 10ms)
Effect Switch	ON or OFF
Sync Switch	ON or OFF
Frequency Range	From 0Hz to 22.05KHz (effect)

Chorus / Flanger

Delay Time	Range from 1ms to 40ms (chorus), from 1ms to 13ms / 20ms (flanger)
Feedback	Range from 0% to 100% (flanger)
Highpass Filter	Range from 20Hz to 500Hz
Lowpass Filter	Range from 1000Hz to 20000Hz
LFO Frequency	Range from 0.01Hz to 10Hz
LFO Intensity	Range from 0.0 to 1.0 Chorus: from 0ms to +/- 1ms Flanger: from 0ms to 12ms / 19ms / 39ms
Effect Switch	ON or OFF
Sync Switch	ON or OFF
Effect Selector	Chorus or Flanger
Frequency Range	From 0Hz to 22.05KHz (effect)

Reverb

Input lowpass filter	Range from 1KHz to 20KHz
Input high-pass filter	Range from 20Hz to 500Hz
LFO Frequency	Range from 0.01Hz to 10Hz
LFO Intensity	Range from 0.0 to 1.0
Pre Delay	Range from 1ms to 100ms
Size	Range from 0% to 100%
Auto Size Mode	ON or OFF
Decay	Range from 0% to 100%

Damp	Range from 0% to 100%
Output Lowpass Filter	Range from 1KHz to 20KHz
Early/Late Mix	Range from 0% to 100%
Tempo Sync	ON or OFF
Effect Switch	ON or OFF

Equalizer

Low Shelving	Frequency Range	Range from 21Hz to 1092Hz
	Gain	Range from -INF to +12dB
	High Pass Filter response	12dB / Oct
Mid Peak / Notch	Frequency Range	Range from 151Hz to 2389Hz
	Gain	Range from -14dB to +14dB
	Bandwidth	1 octave
High Shelving	Frequency Range	Range from 296Hz to 21096Hz
	Gain	Range from -INF to +12dB
	Low Pass Filter response	12dB / Oct

Compressor

Input Gain	Range from -20dB to 20dB
Input High Pass Frequency	Range from 20Hz to 185Hz
Threshold	Range from -40dB to 0dB
Makeup Gain	Range from 0dB to 20dB
Ratio	2, 4, 10
Attack	0.01ms, 0.1ms, 0.3ms, 1ms, 3ms, 10ms, 30ms
Release	0.1s, 0.3s, 0.6s, 1.2s, Auto
Dry / Wet	Range from 0% to 100%

*Appearance and specification of the product are subject to change without notice.

Release Notes

What's new in version 1.0

- Initial release